Product Group: LIGHTING Model: ALL LIGHT TOWERS


This bulletin is provided for technical reference and service related updates. If you have any questions, comments or do not wish to receive these e-mails, please reply to this e-mail or call the Service Technical Support Group 800 478-1244.

T-BAR CORD O-RINGS


This document will direct the process for installing weather resistant O-rings to the light tower lamp power cord assemblies. In some cases the connection between the lamp power cord and light tower T-Bar mast has not provided sufficient weather resistance. To address these issues Multiquip has made a running production change effective immediately.

NO TOOLS REQUIRED

The following illustrations are provided for parts reference and general location

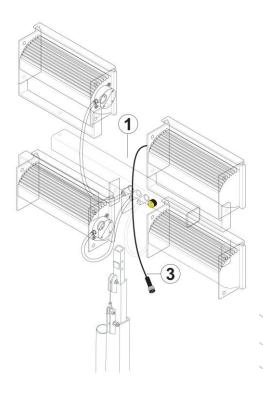

- 1. Light tower mast assembly
- 2. Lamp assembly MQ part # 29773
- 3. Lamp power cord MQ part # *150Z-E267*
- 4. T-Bar receptacle MQ part # 29168
- 5. O-Ring MQ part # 34822 Qty. (4) per unit

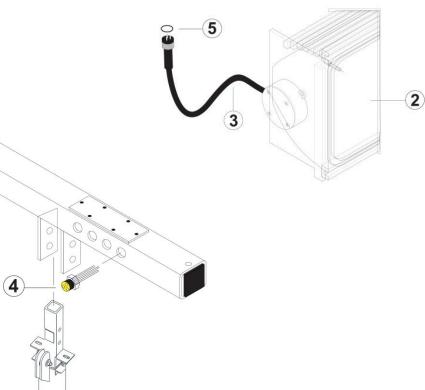

MULTIQUIP

Product Information

INSTALL DETAILS



SAE International – Size identification of O-Ring • "AS 568-115"

Place one O-ring into each of the cord coupling nuts located at the connection point on the T-bar and lamp power cord, Total of (4).



- Place the light tower on a level steady surface.
- o Place engine start key in the **OFF** position
- Lower the mast assembly to the stowed horizontal position so that easy reaching access can be made to the (4) cord coupling nuts.



- Unscrew and disconnect the lamp power cord from the T-bar
- o Gently pull the cord out of the T-bar receptacle



- Pull the coupling nut (B) down over the molded collar of the lamp power cord (A)
- Place the O-Ring over the molded collar of the lamp power cord into the coupling nut







Product Information

INSTALL DETAILS



- When placing the O-ring into coupling nut, ensure that it sits flush around the inside of the nut 360°
- Push the coupling nut over the molded collar of the lamp power cord



- Re-install lamp power cord back onto T-bar receptacle
- The coupling nut should be hand tight onto the Tbar receptacle
- Repeat this process for all (4)