
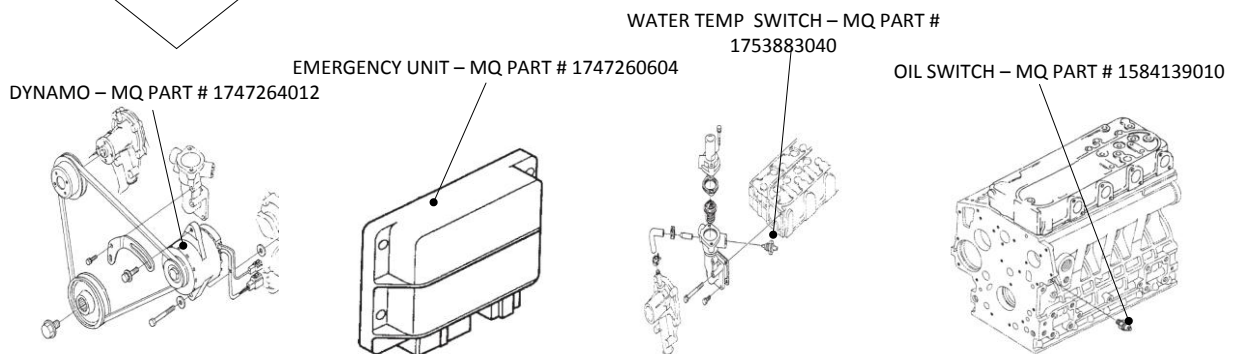


ENGINE SHUTS DOWN WITH LOAD / NO LOAD

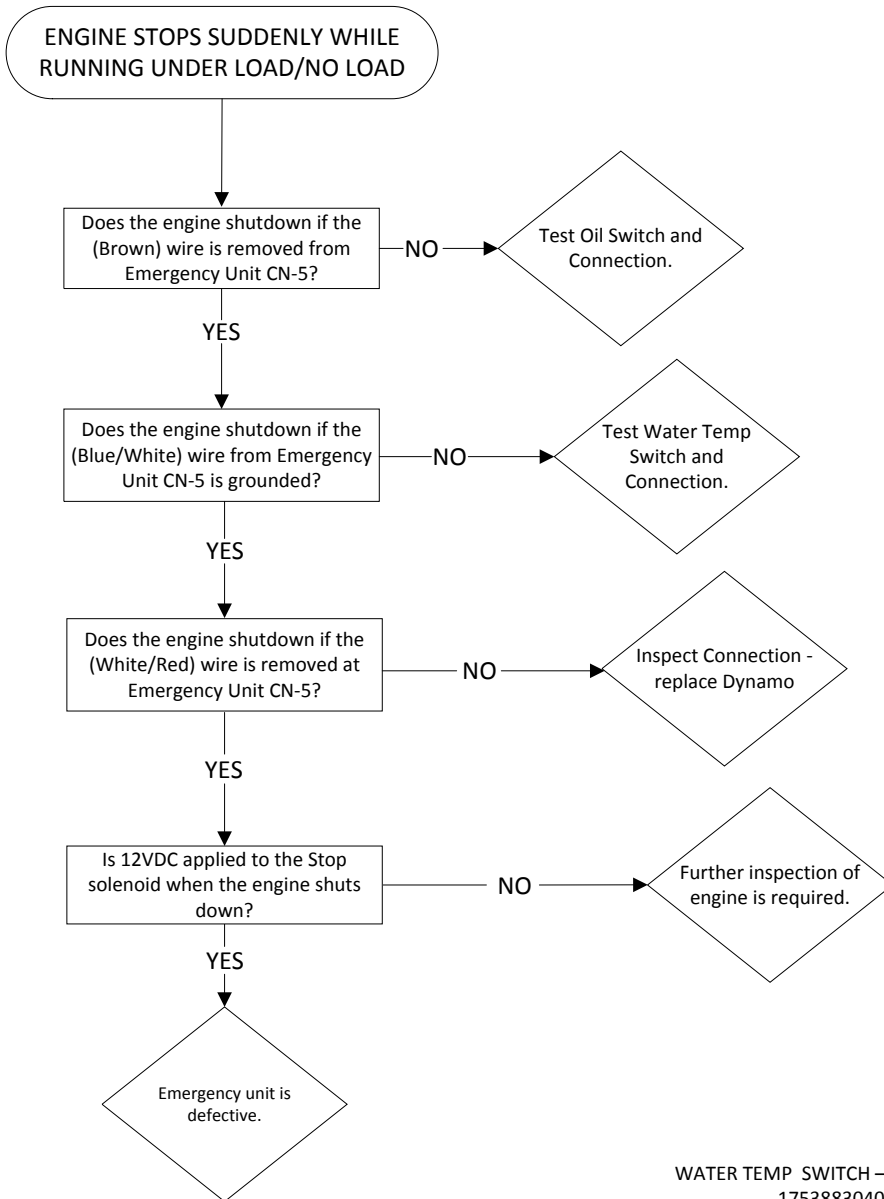

FROM DLW-400ES-ESA PARTS AND OPERATIONS MANUAL