

PARTS MANUAL



MODEL GDP-5H SERIES

**GDP-5H, GDP-5H1, GDP-5HA, GDP-5HANC
AND GDP-5HANC2**

**60/180 HZ GENERATOR
(HONDA GX340 GASOLINE ENGINE)**

REF. NO. A4874200504D/GDP5H1

REF. NO. A4874200804M/GDP5HANC2

Revision #4 (06/23/26)

To find the latest revision of this publication or
associated operation manual, visit our website
at: www.multiquip.com



TABLE OF CONTENTS

GDP-5H, GDP-5H1, GDP-5HA, GDP-5HANC AND GDP-5HANC2 60/180 Hz Generators

Explanation of Code in Remarks Column..... 4
Suggested Spare Parts 5

Component Drawings

Nameplate And Decals Assembly (GDP-5H/H1) .. 6-7
Nameplate And Decals Assembly (GDP-5HA) 8-9
Generator Assembly 10-11
Control Panel Assembly (GDP-5H/H1)..... 12-13
Control Box Assembly (GDP-5H1) 14-15
Control Panel Assembly (GDP-5HA)..... 16-17
Pipe Frame Assembly..... 18-21
Muffler Assembly 22-23
Engine Service Parts 24-25

NOTICE

Specifications and part numbers are subject to change without notice.

[illegible]

EXPLANATION OF CODE IN REMARKS COLUMN

The following section explains the different symbols and remarks used in the Parts section of this manual. Use the help numbers found on the back page of the manual if there are any questions.

NOTICE

The contents and part numbers listed in the parts section are subject to change without notice. Multiquip does not guarantee the availability of the parts listed.

SAMPLE PARTS LIST

NO.	PART NO.	PART NAME	QTY.	REMARKS
1	12345	BOLT	1	INCLUDES ITEMS W/%
2%		WASHER, 1/4 IN.		NOT SOLD SEPARATELY
2%	12347	WASHER, 3/8 IN. ...	1	MQ-45T ONLY
3	12348	HOSE	A/R	MAKE LOCALLY
4	12349	BEARING	1	S/N 2345B AND ABOVE

NO. Column

Unique Symbols — All items with same unique symbol (@, #, +, %, or >) in the number column belong to the same assembly or kit, which is indicated by a note in the “Remarks” column.

Duplicate Item Numbers — Duplicate numbers indicate multiple part numbers, which are in effect for the same general item, such as different size saw blade guards in use or a part that has been updated on newer versions of the same machine.

NOTICE

When ordering a part that has more than one item number listed, check the remarks column for help in determining the proper part to order.

PART NO. Column

Numbers Used — Part numbers can be indicated by a number, a blank entry, or TBD.

TBD (To Be Determined) is generally used to show a part that has not been assigned a formal part number at the time of publication.

A blank entry generally indicates that the item is not sold separately or is not sold by Multiquip. Other entries will be clarified in the “Remarks” Column.

QTY. Column

Numbers Used — Item quantity can be indicated by a number, a blank entry, or A/R.

A/R (As Required) is generally used for hoses or other parts that are sold in bulk and cut to length.

A blank entry generally indicates that the item is not sold separately. Other entries will be clarified in the “Remarks” Column.

REMARKS Column

Some of the most common notes found in the “Remarks” Column are listed below. Other additional notes needed to describe the item can also be shown.

Assembly/Kit — All items on the parts list with the same unique symbol will be included when this item is purchased.

Indicated by:

“INCLUDES ITEMS W/(unique symbol)”

Serial Number Break — Used to list an effective serial number range where a particular part is used.

Indicated by:

“S/N XXXXX AND BELOW”

“S/N XXXX AND ABOVE”

“S/N XXXX TO S/N XXX”

Specific Model Number Use — Indicates that the part is used only with the specific model number or model number variant listed. It can also be used to show a part is NOT used on a specific model or model number variant.

Indicated by:

“XXXXX ONLY”

“NOT USED ON XXXX”

“Make/Obtain Locally” — Indicates that the part can be purchased at any hardware shop or made out of available items. Examples include battery cables, shims, and certain washers and nuts.

“Not Sold Separately” — Indicates that an item cannot be purchased as a separate item and is either part of an assembly/kit that can be purchased, or is not available for sale through Multiquip.

SUGGESTED SPARE PARTS

GDP-5H SERIES A.C. GENERATOR WITH HONDA GX340 GASOLINE ENGINE


1 to 3 units

Qty.	P/N	Description
1.....	A2361000304	CAP FUEL TANK
1.....	A9924800004	FILTER FUEL
1.....	3015419604.....	SHOCK MOUNT
4.....	1665419004.....	SHOCK MOUNT
1.....	9807955846.....	SPARK PLUG
1.....	34150ZH7023.....	OIL ALERT UNIT
2.....	28462ZV7003.....	ROPE, RECOIL
2.....	17211899000.....	ELEMENT AIR CLEANER
2.....	28461ZE2W02.....	GRIP, STARTER

NOTICE

Part numbers on this Suggested Spare Parts list may supersede/replace the part numbers shown in the following parts lists.

GDP-5H/5H1 NAMEPLATE AND DECALS ASSY.

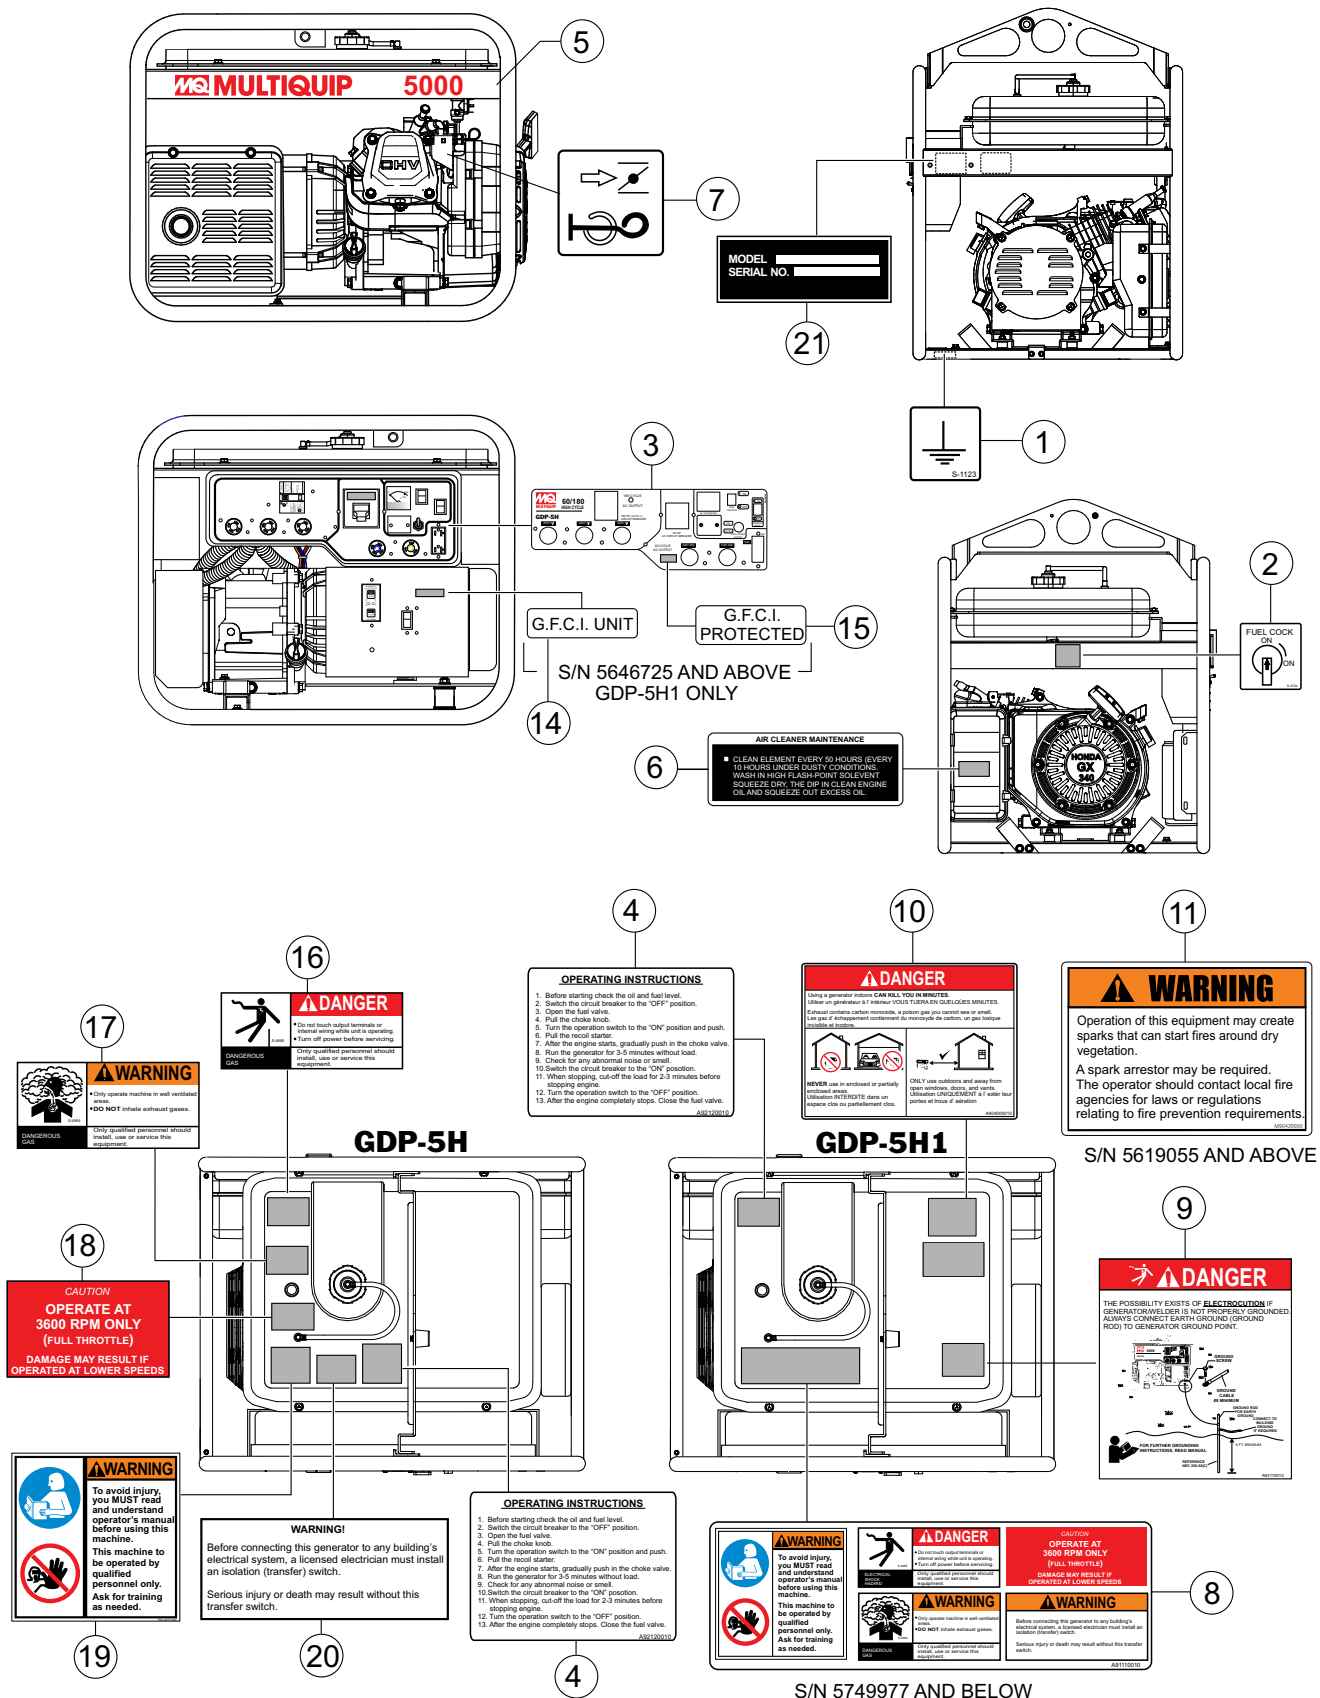

GDP-5H/5H1 NAMEPLATE AND DECALS ASSY.


<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	0800628504	DECAL; GROUND	1.....	S-1123
2	1980680004	DECAL; FUEL COCK.....	1.....	S-3704
3	A4511200102	DECAL; CONTROL PANEL	1.....	A41120010
4	A9521200104	DECAL; OPERATING INSTRUCTIONS	1.....	A92120010
5	A4561000103	DECAL; MQ MULTQUIP 5000		
6	87533ZC0630	DECAL; AIR CLEANER	1.....	REPLACES P/N 0600500045
7	87528898620	DECAL; CHOKE	1.....	REPLACES P/N 0600500047
8	A9511100103	DECAL; WARNING (GDP-5H1).....	1.....	A91110010 S/N 5749978 AND ABOVE
9	D9531100104	DECAL; DANGER ELECTROCUTION (GDP-5H1) ...	1.....	REPLACES P/N 9531100104 A93110010
10	A9504000014	DECAL; WARNING DANGER GAS (GDP-5H1)..	1.....	A90400001
11	952021400	DECAL; WARNING START FIRES (GDP-5H1)...	1.....	REPLACES P/N M9504200004 S/N 5619055 AND ABOVE M90420000 S/N 5822510 AND ABOVE S/N 5845291 AND ABOVE
14	A9521200504	DECAL; GFCI UNIT (GDP-5H1)	1.....	S/N 5646725 AND ABOVE
15	A9521002604	DECAL; GFCI PROTECTED (GDP-5H1)	1.....	S/N 5646725 AND ABOVE
16	8700611904	DECAL; DANGER ELECTRICAL SHOCK HAZ.1.....	1.....	S-4985 (GDP-5H)
17	8700611804	DECAL; WARNING DANGEROUS GAS	1.....	S-4984 (GDP-5H)
18	7900636004	DECAL; CAUTION OPER. AT 3600 RPM ONLY1	1.....	S-4461 (GDP-5H)
19	A9511100004	DECAL; WARNING (GDP-5H).....	1.....	A91110000
20	0820610404	DECAL; WARNING (GDP-5H).....	1.....	S-3627
21		NAMEPLATE	1.....	CONTACT MQ PARTS DEPT.



GDP-5HA NAMEPLATE AND DECALS ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	0800628504	DECAL; GROUND	1.....	S-1123
2	1980680004	DECAL; FUEL COCK.....	1.....	S-3704
3	A4511201302	DECAL; CONTROL PANEL	1.....	A41120130
4	A9521200104	DECAL; OPERATING INSTRUCTIONS	1.....	A92120010
5	A4561000303	DECAL; MQ POWER GDP-5H	1	
6	87533ZC0630	DECAL; AIR CLEANER	1.....	REPLACES P/N 0600500045
7	87528898620	DECAL; CHOKE	1.....	REPLACES P/N 0600500047
8	A9511100103	DECAL; WARNING	1.....	A91110010 S/N 5749977 AND BELOW
8	A9511100113	DECAL; WARNING	1.....	A91110011 S/N 5749978 AND ABOVE
9	D9531100104	DECAL; DANGER ELECTROCUTION.....	1.....	REPLACES P/N 9531100104 A93110010
10	A9504000014	DECAL; WARNING DANGEROUS GAS.....	1.....	A90400001
11	952021400	DECAL; WARNING STARTS FIRES	1.....	REPLACES P/N M9504200004 M90420000
12	A9511101304	DECAL; WARNING PROP. 65.....	1.....	A91110130 S/N 5822510 AND ABOVE
13	A9511101504	DECAL; CAUTION.....	1.....	A91110150 S/N 5845291 AND ABOVE
14	A5551003004	DECAL; CO SENSOR	1.....	S/N 50001081 AND ABOVE A55100300A
15	A9511101904	DECAL; EQUIPPED WITH CO SENSOR.....	1.....	GDP-5HANC, GDP-5HANC2 S/N 50001081 AND ABOVE A91110190
16		NAMEPLATE	1.....	GDP-5HANC, GDP-5HANC2 CONTACT MQ PARTS DEPT.


GENERATOR ASSY.

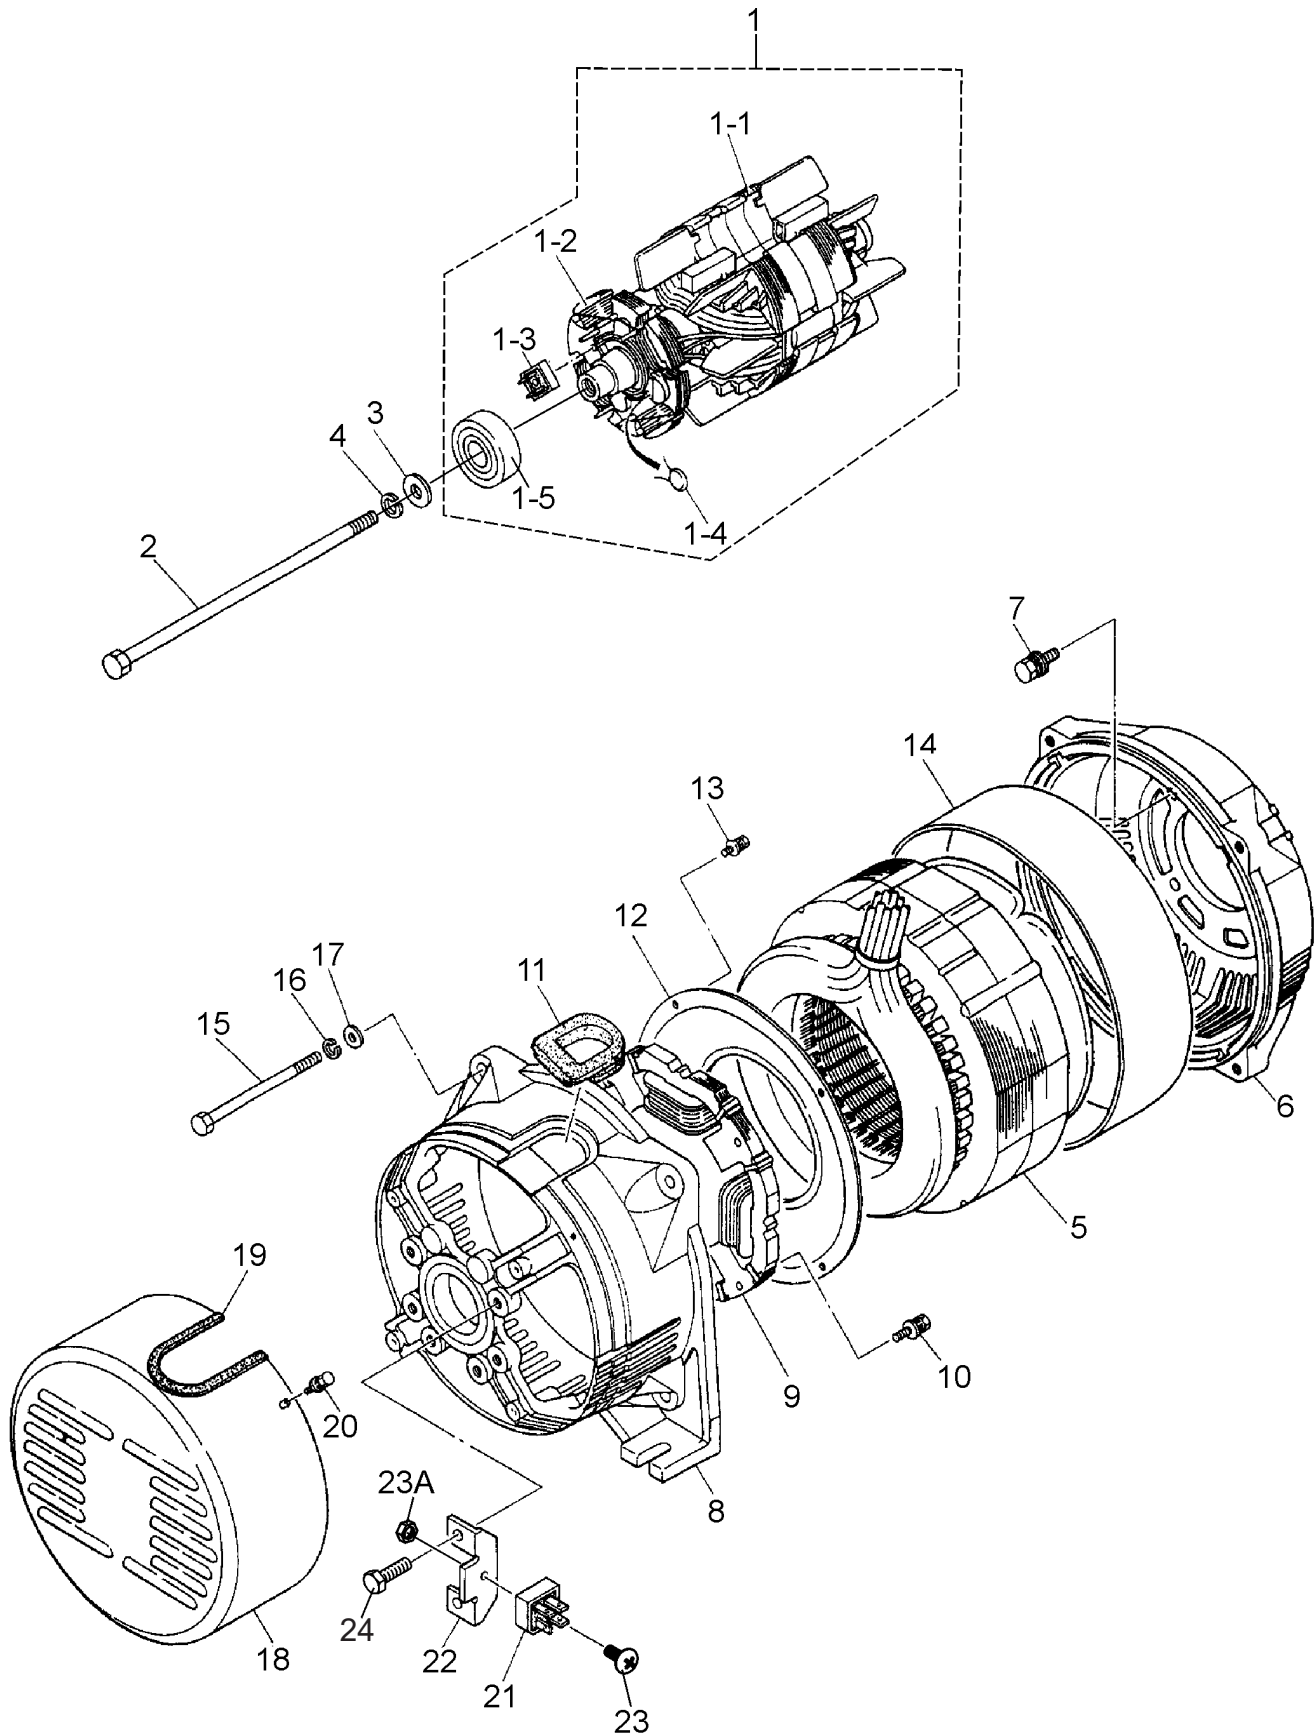

GENERATOR ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	7851000203	ROTOR ASSY.	1	INCLUDES ITEMS W/\$
1-1\$		FIELD ASSY.	1	
1-2\$		ARMATURE ASSY., EXCITER	1	
1-3\$	0601820037	RECTIFIER, S10VB60	1	
1-4\$	0601822640	SURGE ABSORBER, TNR15G471K	1	
1-5\$	0071206304	BEARING, 6304DDU	1	
2	7851017204	SET BOLT, ROTOR	1	
3	0801086104	SET WASHER, BEARING	1	
4	0040010000	WASHER, LOCK	1	
5	A4135000023	ARMATURE ASSY.	1	
6	7851315502	END BRACKET	1	
7	011008020	HEX. HEAD BOLT.....	4	REPLACES P/N 0017108020
8	A4154000002	END BRACKET	1	
9	A4138000003	FIELD ASSY., EXCITER	1	
10	011606025	HEX. HEAD BOLT.....	4	REPLACES P/N 0017106025
11	1961324003	GROMMET	1	
12	1961313003	GUIDE PANEL, AIR	1	
13	0011305100	HEX. HEAD BOLT.....	4	REPLACES P/N 0017105012
14	7851334204	COVER	1	
15	7851316804	SET BOLT, STATOR	4	
16	0040008000	WASHER, LOCK	4	
17	0401450080	WASHER, FLAT	4	REPLACES P/N 0041208000
18	7851331103	COVER	1	
19	0310300090	SEAL	1	
20	0011305100	HEX. HEAD BOLT.....	4	REPLACES P/N 0017105012
21	0601820083	RECTIFIER, S25VB60	3	
22	A4184000004	BRACKET	3	
23	0027104020	MACHINE SCREW	3	
23A	0030004000	HEX. NUT	3	REPLACES P/N 0038404000
24	011008015	HEX. HEAD BOLT.....	6	REPLACES P/N 0017108015


CONTROL PANEL ASSY. (GDP-5H/5H1)

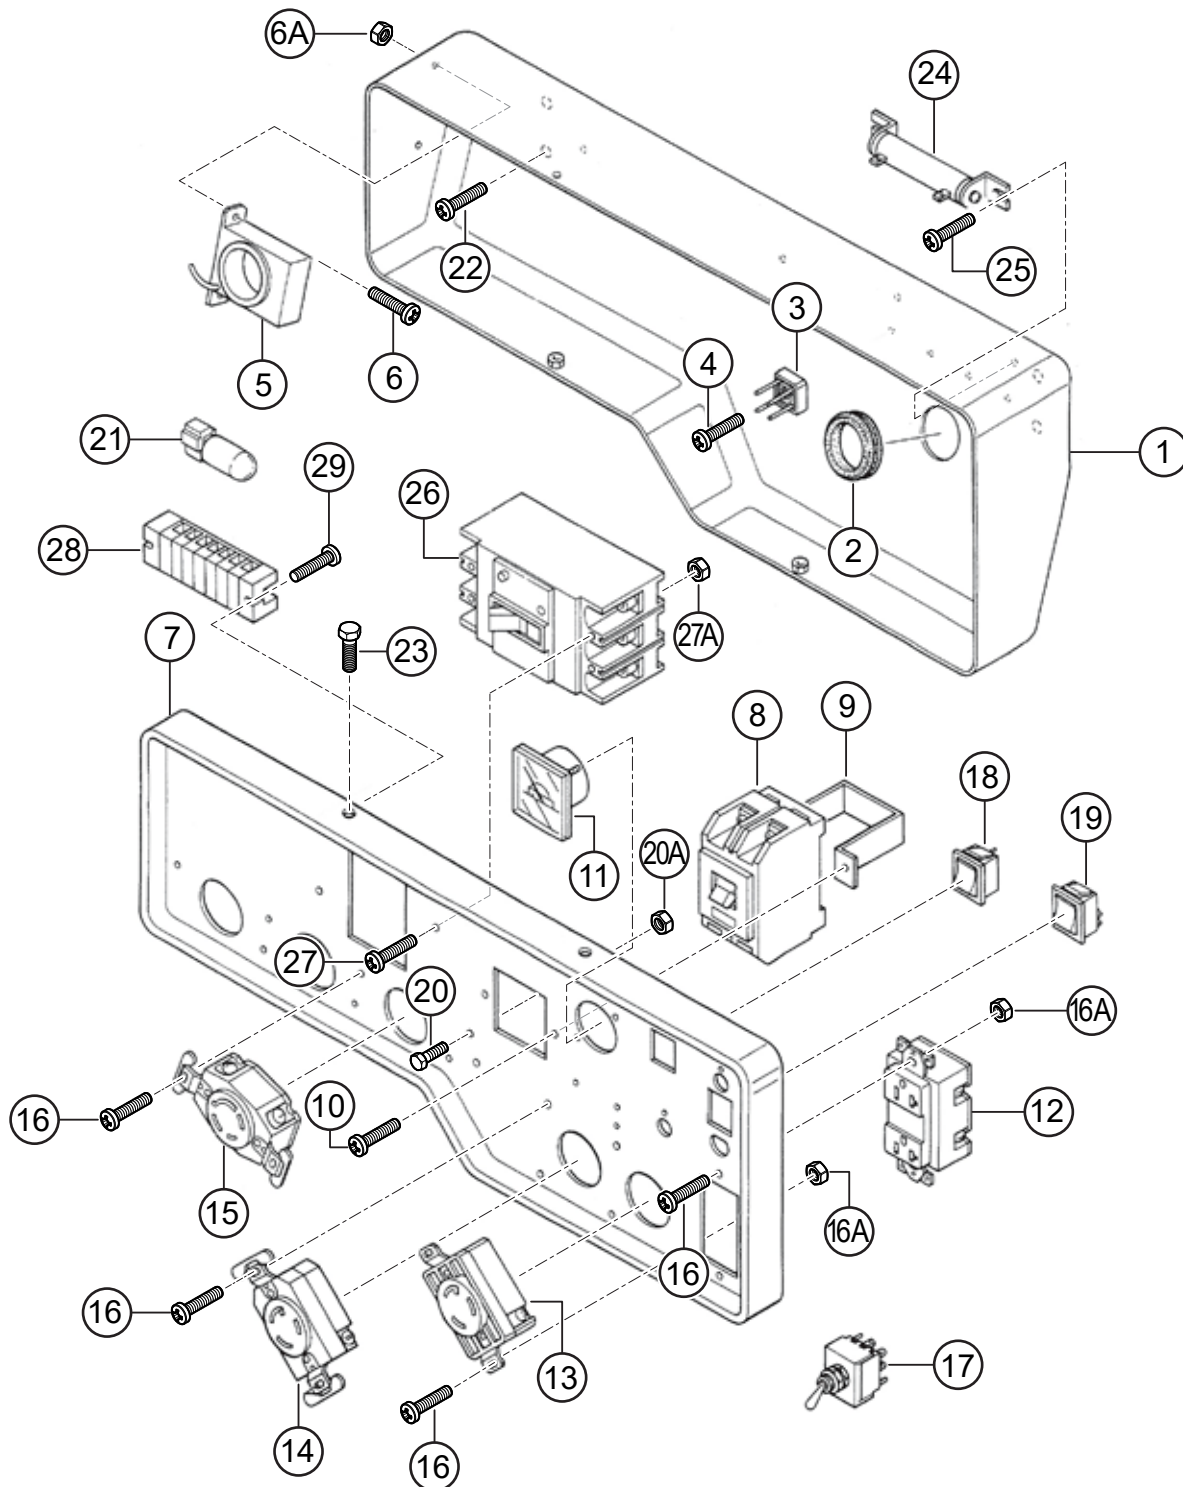

CONTROL PANEL ASSY. (GDP-5H/5H1)

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	A3214000103	CONTROL BOX	1	
2	Y0601851755	GROMMET	1	
3	0601823204	RECTIFIER	4	
4	0027103012	MACHINE SCREW	4	
5	0601823853	SLOW DOWN UNIT	1	
6	0027104010	MACHINE SCREW	2	
6A	OEMAA8	HEX NUT	2	REPLACES P/N 0207004000
7	A4224000003	CONTROL PANEL	1	NO LONGER AVAILABLE
8	0601802651	CIRCUIT BREAKER, 15A	1	
9	4341817004	BRACKET, CIRCUIT BREAKER	1	
10	0021004010	MACHINE SCREW	2	
11	0601806819	AC VOLTMETER, 0~120/240V	1	
12	0601812597	RECEPTACLE, 5-20R, GFCI (GDP-5H)	1	REPLACES P/N 0601812598
12	0601812597	RECEPTACLE, 5-20R, GFCI (GDP-5H1)	1	REPLACES P/N 0601812598 S/N 5609079 AND BELOW
12	Y0601814034	RECEPTACLE, 5-20R, GFCI	1	REPLACES P/N 0601814013 S/N 5609080 AND ABOVE
13	0601811031	RECEPTACLE, L5-30R	1	REPLACES P/N 0601811035
14	0601811032	RECEPTACLE, L60-20R	1	
15	0601812594	RECEPTACLE, 7410B	3	
16	0021004010	MACHINE SCREW	12	
16A	OEMAA8	HEX NUT	12	REPLACES P/N 0207004000
17	0601830737	FULL POWER SWITCH	1	
18	0601831620	IDLE CONTROL SWITCH	1	
19	0601831620	OPERATION SWITCH	1	
20	0021004015	MACHINE SCREW	1	
20A	OEMAA8	HEX NUT	1	REPLACES P/N 0207004000
21	A3262800004	CONDENSER ASSY., 50V 1000 μ F	1	
22	0017106016	HEX HEAD BOLT	4	
23	0017105010	HEX HEAD BOLT	4	
24	0601842415	RESISTOR, 7 Ω	1	
25	0027104010	MACHINE SCREW	2	
26	0601807480	CIRCUIT BREAKER, 12.5A	1	
27	0027104070	MACHINE SCREW	2	
27A	OEMAA8	HEX NUT	2	REPLACES P/N 0207004000
28	0601815465	TERMINAL BOARD, 7P	1	
29	0027104020	MACHINE SCREW	2	

CONTROL BOX ASSY. (GDP-5H1)

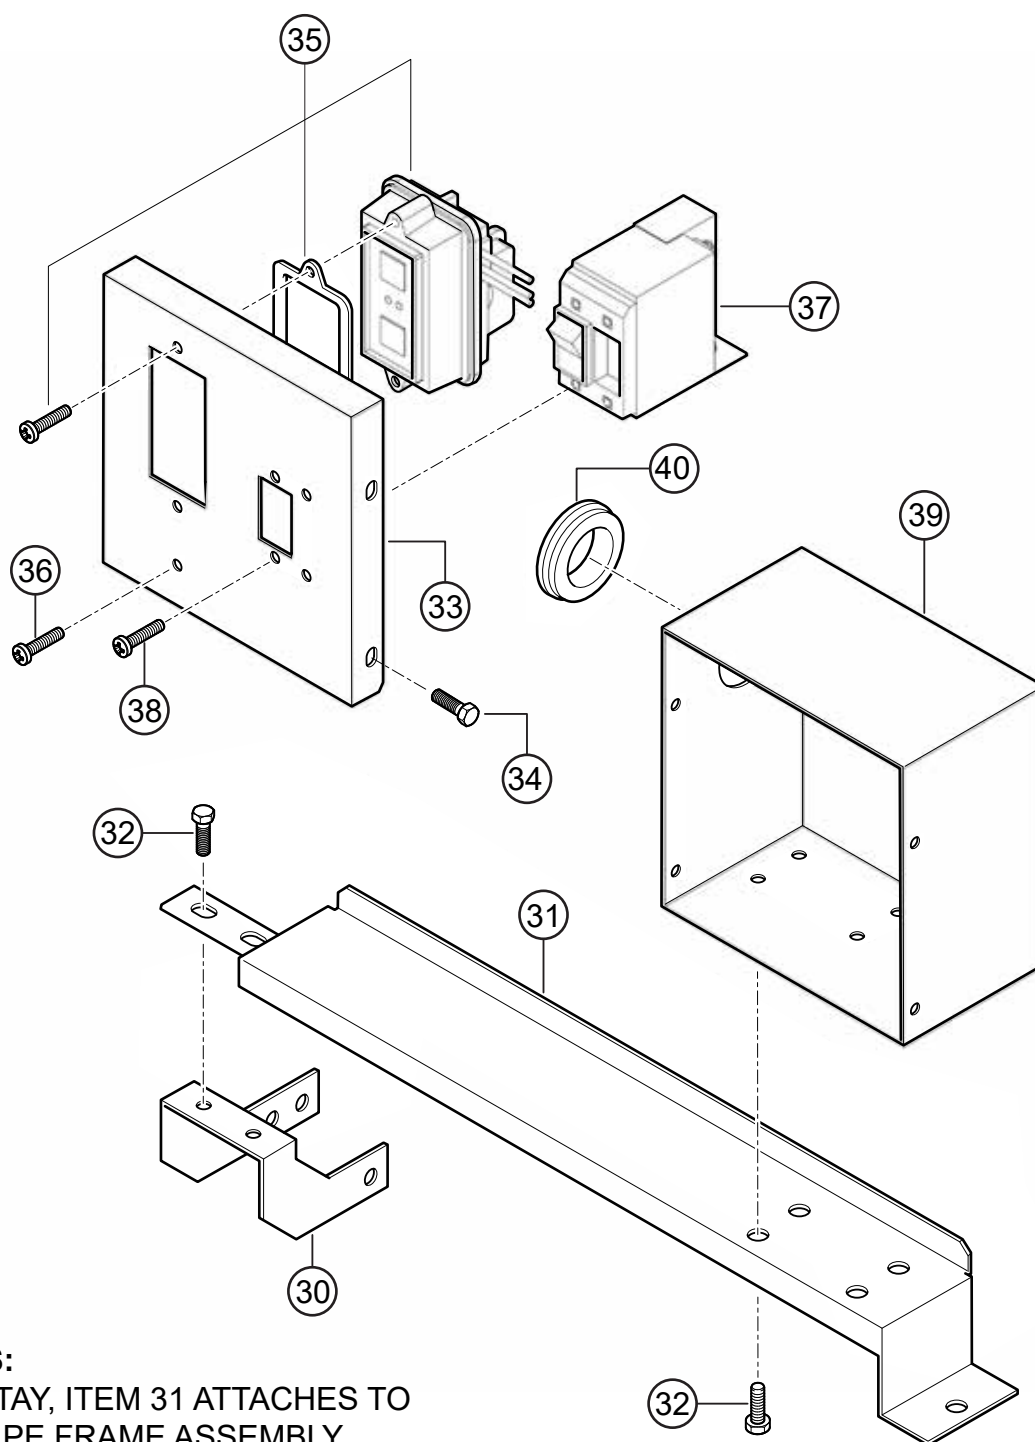


NOTES:

- 1 STAY, ITEM 31 ATTACHES TO PIPE FRAME ASSEMBLY.

CONTROL BOX ASSY. (GDP-5H1)

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
30	A6414500004	BASE GUIDE	1.....	S/N 5646725 AND ABOVE
31	A5414500103	STAY	1.....	S/N 5646725 AND ABOVE
32	0016906015	HEX HEAD BOLT	6.....	S/N 5646725 AND ABOVE
33	A6261700303	COVER	1.....	S/N 5646725 AND ABOVE
34	0011305100	HEX HEAD BOLT	4.....	REPLACES P/N 0017105012 S/N 5646725 AND ABOVE
35	0601829301	EARTH LEAKAGE RELAY, 120V	1.....	S/N 5646725 AND ABOVE
36	0021005015	MACHINE SCREW	1.....	S/N 5646725 AND ABOVE
36A	0030005000	HEX NUT	2.....	REPLACES P/N 0207005000 S/N 5646725 AND ABOVE
37	0601872300	CIRCUIT BREAKER, 120V 15A 2P	1.....	S/N 5646725 AND ABOVE
38	0021003005	MACHINE SCREW	4.....	S/N 5646725 AND ABOVE
39	A6261500303	BOX, ELECTRIC PARTS	1.....	S/N 5646725 AND ABOVE
40	Y0601850270	GROMMET	1.....	S/N 5646725 AND ABOVE


CONTROL PANEL ASSY. (GDP-5HA, 5HANC, 5HANC2)

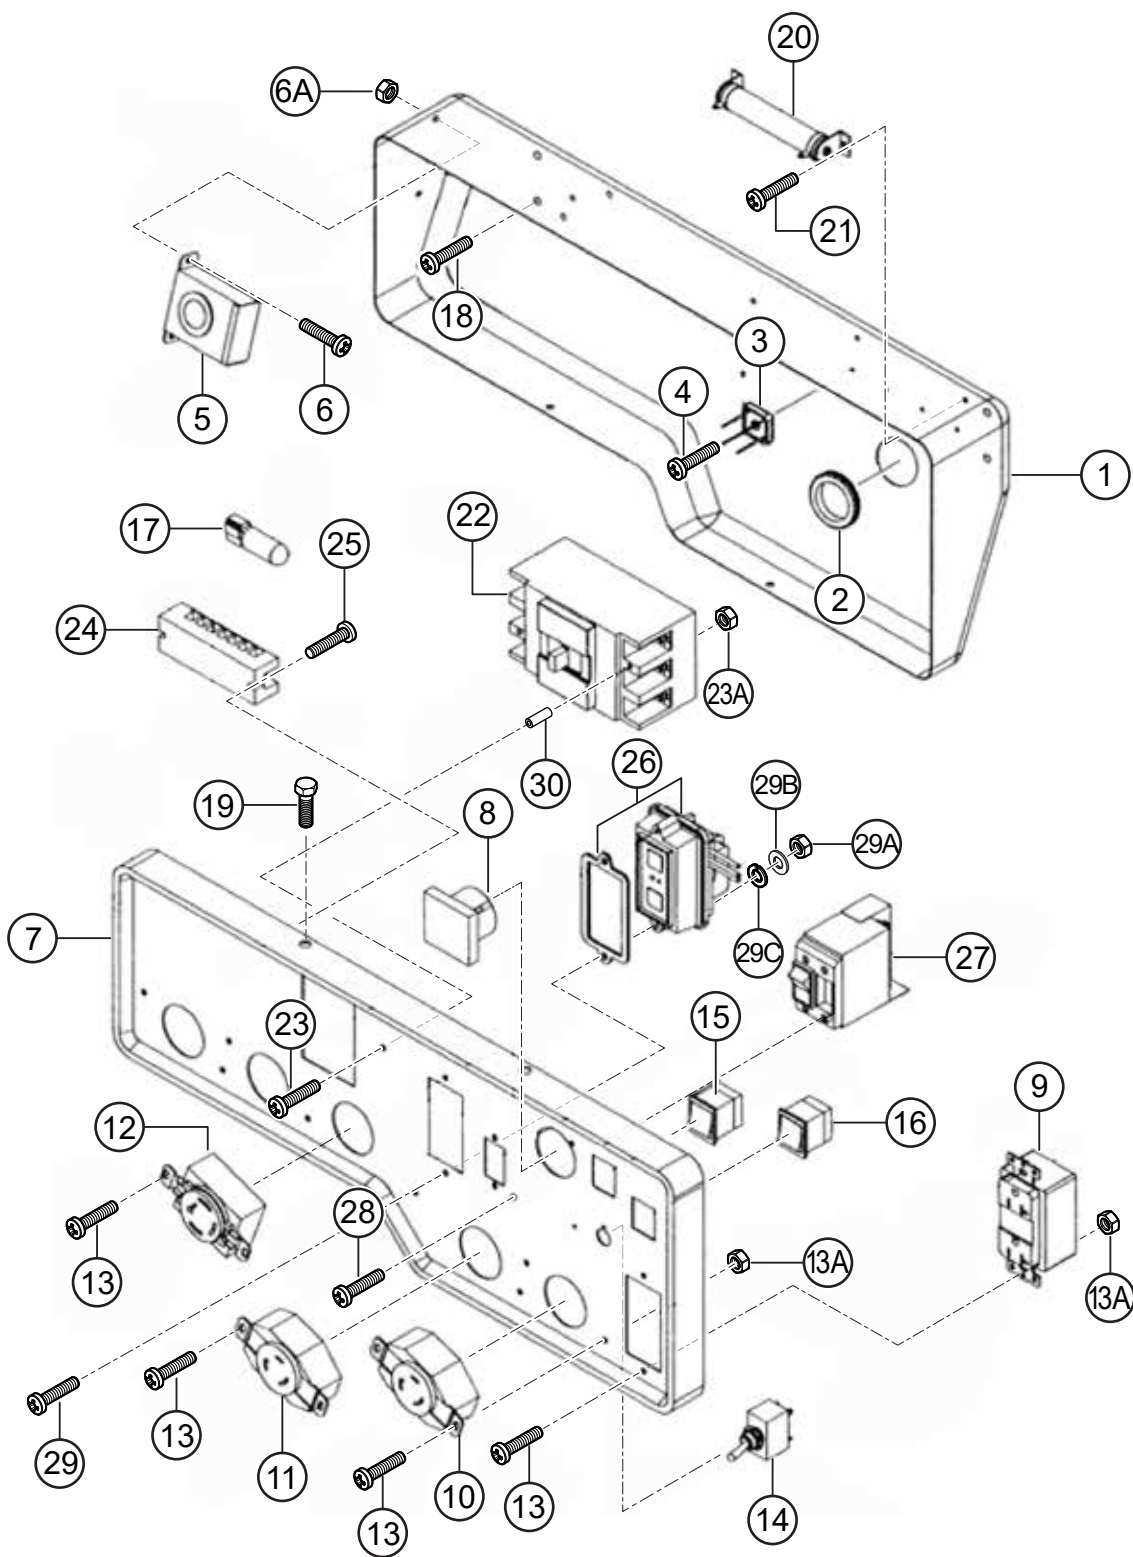

CONTROL PANEL ASSY. (GDP-5HA, 5HANC, 5HANC2)

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	A3214000103	CONTROL BOX	1	
2	Y0601851755	GROMMET	1	
3	0601823204	RECTIFIER	4	
4	0027103012	MACHINE SCREW	4	
5	0601823853	SLOW DOWN UNIT	1	
6	0027104010	MACHINE SCREW	2	
6A	OEMAA8	HEX. NUT	2	REPLACES P/N 0207004000
7	A4224000403	CONTROL PANEL	1	
8	0601806819	AC VOLTMETER, 0~120/240V	1	
9	0601814065	RECEPTACLE, 5-20R	1	
10	0601811031	RECEPTACLE, L5-30R	1	REPLACES P/N 0601811035
11	0601811032	RECEPTACLE, L6-20R	1	
12	0601812594	RECEPTACLE, 7410B	3	
13	0021004010	MACHINE SCREW	12	
13A	OEMAA8	HEX. NUT	12	REPLACES P/N 0207004000
14	0601830737	FULL POWER SWITCH	1	
15	0601831620	ROCKER SWITCH	1	
16	0601831620	ROCKER SWITCH	1	
17	A3262800004	CONDENSER ASSY., 50V 1000μF	1	
18	011106015	HEX. HEAD BOLT.....	4	REPLACES P/N 0017106015
19	0017105010	HEX. HEAD BOLT	4	
20	0601842415	RESISTOR, 7Ω	1	
21	Y0027104008	MACHINE SCREW	2	
22	0601807480	CIRCUIT BREAKER, 12.5A	1	S/N 50017694 AND BELOW
22	Y0601872082	CIRCUIT BREAKER, 12A.....	1	S/N 50017695 AND ABOVE
23	0027104070	MACHINE SCREW	2	
23A	OEMAA8	HEX. NUT	2	REPLACES P/N 0207004000
24	0601815465	TERMINAL BOARD, 7P	1	
25	0027104020	MACHINE SCREW	2	
26	0601829301	EARTH LEAKAGE RELAY, 120V.....	1	S/N 5909008 AND BELOW
26	Y0601829302	EARTH LEAKAGE RELAY, 120V.....	1	S/N 5909009 ~ 50018491
26	0601829301	EARTH LEAKAGE RELAY, 120V.....	1	S/N 50018492 AND ABOVE
27	0601872300	CIRCUIT BREAKER, 15A 2P	1	
28	0021003005	MACHINE SCREW	4	
29	0021004020	MACHINE SCREW	2	
29A	OEMAA8	HEX. NUT	2	REPLACES P/N 0030004000
29B	58042	WASHER, FLAT.....	2	REPLACES P/N 0041204000
29C	0040004000	WASHER, LOCK	2	
30	Y0601851197	SPACER	2	S/N 50017695 AND ABOVE


PIPE FRAME ASSY.

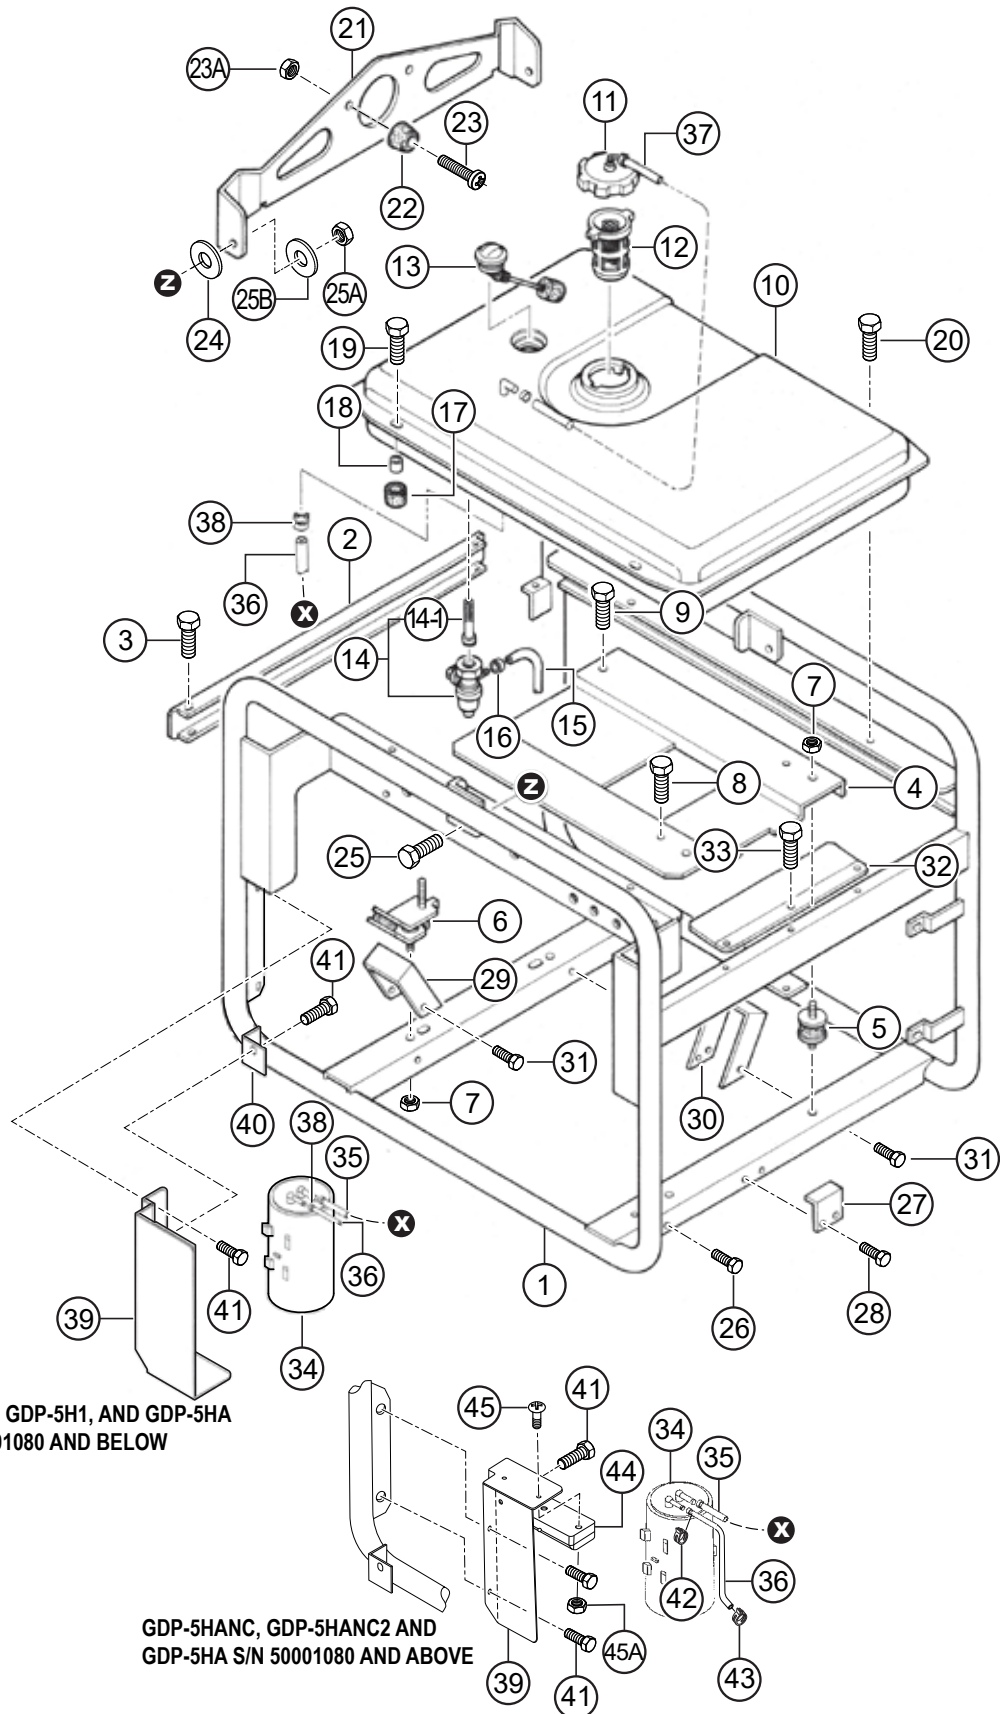

PIPE FRAME ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	A4417000402	PIPE FRAME	1	
2	A3417100004	BRACKET	1	
3	0017106016	HEX HEAD BOLT (GDP-5H, 5H1)	4	
3	011106015	HEX. HEAD BOLT (GDP-5HA)	4	REPLACES P/N 001710601
4	7855411203	BASE	1	NO LONGER AVAILABLE
5	3015419604	RUBBER SUSPENSION	2	
6	1665419004	RUBBER SUSPENSION	2	REPLACES P/N 1725419214
7	Y0207008000	HEX. NUT	8	
8	011208030	HEX. HEAD BOLT	2	REPLACES P/N 0017108030
9	0017108040	HEX. HEAD BOLT	2	
9A	Y0207008000	HEX. NUT	2	
10	A3364000002	FUEL TANK (GDP-5H)	1	
10	A3364000002	FUEL TANK (GDP-5H1)	1	S/N 5530261 AND BELOW
10	A3361000004	FUEL TANK (GDP-5H1)	1	S/N 5530262 AND ABOVE
10	A3361000004	FUEL TANK (GDP-5HA)	1	S/N 5868934 AND BELOW
10	A3361000014	FUEL TANK (GDP-5HA)	1	S/N 5868935 AND ABOVE
11	A2361000304	CAP, FUEL TANK (GDP-5H)	1	REPLACES P/N 0605505068
11	A2361000304	CAP, FUEL TANK (GDP-5H1)	1	REPLACES P/N 0430430120
11	A2361000304	CAP, FUEL TANK (GDP-5HA)	1	REPLACES P/N 0605505068 S/N 5859093 AND BELOW
11	A2361000304	CAP, FUEL TANK (GDP-5HA)	1	S/N 5859094 AND ABOVE
12	0641360030	FUEL FILTER	1	REPLACES P/N 0605505162
13	0602125034	FUEL GAUGE	1	
14	16950ZB4015	FUEL STRAINER	1	REPLACES P/N 0605510068 INCLUDES ITEMS W/#
14-1#	16952KJ9752	SCREEN SET	1	REPLACES P/N 0605510069
15	6636A	HOSE (GDP-5H, 5H1)	1	REPLACES P/N 950014521040
15	91424ZBH832	HOSE (GDP-5HA)	1	
16	9500202080	HOSE BAND	2	REPLACES P/N 0605515178
17	7855525514	RUBBER CUSHION	2	
18	7855525604	COLLAR	2	
19	011208030	HEX. HEAD BOLT	2	REPLACES P/N 0017108030
20	011008020	HEX. HEAD BOLT	2	REPLACES P/N 0017108020
21	A9117200103	HANGER	1	
22	Y0601850097	STOPPER	1	
23	011208025	MACHINE SCREW	1	REPLACES P/N 0021008025
23A	020108060	HEX. NUT	1	REPLACES P/N 0207008000
24	0601851116	WASHER, PLASTIC	2	
25	0011208025	HEX. HEAD BOLT	2	REPLACES P/N 0011308025
25A	020108060	HEX. NUT	2	REPLACES P/N 0037908000
25B	0042108000	WASHER, FLAT	2	
26	0019206016	HEX HEAD BOLT (GDP-5H, 5H1)	1	
26	0019206015	HEX. HEAD BOLT (GDP-5HA)	1	
27	7915456004	STOPPER	1	
28	0017106016	HEX HEAD BOLT (GDP-5H, 5H1)	2	
28	011106015	HEX. HEAD BOLT (GDP-5HA)	2	REPLACES P/N 0017106015

PIPE FRAME ASSY. (CONT'D.)

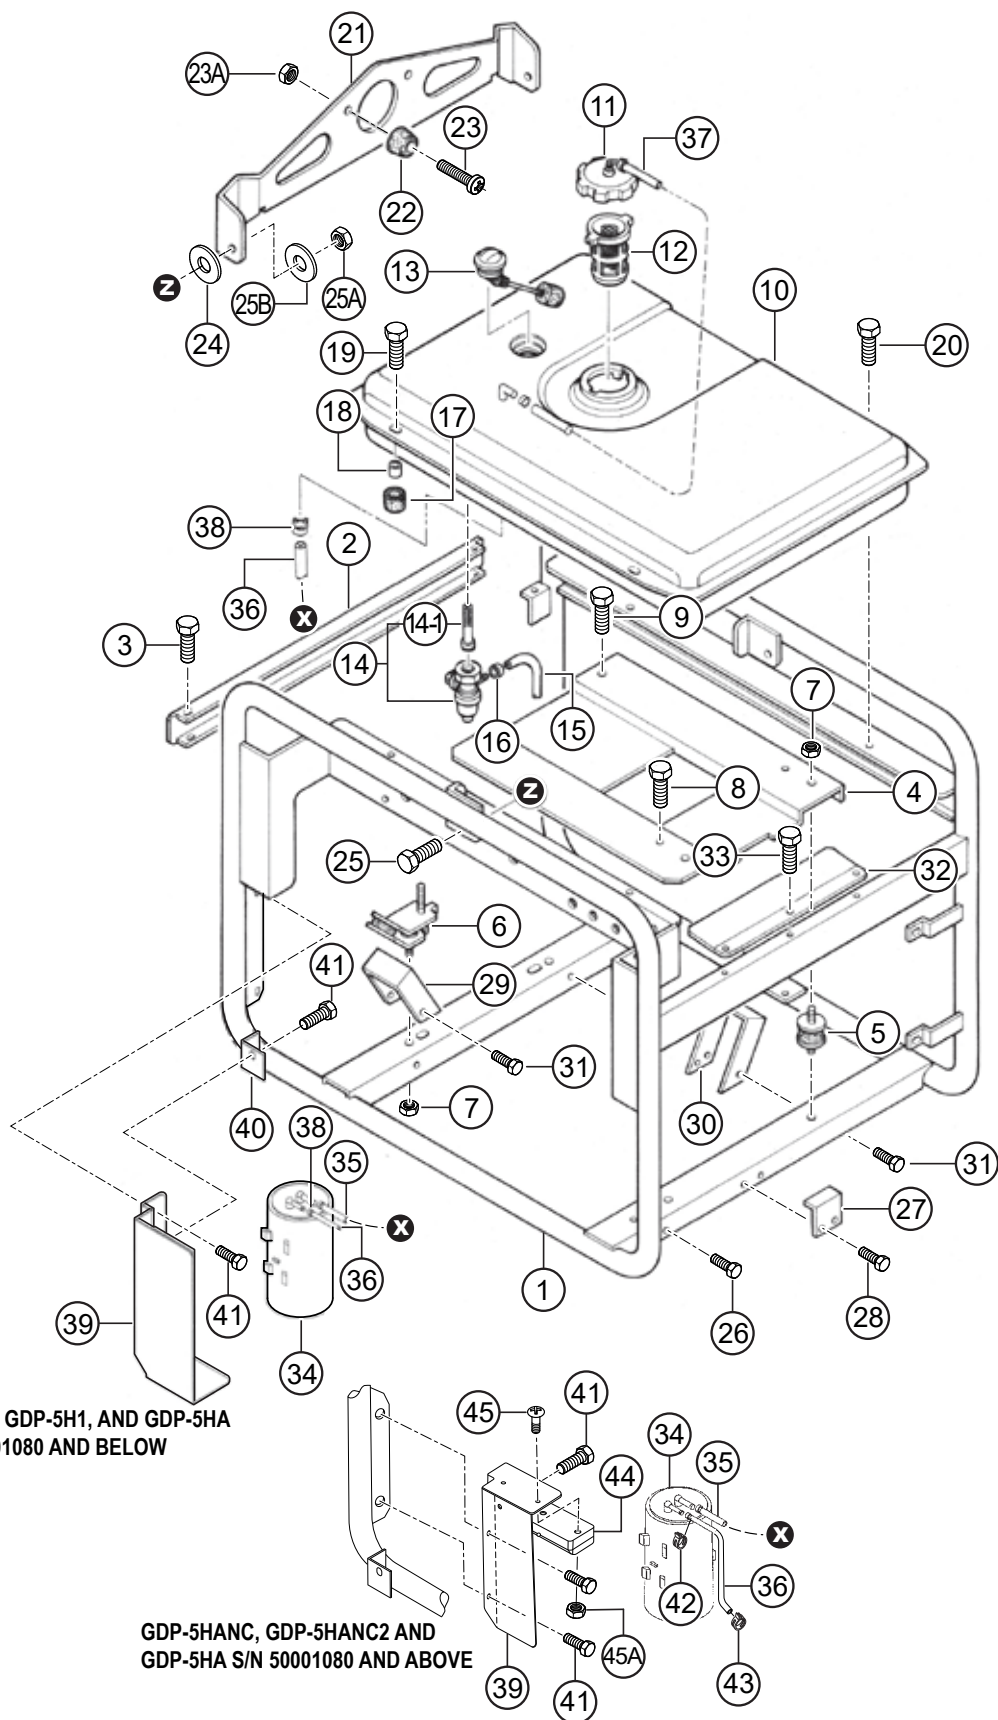


GDP-5H, GDP-5H1, AND GDP-5HA
S/N 50001080 AND BELOW

GDP-5HANC, GDP-5HANC2 AND
GDP-5HA S/N 50001080 AND ABOVE

PIPE FRAME ASSY. (CONT'D.)


<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
29	7915455103	COVER	1	
30	7855455003	COVER	1	
31	0017106016	HEX HEAD BOLT (GDP-5H, 5H1)	6	
31	011106015	HEX. HEAD BOLT (GDP-5HA)	6.....	REPLACES P/N 0017106015
32	A4484400004	COVER	1	
33	0017106016	HEX HEAD BOLT (GDP-5H, 5H1)	3	
33	011106015	HEX. HEAD BOLT (GDP-5HA)	3.....	REPLACES P/N 0017106015
34	0605507002	CANISTER (GDP-5H, 5H1)	1	
34	0605507002	CANISTER (GDP-5HA)	1.....	S/N 5754008 AND BELOW
34	0605507005	CANISTER (GDP-5HA)	1.....	S/N 5754009 ~ 5859093
34	0605507010	CANISTER (GDP-5HA)	1.....	S/N 5859094 AND ABOVE
35	Y0605513202	HOSE	1	
36	Y0605513203	HOSE (GDP-5H, 5H1)	1	
36	Y0605513210	HOSE (GDP-5HA)	1	
37	0605513189	HOSE (GDP-5H, 5H1)	1	
37	0605513189	HOSE (GDP-5HA)	1.....	S/N 5814048 AND BELOW
37	0605513219	HOSE (GDP-5HA)	1.....	S/N 5814049 AND ABOVE
38	0605515223	HOSE BAND TS-100 (GDP-5H, 5H1)	4	
38	0605515223	HOSE BAND TS-100 (GDP-5HA).....	2.....	S/N 5814048 AND BELOW
38	0605515223	HOSE BAND TS-100 (GDP-5HA).....	4.....	S/N 5814049 AND ABOVE
39	A3261600103	BRACKET (GDP-5H, 5H1)	1	
39	A3261600103	BRACKET, (GDP-5HA)	1.....	S/N 50001080 AND BELOW
39	A5484500103	BRACKET, (GDP-5HA)	1.....	S/N 50001081 AND ABOVE
39	A5484500103	BRACKET (GDP-5HANC, 5HANC2)	1	
40	A3261600204	STOPPER	1	
41	0016906015	HEX. HEAD BOLT	3	
42	0605515170	HOSE BAND TS-115 (GDP-5HA)	1	
43	Y0605515229	HOSE BAND TS-130 (GDP-5HA)	1	
44	Y0602211802	CO SENSOR (GDP-5HANC2).....	1.....	S/N 50001081 AND ABOVE
45	Y0027103035	MACHINE SCREW (GDP-5HANC2)	2.....	S/N 50001081 AND ABOVE
45A	Y0038403000	HEX NUT (GDP-5HANC2).....	2.....	S/N 50001081 AND ABOVE

MUFFLER ASSY.

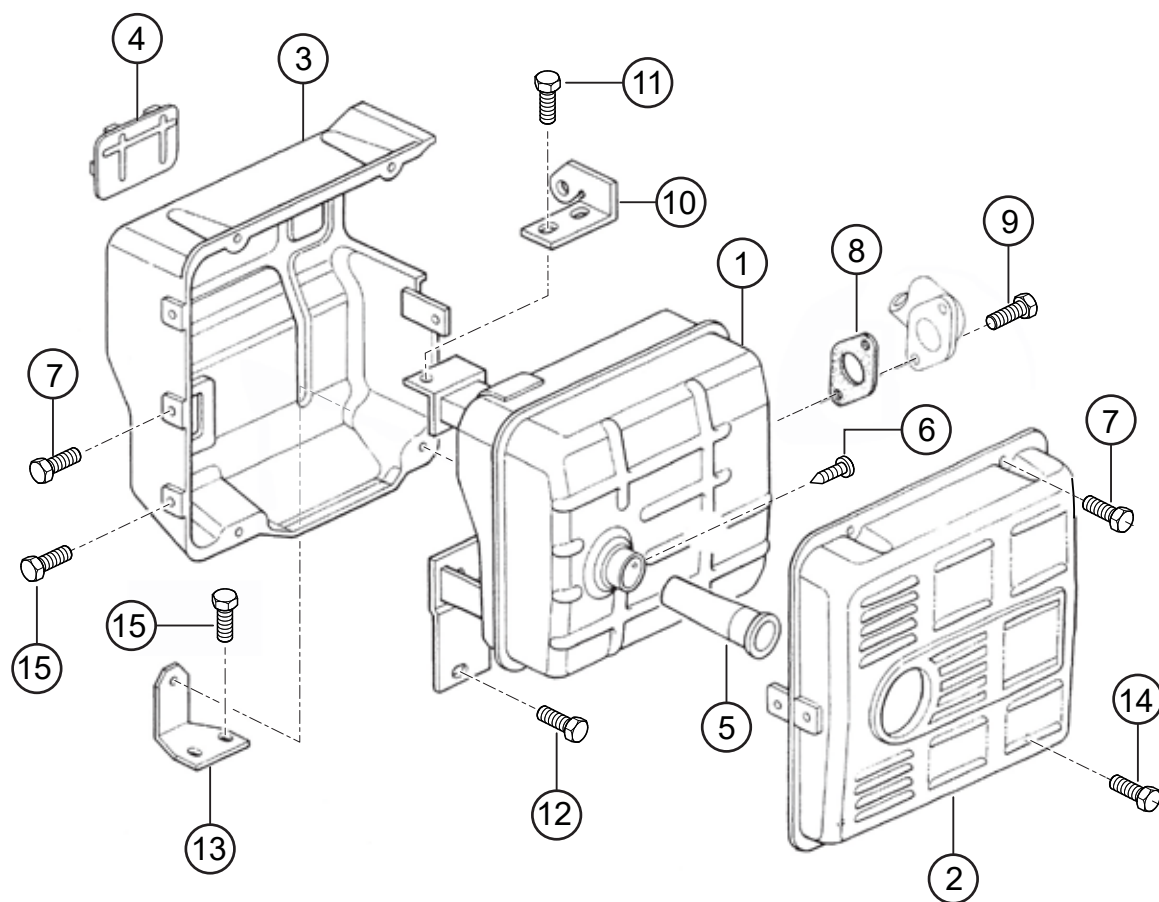

MUFFLER ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	7852310003	MUFFLER (GDP-5H, 5H1)	1	
1	7852310003	MUFFLER (GDP-5HA).....	1.....	S/N 5873646 AND BELOW
1	W7852310013	MUFFLER (GDP-5HA).....	1.....	S/N 5873647 AND ABOVE
2	18320ZC2000	PROTECTOR, MUFFLER	1.....	REPLACES P/N 0602302001
3	18325ZB4000	PROTECTOR, MUFFLER	1.....	REPLACES P/N 0602302002
4	18329ZB4000	SEAL.....	2.....	REPLACES P/N 0602302003
5	18355ZB4630	ARRESTOR, SPARK	1.....	REPLACES P/N 0602313060
6	90002ZG0003	TAPPING SCREW (GDP-5H, 5H1)	1.....	REPLACES P/N 90183671003
6	90002ZE2U91	TAPPING SCREW (GDP-5HA).....	1.....	REPLACES P/N Y0602322011
7	0105050616	HEX. HEAD BOLT.....	5.....	REPLACES P/N 0017106012
8	18333ZB4801	GASKET	1.....	REPLACES P/N 18333ZB4800
9	957010802000	HEX. HEAD BOLT.....	2.....	REPLACES P/N Y0602322010
10	7855469004	BRACKET	1	
11	011008020	HEX. HEAD BOLT.....	1.....	REPLACES P/N 0017108020
12	011008020	HEX. HEAD BOLT.....	1.....	REPLACES P/N 0017108020
13	7905469004	BRACKET	1	
14	011206020	HEX. HEAD BOLT.....	1.....	REPLACES P/N 0017106020
15	0105050616	HEX. HEAD BOLT.....	4.....	REPLACES P/N 0017106012

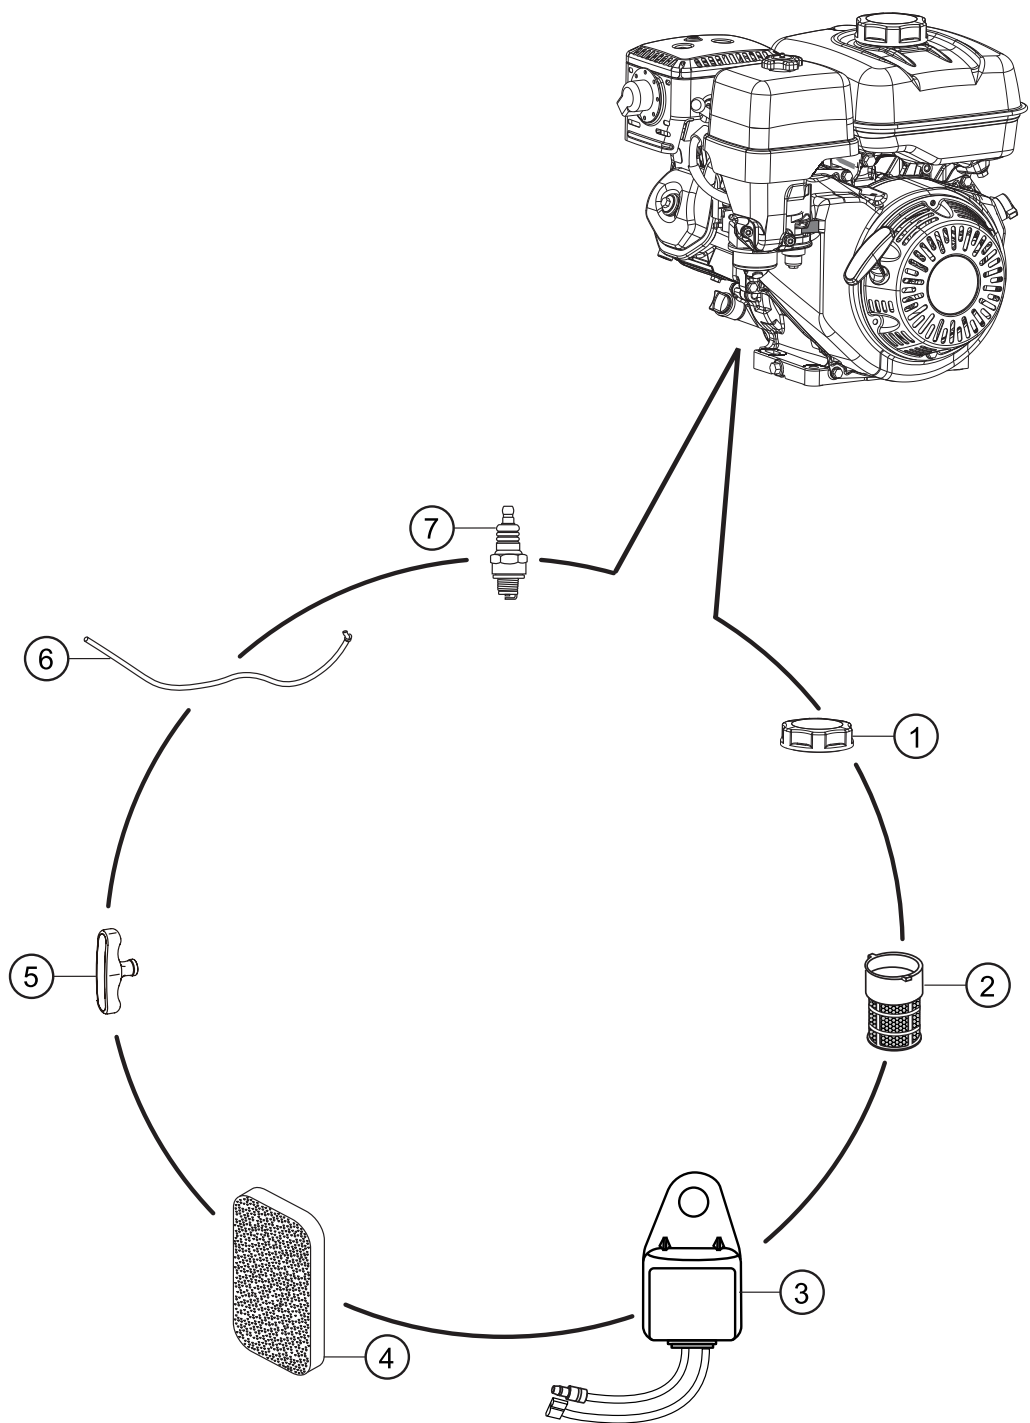

ENGINE SERVICE PARTS

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	A2361000304	CAP, FUEL TANK	1	
2	A9924800004	FUEL FILTER	1	
3	34150ZH7023	OIL ALERT UNIT	1	
4	17211899000	ELEMENT, AIR CLEANER	1	
5	28461ZE2W02	GRIP, STARTER	1	
6	28462ZV7003	ROPE, RECOIL STARTER	1	
7	9807955846	SPARK PLUG	1	

PARTS MANUAL

HERE'S HOW TO GET HELP

PLEASE HAVE THE MODEL AND SERIAL
NUMBER ON-HAND WHEN CALLING

UNITED STATES

Multiquip Inc.

(310) 537- 3700
6141 Katella Avenue Suite 200
Cypress, CA 90630
E-MAIL: mq@multiquip.com
WEBSITE: www.multiquip.com

CANADA

Multiquip

(450) 625-2244
4110 Industriel Boul.
Laval, Quebec, Canada H7L 6V3
E-MAIL: infocanada@multiquip.com

UNITED KINGDOM

Multiquip (UK) Limited Head Office

0161 339 2223
Unit 2, Northpoint Industrial Estate,
Globe Lane,
Dukinfield, Cheshire SK16 4UJ
E-MAIL: sales@multiquip.co.uk

© COPYRIGHT 2026, MULTIQUEIP INC.

Multiquip Inc. and the MQ logo are registered trademarks of Multiquip Inc. and may not be used, reproduced, or altered without written permission. All other trademarks are the property of their respective owners and used with permission.

This manual MUST accompany the equipment at all times. This manual is considered a permanent part of the equipment and should remain with the unit if resold.

DISCLAIMER: Product features, descriptions, and specifications are based on published information at the time of publication and are subject to change at any time without notice. Multiquip Inc. and its affiliates reserve the right to change specifications, features, design, and descriptions of products at any time without notice.

