



IDLE ADJUSTMENT YANMAR ENGINE 3TNV84T (ONLY)

PROBLEM: Some units may have the idle set to low causing an undesirable vibration.

**TOOLS REQUIRED:
2(EA.) – 10MM WRENCH**

1. Loosen jam-nut (A) on throttle stop screw (B)
2. Turn Throttle Stop Screw (B) "in" to increase idle until "low idle resonance goes away around 1200 RPM".
3. Re-tighten the Jam-Nut (A) on the Throttle Stop Screw (B).

