

PREHEAT TIMER AND GLOW RELAY INSTALLATION

Preheat Timer and Glow Relay Function Description.

The preheat timer regulates current to the glow plugs at preheat, (key switch initially placed in the ON position) and in the key switch START position. When the key switch is placed in the ON position, the preheat timer activates the glow plugs via the glow relay for 5 seconds. An indicator light (optional) illuminates and remains on while the glow plugs are preheating the combustion chambers. The engine may be started after the 5 seconds or when the indicator light goes out. When the key switch is held in the START position, the glow plugs and light are again activated while starting the engine.



