


LS600 PUMP — WIRING DIAGRAM (DIGITAL READOUT SCREEN)

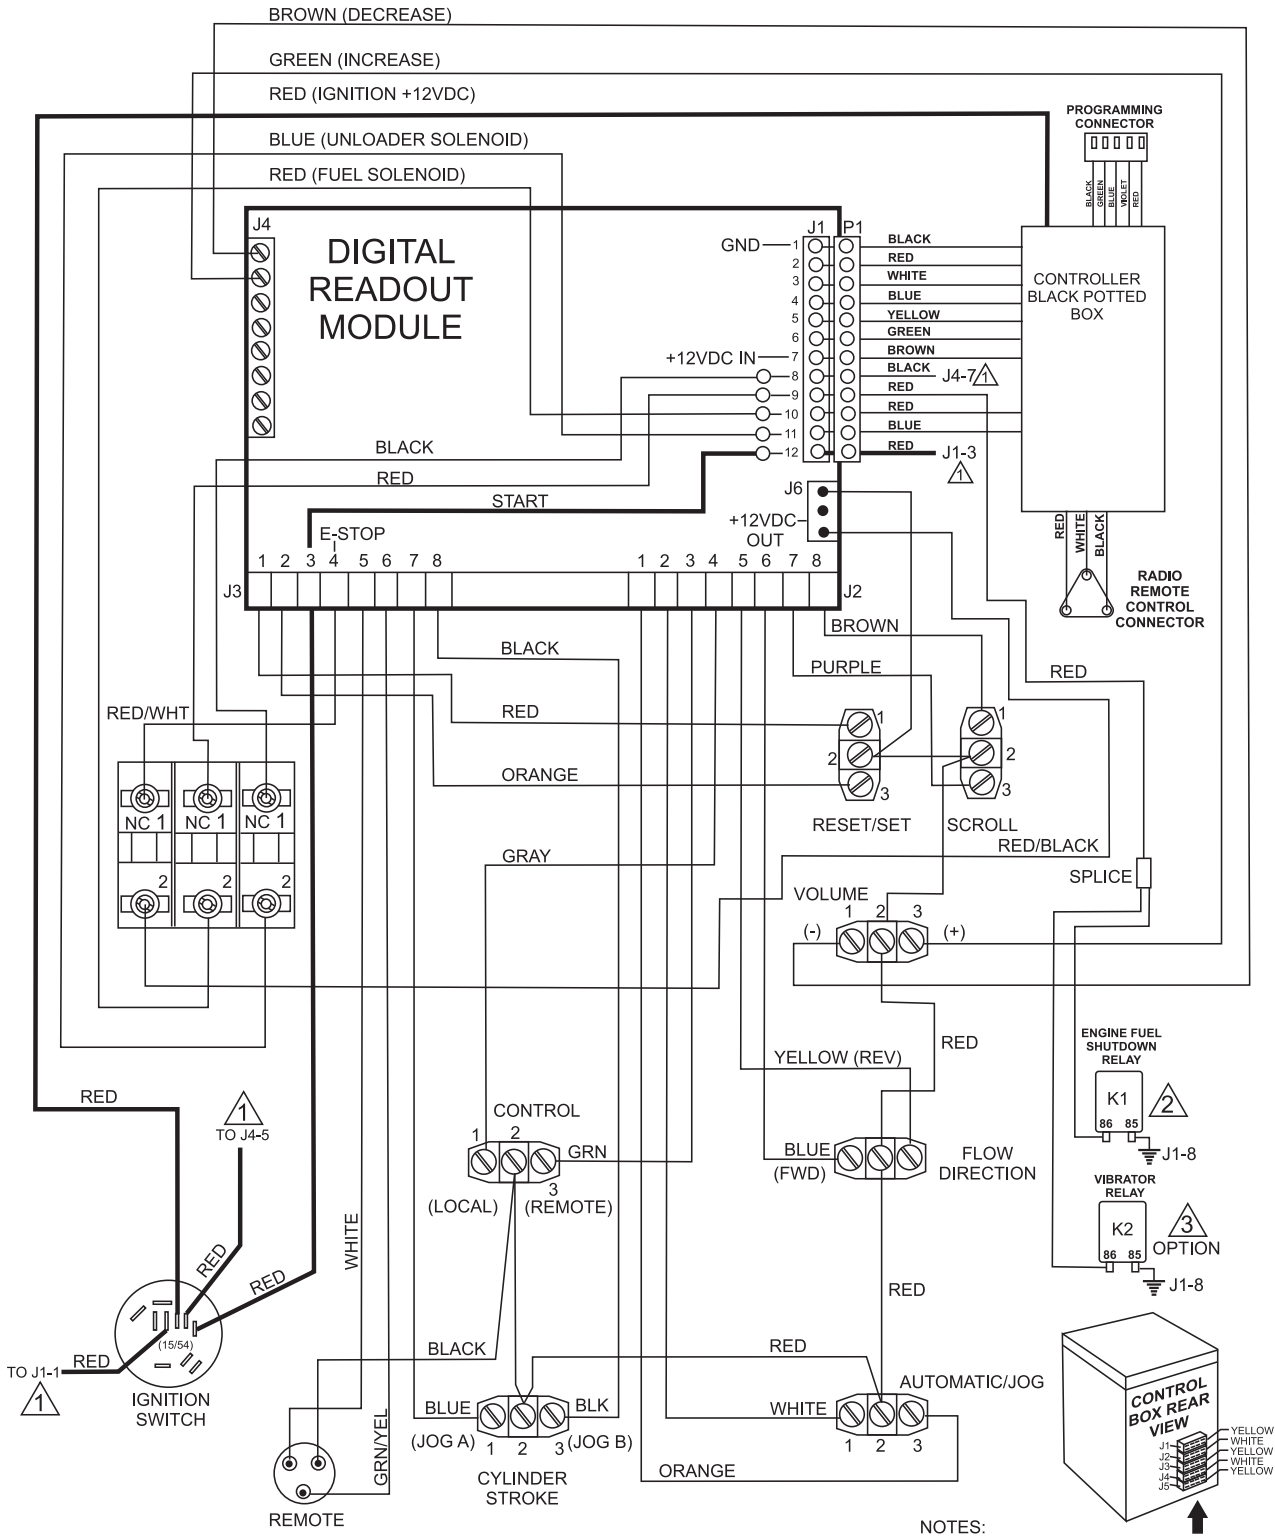

- NOTES:
- ① CONNECT WIRES TO EITHER J1-1, J1-3, J1-8, J4-5 AND J4-7 CONNECTORS INSIDE CONTROL BOX.
 - ② SEE ENGINE FUEL SHUTDOWN RELAY WIRING DIAGRAM.
 - ③ SEE VIBRATOR RELAY WIRING DIAGRAM.

Connections to Digital Readout Screen

MAYCO LS600 PUMP