




The information and specifications included in this publication were in effect at the time of approval for printing. Illustrations, descriptions, references and technical data contained in this document are for guidance only and may not be considered as binding. Multiquip Inc. reserves the right to discontinue or change specifications, design or the information published in this publication at any time without notice and without incurring any obligations.

### MQP 3 WAY FUEL AUTO VALVE TROUBLESHOOTING

The 3 way auto switching valve automatically switches between the upper and lower fuel tanks based off fuel level indications

- Standard operation allows the use of fuel in the upper/inner tank first
- Once the upper/inner tank level has decreased, the auto switching valve is then energized and switches to draw fuel from trailer/lower fuel tank
- The auto switching valve is engaged/changes valve position when the resistance value of the float switch in the internal/upper tank changes relative to the fuel level being high or low.

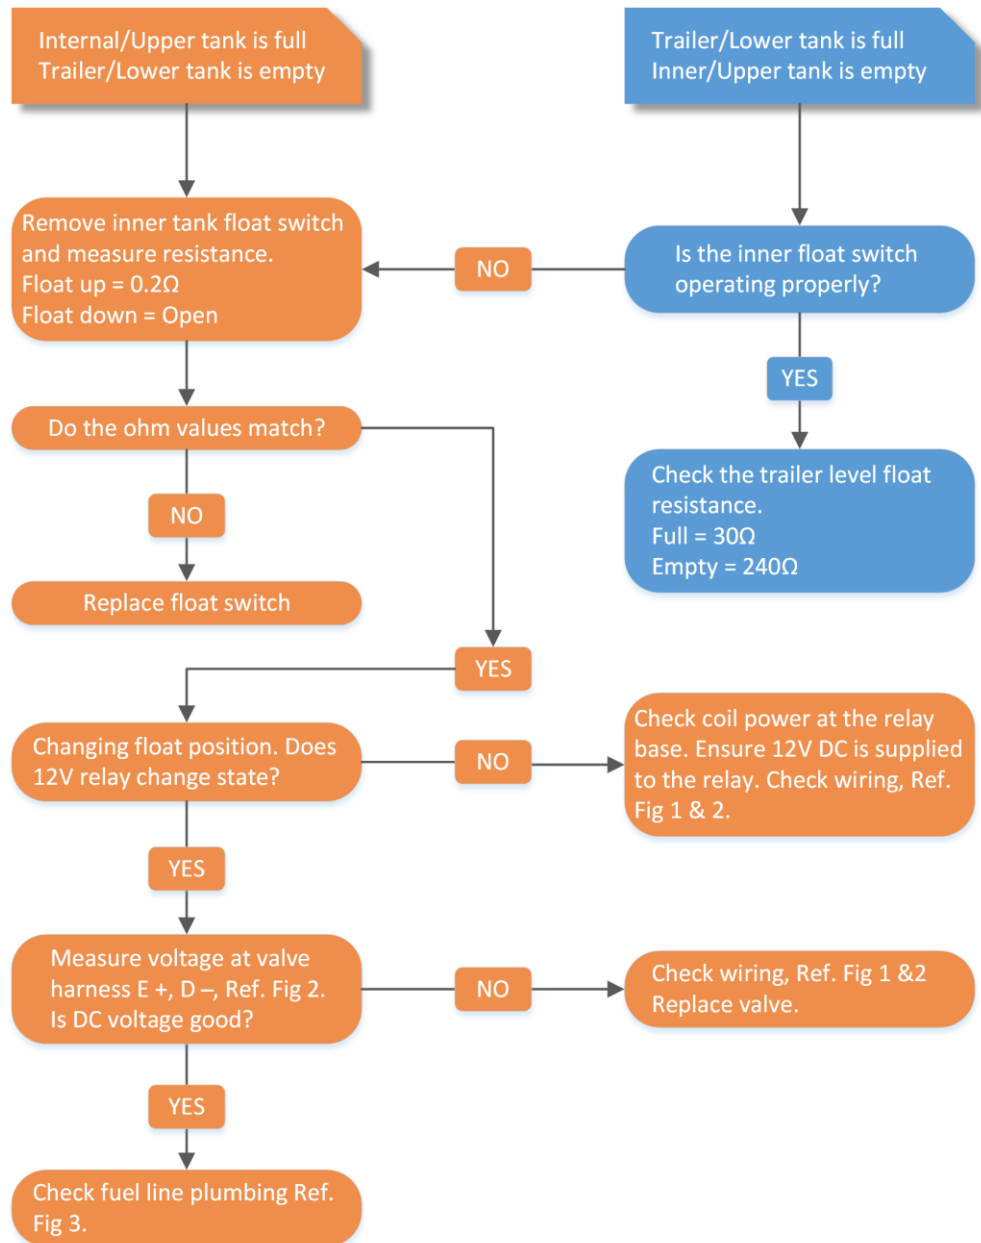

© COPYRIGHT 2022, MULTIQIP INC, Rev. 0 (01/27/2022)

