


## HYDRAULIC OIL PLUG LEAK

If oil leaks from the hydraulic oil plug on the oil tank, it is possible that the vent hole has become contaminated and is clogging up the check valve.

Hydraulic oil plug is located under the breather cap on the oil tank and can be removed using a 24mm wrench.

Hydraulic oil plug - **MQ PART# 458010080**  
Oil plug O-ring - **MQ PART# 050200180**

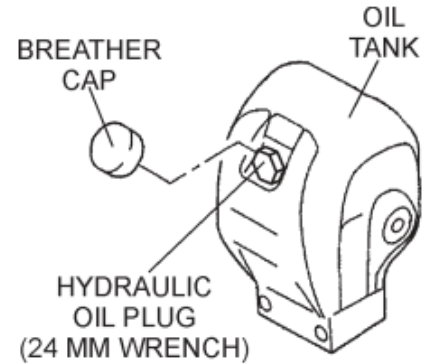

Hydraulic Oil Tank

The hydraulic oil plug has a vent hole with a check valve. Arrows show direction of air flow past check valve.



**CAUTION:** Use proper eye protection. To clean, use a flat ended tool and gently push down on the check valve lifting it off the seat and spray cleaning solvent thru the passage to clear any contamination.



If oil still leaks at vent, replace the hydraulic oil plug and o-ring.

