



Reversible Plate Compactors (HONDA Engine) Maintenance Instructions

The following instructions are intended to assist the user in maintaining Multiquip Reversible Plate Compactors with Honda engines. See list below for applicable Models.

Models: MVH-R60H, MVH-R60HW, MVH-120GH, MVH-150GH, MVH-200GH, MVH-304GHB, MVH-306GH, MVH402GHB.

Engine/Plate Compactor Maintenance Schedule								
DESCRIPTION	OPERATION	BEFORE EACH USE	FIRST MONTH OR 20 HRS.	EVERY 3 MONTHS OR 50 HRS.	EVERY 6 MONTHS OR 100 HRS.	EVERY YEAR OR 200 HRS.	300 HRS	
Engine Oil	CHECK	X						
	CHANGE		X		X			
Air Cleaner	CHECK	X						
	CLEAN			X (1)				
	CHANGE					X		
Spark Plug	CHECK-CLEAN				X			
	REPLACE					X		
Idle Speed	CHECK-ADJUST					X (2)		
Valve Clearance	CHECK-ADJUST					X (2)		
Combustion Chamber	CLEAN	After every 300 Hours (2)						
Fuel Tank	CLEAN				X (2)			
Fuel Filter	CHECK				X (2)			
Fuel lines	CHECK	Every 2 years (replace if necessary) (2)						
Compaction Plate	CLEAN	X						
Bolts & Screws	CHECK	X						
Controls	CHECK	X						
Vibrator Oil	CHECK				X			
	REPLACE						X	
Hydraulic System	CHECK FOR LEAKS				X			
Hydraulic Oil	CHECK					X		
V-Belt & Clutch	CHECK					X		

(1) Service more frequently when used in **DUSTY** areas.

(2) These items should be serviced by your service dealer, unless you have the proper tools and are mechanically proficient. Refer to the HONDA Shop Manual for service procedures.



MULTIQUIP INC.

POST OFFICE BOX 6254 • CARSON, CA 90749
310-537-3700 • 800-421-1244 • FAX: 310-537-3927
E-MAIL: mq@multiquip.com • WWW: multiquip.com
Montreal, Canada • Manchester, UK
Rio De Janeiro, Brazil • Cipsa, Mexico