



Trash Pumps (HONDA Engine) Maintenance Instructions

The following instructions are intended to assist the user in maintaining Multiquip Trash Pumps with Honda engines. See list below for applicable Models.

Models: QP-2TH, QP-3TH, QP-40TH, QP-202TH, QP-301TH.

Engine/Trash Pump Maintenance Schedule								
DESCRIPTION	OPERATION	BEFORE EACH USE	AFTER EACH USE	FIRST MONTH OR 20 HRS.	FIRST 50 HRS.	EVERY 3 MONTHS OR 50 HRS.	EVERY 6 MONTHS OR 100 HRS.	EVERY YEAR OR 200 HRS.
Engine Oil	CHECK	X						
	CHANGE			X			X	
Air Cleaner	CHECK	X						
	CLEAN					X (1)		
	CHANGE							X
Spark Plug	CHECK-CLEAN						X	
	REPLACE							X
Idle Speed	CHECK-ADJUST							X (2)
Valve Clearance	CHECK-ADJUST							X (2)
Combustion Chamber	CLEAN	After every 300 Hours (2)						
Fuel Tank	CLEAN						X (2)	
Fuel Filter	CHECK						X (2)	
Fuel lines	CHECK	Every 2 years (replace if necessary) (2)						
Pump	CLEAN		X					
Impeller	CHECK						X	

(1) Service more frequently when used in **DUSTY** areas.

(2) These items should be serviced by your service dealer, unless you have the proper tools and are mechanically proficient. Refer to the HONDA Shop Manual for service procedures.



MULTIQUIP INC.

POST OFFICE BOX 6254 • CARSON, CA 90749
310-537-3700 • 800-421-1244 • FAX: 310-537-3927
E-MAIL: mq@multiquip.com • WWW: multiquip.com
Montreal, Canada • Manchester, UK
Rio De Janeiro, Brazil • Cipsa, Mexico