



This bulletin is provided for technical reference and service related updates. If you have any questions, comments or do not wish to receive these e-mails, please reply to this e-mail or call the Service Technical Support Group 800 478-1244.

STUB SHAFT REMOVAL

Removal of inner impeller casing cover exposes pump stub shaft, the pump stub shaft is threaded to engine crank, right hand threads.

