


FUEL ELECTRO-VALVE TESTING

The fuel electro-valve has a solenoid that requires 12V power to operate
MQ PART# 3587119

OPERATION

- With 12V power supplied = engine runs
- No power supplied = engine stops

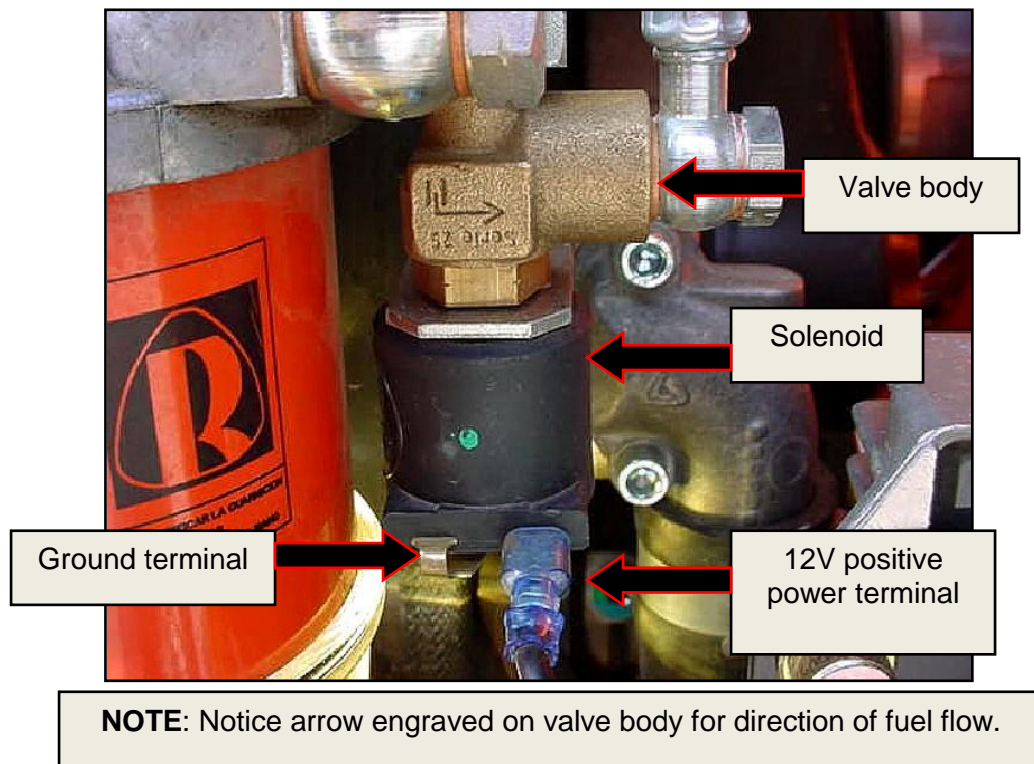

TESTING SOLENOID

With engine running, unplug the wire connected to the solenoid terminal to see if the engine shuts down.

If engine turns over but does not start:

- The solenoid has power supplied with key switched on, listen for audible click when power is applied.
- If solenoid is not activating disconnect the wire connected to the solenoid, use a 12V test light or meter and check if power is present at this wire when key is switched on.