

GOVERNOR ADJUSTMENT

This documentation can be used as a guide how to adjust the governor on both engines

1. Turn the speed control lever all the way toward the high speed position and fix it by tightening the self lock nut.
2. Check that the governor lever is pulled by the governor spring and carburetor throttle valve is fully open.
3. Turn the governor shaft clockwise all the way using a screw driver, and tighten lock bolt to secure the lever on the shaft.
4. Loosen the self lock nut to allow the speed control lever to move freely.

Max engine RPM: (3600 ± 100)

