



HOW TO MANUALLY PRIME THE FUEL SYSTEM

1. Unscrew the manual priming pump handle above the fuel filter.



2. Pump the priming handle by pulling and pushing to pressurize the fuel system.





3. Crack open the bleeder screw on top of the fuel filter housing to release the air in the fuel system. Retighten the bleeder screw.



4. Repeat steps 2 and 3 until the air is removed from the fuel system.