



SENSING WIRES

These two submersible pumps are designed with an electrical wire array that provides a certain wire sensing connection option that Multiquip **DOES NOT** use.

The extra wires for this option can cause confusion when setting up the pump/control box for normal operations.

COMMON F.A.Q. RECEIVED IN TECHNICAL SUPPORT:

Q: where do these wires connect to?

A: these additional sensing wires are **NOT USED** and should be capped.

During the evolution of these two pumps, the sensing wires were changed is size and color (there is no serial number break to define the change).

Reference photos below to identify the un-used sensing wires that need to be capped during installation.

