



Skid-Mounted Generators

Transporting Instructions

The following instructions are intended to assist the user in transporting skid-mounted generators. Please read all instructions before transporting.

Figure 1 shows typical generators mounted on skids.

Lift generator using fork pockets or lifting eye only. Ensure lifting straps/chains are rated for the load requirements.

**DO NOT TRANSPORT USING ROLLBACK TRUCKS.
DO NOT PULL OR DRAG THE SKID AS DAMAGE WILL OCCUR.**

When transporting skid-mounted generators on a flatbed, secure tie-down chains to the four tie-down points on the skid and then connect to the flatbed. Make sure they are secured to keep the skid from moving. To avoid damaging the skid, **DO NOT OVERTIGHTEN.**

NOTICE

Never secure the chains to any part of the skid other than through the approved corner tie-down points. Possible damage may occur.

NOTICE

Ensure generator is level during transport.

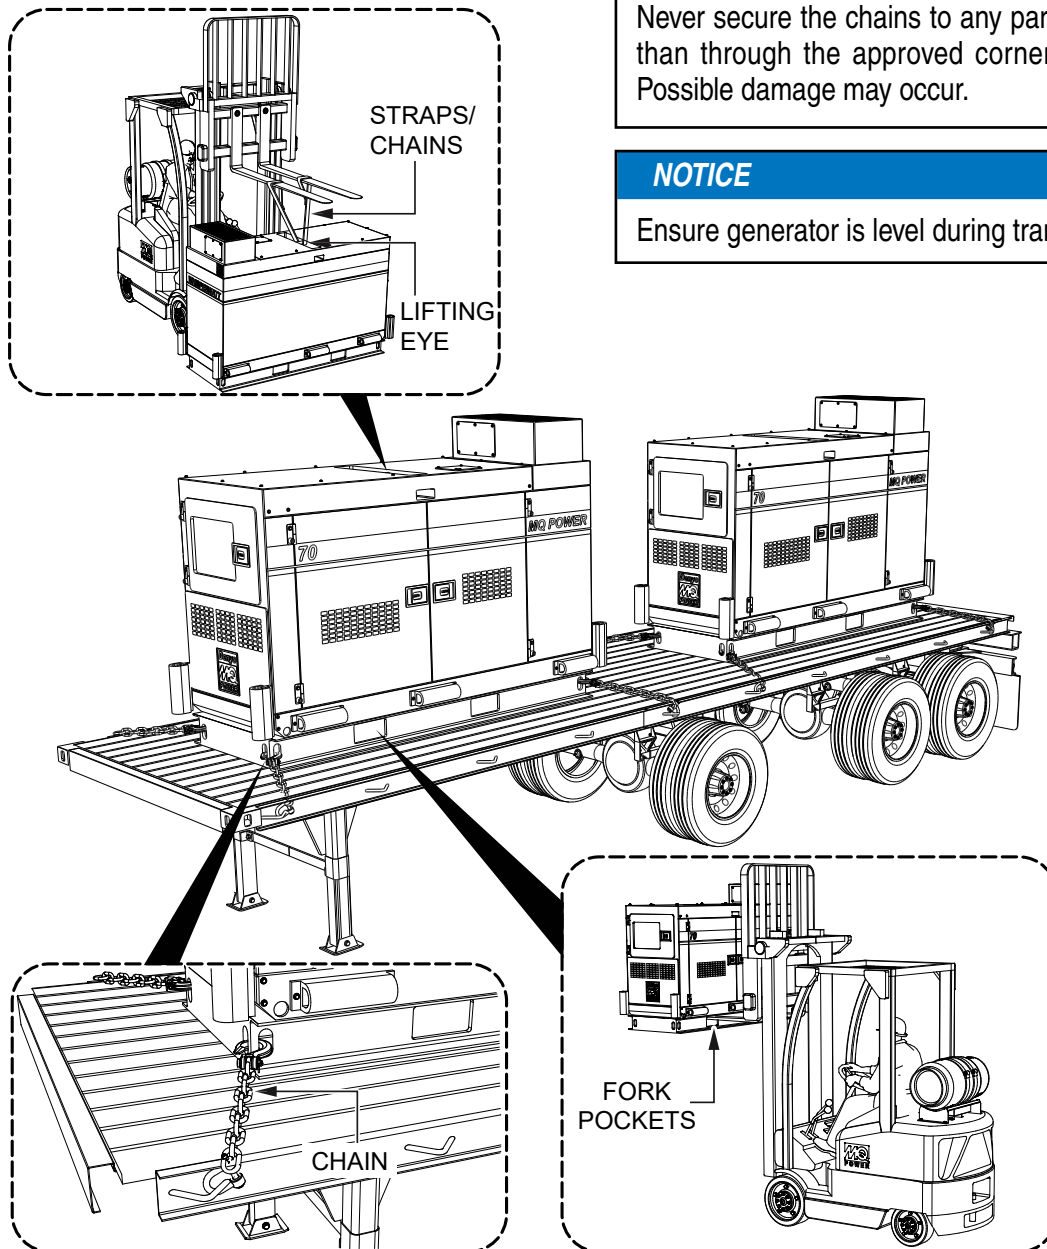


Figure 1. Transporting Skid-Mounted Generators



Skid-Mount Generators

Transporting Instructions

HERE'S HOW TO GET HELP

PLEASE HAVE THE MODEL AND SERIAL
NUMBER ON-HAND WHEN CALLING

UNITED STATES

Multiquip Inc.

(310) 537- 3700
6141 Katella Avenue Suite 200
Cypress, CA 90630
E-MAIL: mq@multiquip.com
WEBSITE: www.multiquip.com

CANADA

Multiquip

(450) 625-2244
4110 Industriel Boul.
Laval, Quebec, Canada H7L 6V3
E-MAIL: infocanada@multiquip.com

UNITED KINGDOM

Multiquip (UK) Limited Head Office

0161 339 2223
Unit 2, Northpoint Industrial Estate,
Globe Lane,
Dukinfield, Cheshire SK16 4UJ
E-MAIL: sales@multiquip.co.uk

© COPYRIGHT 2021, MULTQUIP INC.

Multiquip Inc, the MQ logo and the MQ Power logo are registered trademarks of Multiquip Inc. and may not be used, reproduced, or altered without written permission. All other trademarks are the property of their respective owners and used with permission.

This manual MUST accompany the equipment at all times. This manual is considered a permanent part of the equipment and should remain with the unit if resold.

The information and specifications included in this publication were in effect at the time of approval for printing. Illustrations, descriptions, references and technical data contained in this manual are for guidance only and may not be considered as binding. Multiquip Inc. reserves the right to discontinue or change specifications, design or the information published in this publication at any time without notice and without incurring any obligations.

