



Walk-Behind Trowels (HONDA Engine) Maintenance Instructions

The following instructions are intended to assist the user in maintaining Multiquip Walk-Behind Trowels with Honda engines.

Engine/Walk-Behind Trowel Maintenance Schedule							
DESCRIPTION	OPERATION	BEFORE EACH USE	WEEEKLY	EVERY MONTH	EVERY 3 MONTHS OR 50 HRS.	EVERY 6 MONTHS OR 100 HRS.	EVERY YEAR OR 200 HRS.
Engine Oil	CHECK	X					
	CHANGE			X (INITIALLY)		X	
Air Cleaner	CHECK	X					
	CLEAN				X (1)		
	CHANGE						X
Spark Plug	CHECK-CLEAN					X	
	REPLACE						X
Idle Speed	CHECK-ADJUST						X (2)
Valve Clearance	CHECK-ADJUST						X (2)
Combustion Chamber	CLEAN	After every 300 Hours (2)					
Fuel Tank	CLEAN					X (2)	
Fuel Filter	CHECK					X (2)	
Fuel lines	CHECK	Every 2 years (replace if necessary) (2)					
Gear Box Oil	CHECK & REFILL	X					
V-Belt	CHECK	X					
Thrust Collar & Cutch	LUBRICATE		X				
	CLEAN			X			
Blades	ADJUST ARMS			X			
	ADJUST SPEED						X (2000-2500 hrs)
Arm Bushings, Thrust Collar Bushings, Shaft Seals	CHECK & REPLACE IF NECESSARY						X (2000-2500 hrs)
Pitch Control Cables	CHECK						X (2000-2500 hrs)

(1) Service more frequently when used in **DUSTY** areas.

(2) These items should be serviced by your service dealer, unless you have the proper tools and are mechanically proficient. Refer to the HONDA Shop Manual for service procedures.



MULTIQUIP INC.

POST OFFICE BOX 6254 • CARSON, CA 90749
310-537-3700 • 800-421-1244 • FAX: 310-537-3927
E-MAIL: mq@multiquip.com • WWW: multiquip.com
Montreal, Canada • Manchester, UK
Rio De Janeiro, Brazil • Cipsa, Mexico