


WBH-16EAWD POWER BUGGY — ELECTRIC WIRING DIAGRAM

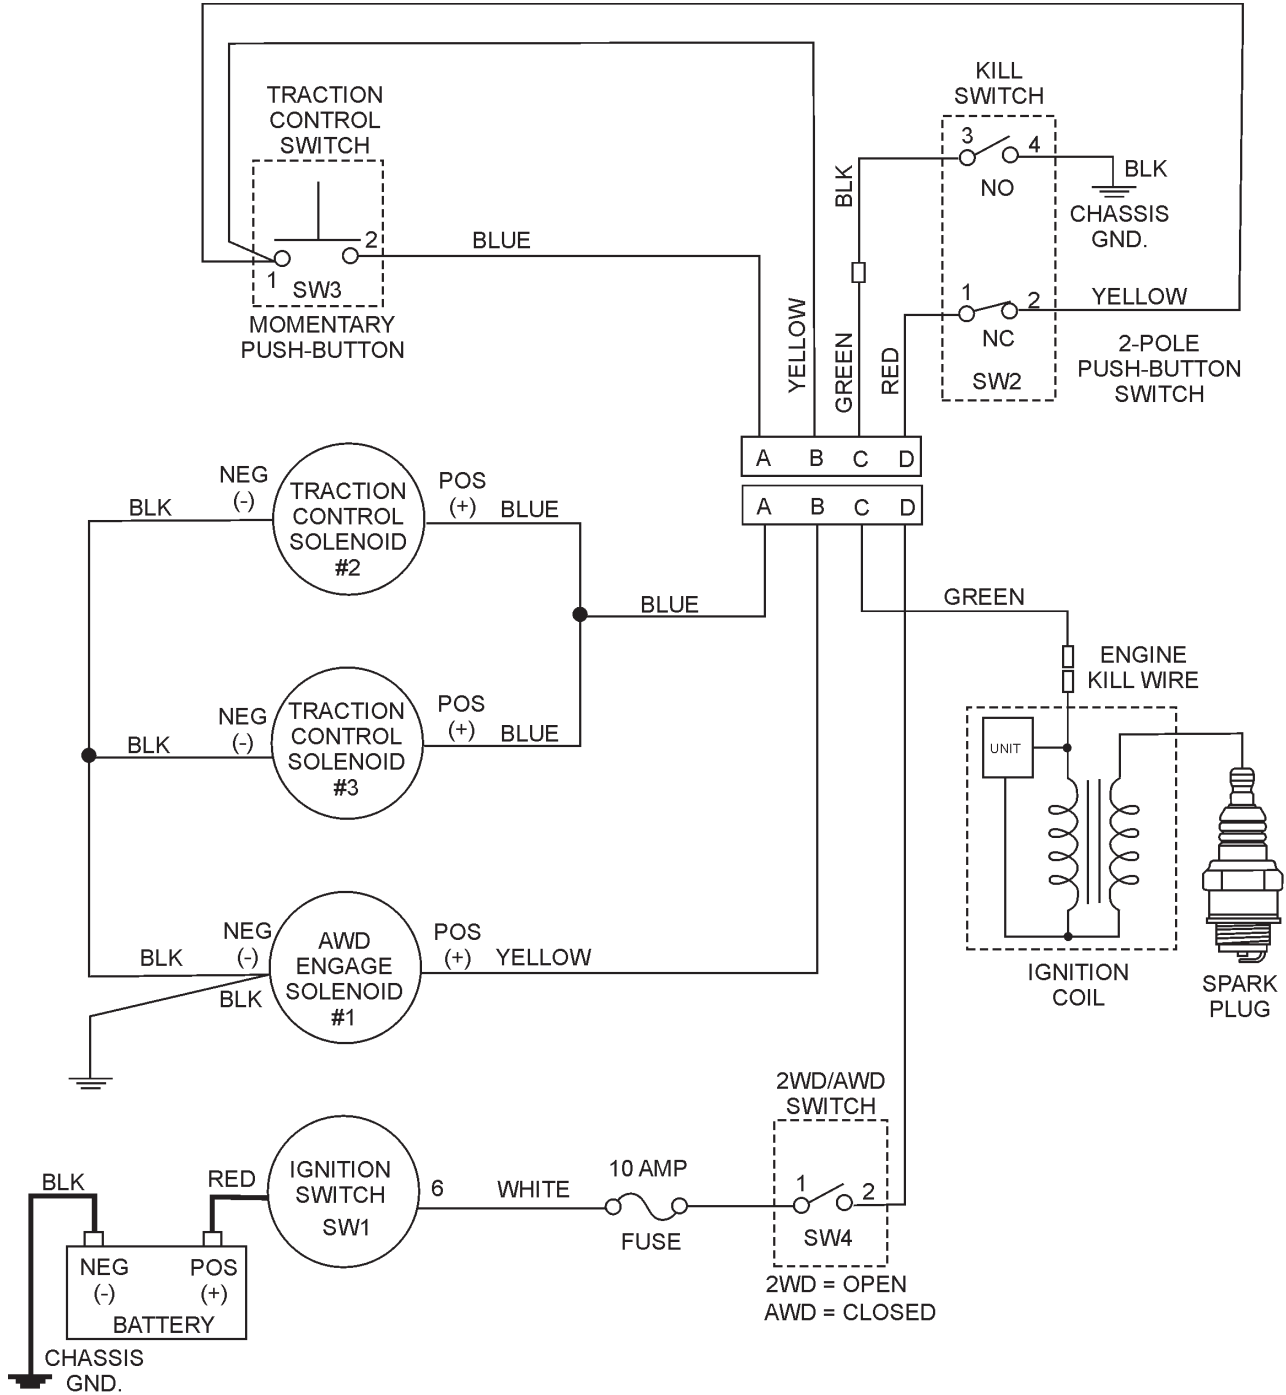

NOTES:

1. WHEN 2WD/AWD SWITCH(SW4) IS OPEN, UNIT WILL OPERATE IN 2WD MODE ONLY.
2. WHEN 2WD/AWD SWITCH IS PLACED IN THE AWD POSITION (CLOSED), +12VDC WILL BE SUPPLIED TO THE AWD SOLENOID #1 AND TO THE TRACTION CONTROL MOMENTARY PUSH-BUTTON SWITCH (SW3). NOTE KILL SWITCH MUST BE IN THE PULLED- OUT POSITION (CONTACTS 1 AND 2 CLOSED)
3. PRESSING THE TRACTION CONTROL MOMENTARY SWITCH (SW3) WILL ACTIVATE TRACTION CONTROL SOLENOIDS 2 AND 3.
4. ALL WIRES ARE 12 AWG. UNLESS OTHERWISE SPECIFIED