

 
HYDRAULIC PRESSURE GAUGE PORT ADAPTORS

The following fittings can be used to inspect hydraulic system pressures. The part numbers are universal and can be obtained from any industry hydraulic fitting supplier.

CHARGE PUMP / DUMP • PRESSURE GAUGE SETUP CONNECTS TO DUMP CYLINDER

For instruction on how to inspect the dump cylinder pressure see Technical Information document titled:

“TI_WBH_Dump_Cylinder_Charge_Pump_PSI_Test”

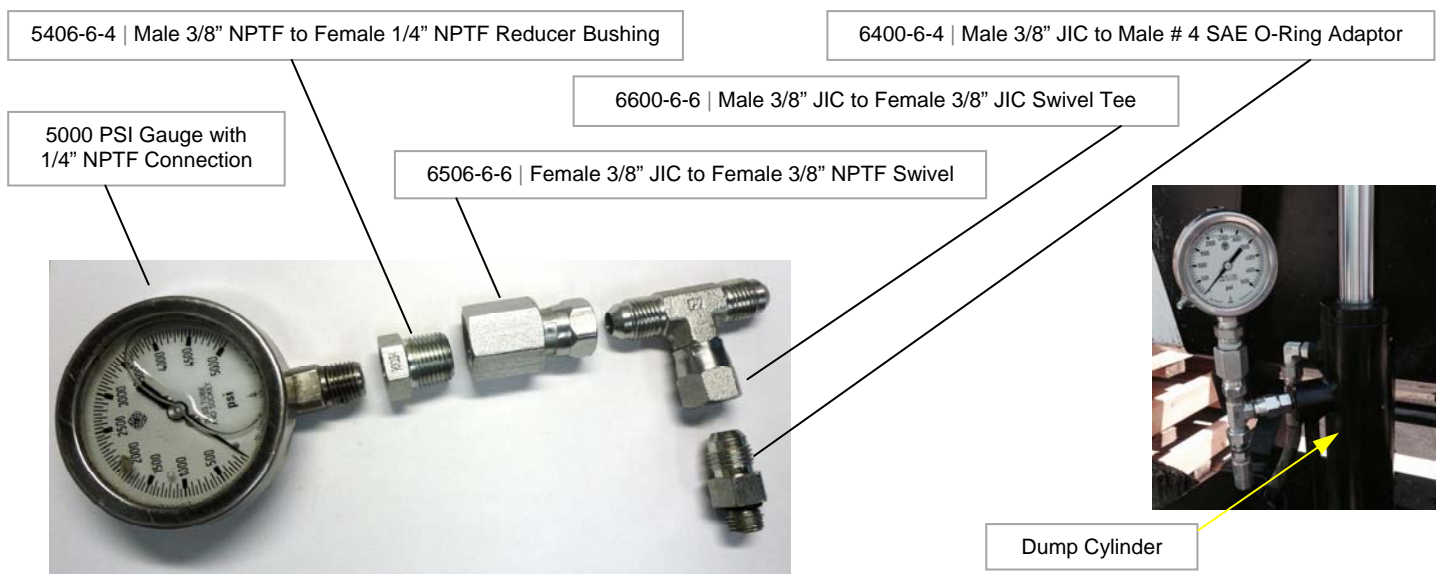

MAIN PUMP / DRIVE • PRESSURE GAUGE SETUP CONNECTS TO DIRECTIONAL CONTROL VALVE

For instruction on how to inspect the main pump pressure see Technical Information document titled:

“TI_WBH_Main_Pump_PSI_Test”

