

## TROUBLESHOOTING GLOBUG LIGHTING SYSTEMS



**GB3LED**

300W LED, Diffuser Balloon Light, Tripod Stand w/ 3-stage mast assembly



**GB3LEDB**

300W LED, Diffuser Balloon Light Assembly only – no stand




**GB3LEDC**

300W LED, Diffuser Balloon Light, Cart Mounted w/ 3-stage mast assembly

### Faulty Operation Lamp


Ⓢ Please do not use other equipment while doing the test

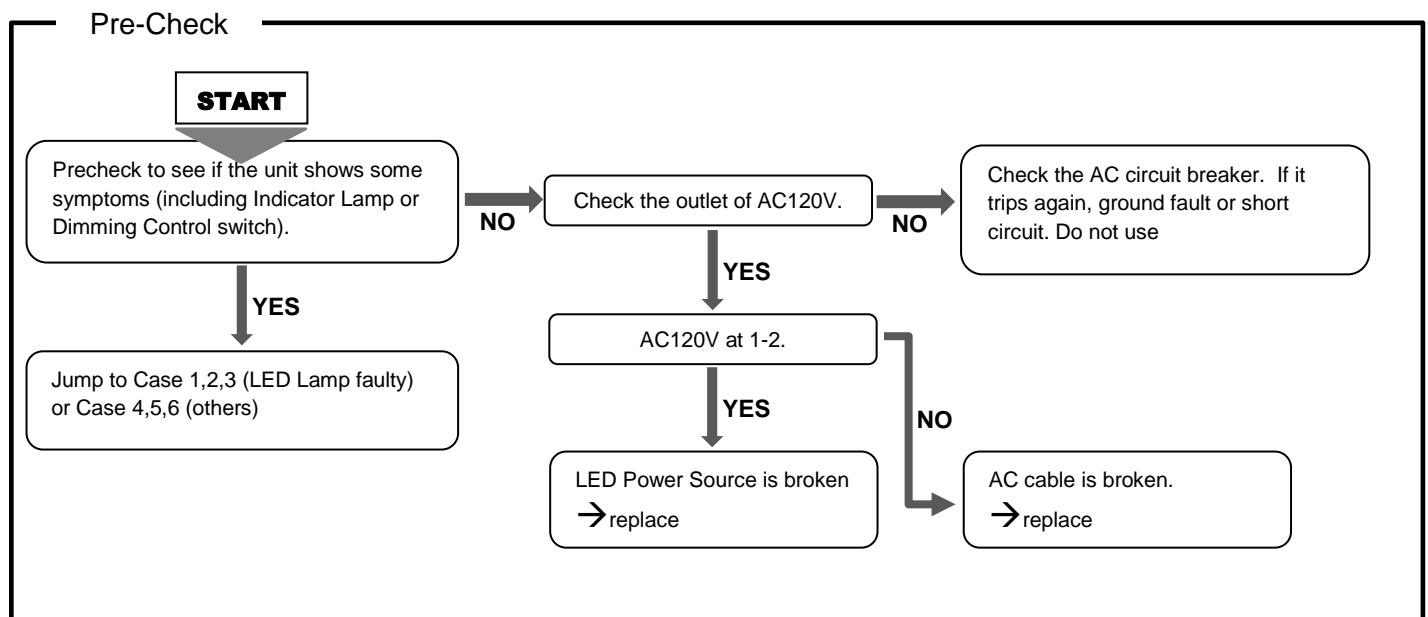

## Lamp is not working


### CASE1

Every LED Lamp is not working.

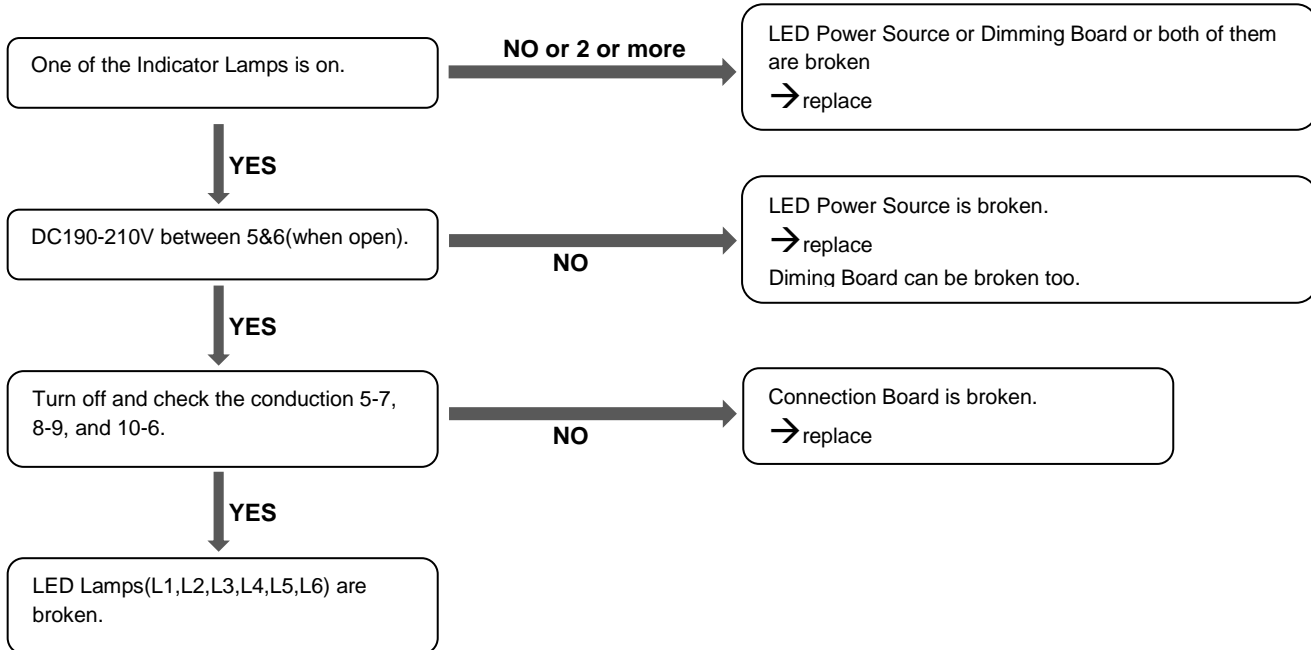

### CASE2

Entire 1 or 2 boards of LED Lamps are not working.

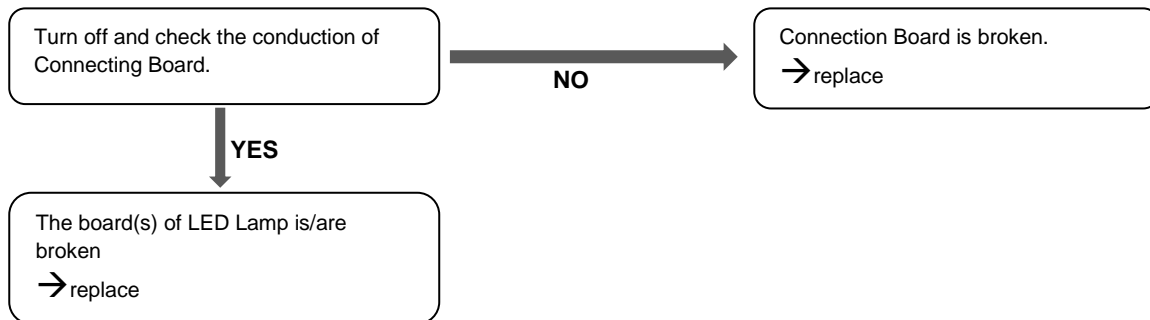

### CASE3


One or some LED chips are not working.

The chip(s) is/are broken.  
→ replace the LED Lamp board(s).

## Fan is not operating

### CASE4


Fan is not working

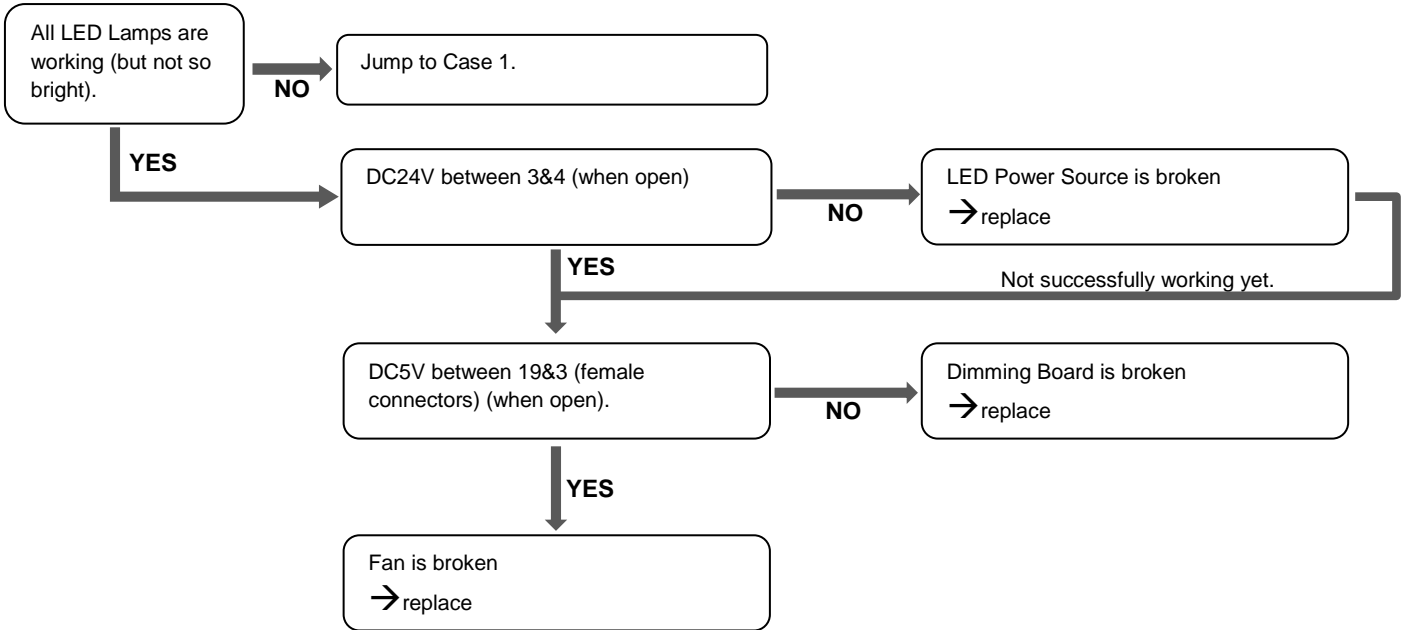

## Troubles on dimming control

### CASE5


Dimming Control Switch does not work

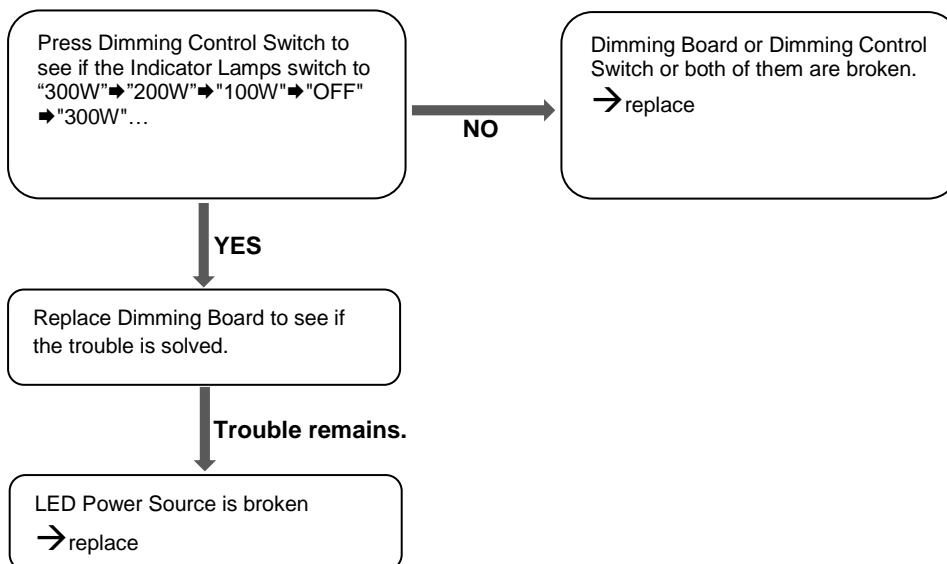

## Silent mode is broken


### CASE6

It cannot be switched to the silent mode.

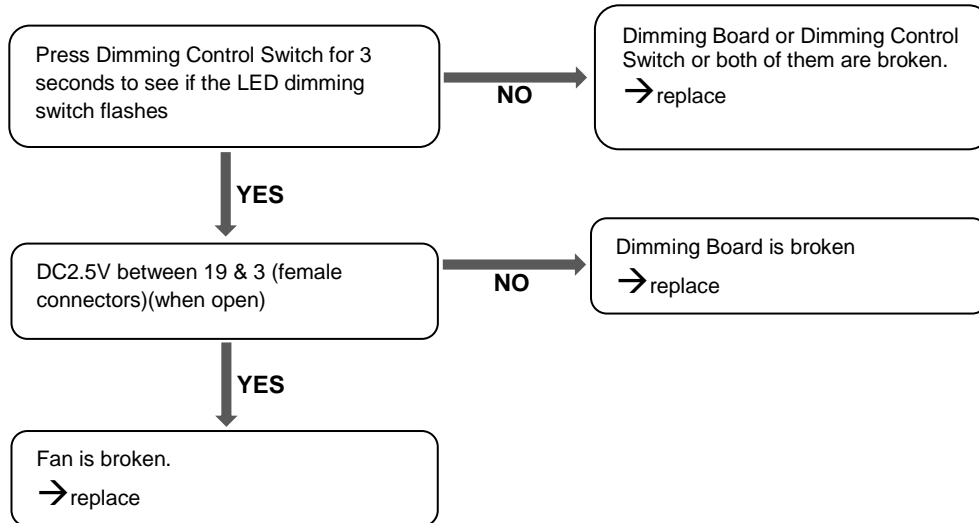

Continue to next page.....

## Wiring Diagram

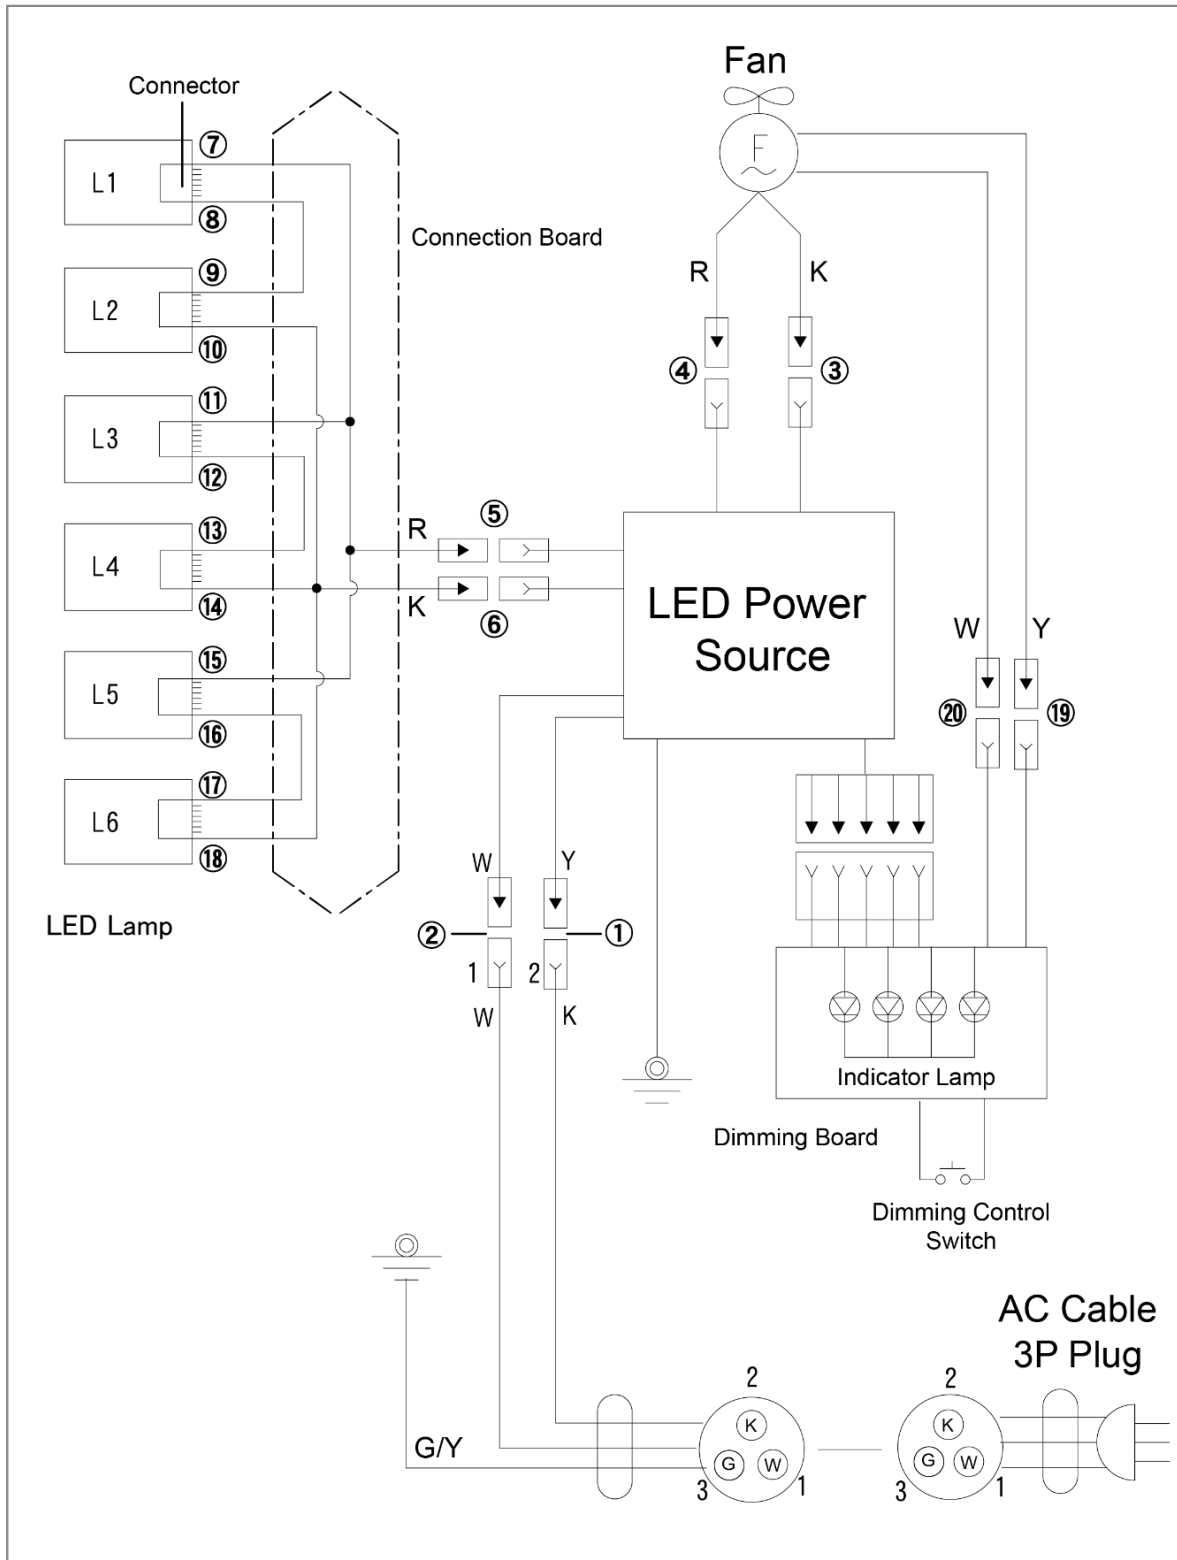

R : RED  
 K : BLACK  
 Y : YELLOW  
 W : WHITE  
 G/Y : GREEN/YELLOW