

# OPERATION MANUAL



## StreetPro Series MODELS

**SP706016**

**SP706020**

**SP706026**

**SP706030**

**SP706036**

## **PROFESSIONAL PAVEMENT SAW** **(DEUTZ BF3L2011 DIESEL ENGINE)**

Revision #0 (02/13/09)

To find the latest revision of this  
publication, visit our website at:  
[www.multiquip.com](http://www.multiquip.com)



**THIS MANUAL MUST ACCOMPANY THE EQUIPMENT AT ALL TIMES.**

**P/N 38260**



## **CALIFORNIA — Proposition 65 Warning**


Engine exhaust and some of its constituents, and some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to the State of California to cause cancer, birth defects and other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks.
- Cement and other masonry products.
- Arsenic and chromium from chemically treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: **ALWAYS** work in a well ventilated area, and work with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles.

# SILICOSIS/RESPIRATORY WARNINGS


**! WARNING**



**SILICOSIS WARNING**

Grinding/cutting/drilling of masonry, concrete, metal and other materials with silica in their composition may give off dust or mists containing crystalline silica. Silica is a basic component of sand, quartz, brick clay, granite and numerous other minerals and rocks. Repeated and/or substantial inhalation of airborne crystalline silica can cause serious or fatal respiratory diseases, including silicosis. In addition, California and some other authorities have listed respirable crystalline silica as a substance known to cause cancer. When cutting such materials, always follow the respiratory precautions mentioned above.

**! WARNING**



**RESPIRATORY HAZARDS**

Grinding/cutting/drilling of masonry, concrete, metal and other materials can generate dust, mists and fumes containing chemicals known to cause serious or fatal injury or illness, such as respiratory disease, cancer, birth defects or other reproductive harm. If you are unfamiliar with the risks associated with the particular process and/or material being cut or the composition of the tool being used, review the material safety data sheet and/or consult your employer, the material manufacturer/supplier, governmental agencies such as OSHA and NIOSH and other sources on hazardous materials. California and some other authorities, for instance, have published lists of substances known to cause cancer, reproductive toxicity, or other harmful effects.

Control dust, mist and fumes at the source where possible. In this regard use good work practices and follow the recommendations of the manufacturers or suppliers, OSHA/NIOSH, and occupational and trade associations. Water should be used for dust suppression when wet cutting is feasible. When the hazards from inhalation of dust, mists and fumes cannot be eliminated, the operator and any bystanders should always wear a respirator approved by NIOSH/MSHA for the materials being used.

# TABLE OF CONTENTS

## SP7060 StreetPro Series Professional Pavement Saw

Proposition 65 Warning .....	2
Silicosis/Respiratory Warnings .....	3
Table of Contents .....	4
Training Checklist .....	6
Daily Pre-Operation Checklist .....	7
Safety .....	8-9
Rules and Regulations .....	10-14
Dimensions .....	15
Specifications .....	16
Engine Specifications .....	17
Intended Use / Familiarization .....	18
Serial Tag Information .....	19
Controls and Indicators .....	20
Components .....	21
Basic Engine Information .....	22
Choosing Proper Blade Size .....	23-24
Specific Tools / Saw Blades .....	25
Installing the Blade .....	26-27
Blade Guards .....	28-29
Water Delivery System .....	30
Stay-level handlebars .....	31
Battery .....	31
Fueling the Saw .....	32
Cold Weather Operation .....	33
Pointer Adjustment .....	33
Raise-Lower Controls .....	34
Blade shaft Engage System .....	35
Wheel Drive System .....	35
Operation .....	36-37
Loading and Transporting .....	38
Maintenance .....	39-55
Troubleshooting (Engine) .....	56-57
Troubleshooting (Blade) .....	58
Electrical Diagram to SN AF3700155 .....	60
Electrical Diagram SN AF3700156 and Up .....	61
Hydraulic Schematic to SN AF3700155 .....	62
Hydraulic Schematic SN AF3700156 and Up .....	63



Specifications are subject to change without notice.



# TRAINING CHECKLIST

## TRAINING CHECKLIST

This checklist lists the minimum requirements for machine maintenance and operation. Please feel free to detach it and make copies. Use this checklist when training a new operator or use as a review for more experienced operators.

Training Checklist			
No.	Description	OK?	Date
1	Read Operator's Manual completely.		
2	Machine layout, location of components, checking of engine and hydraulic oil levels.		
3	Fuel system, refueling procedure.		
4	Operation of spray and lights.		
5	Operation of controls (machine not running).		
6	Safety controls, safety stop switch operation.		
7	Emergency stop procedures.		
8	Startup of machine, pre-heat, engine choke.		
9	Forward and Reverse Travel.		
10	Starting a cut.		
11	Pavement Cutting techniques.		
12	Stopping a cut.		
13	Re-start after stopping blade within work surface - explanation.		
14	Shutdown of machine.		
15	Lifting of machine (lift loops).		
16	Machine transport and storage.		

Operator \_\_\_\_\_ Trainee \_\_\_\_\_

COMMENTS:

# DAILY PRE-OPERATION CHECKLIST


## DAILY PRE-OPERATION CHECKLIST

Daily Pre-Operation Checklist		✓	✓	✓	✓	✓	✓
1	Hardware and damage check.						
2	Engine oil level.						
3	Hydraulic oil level.						
4	Condition of blade.						
5	Safety Stop Switch operation.						
6	Braking control operation.						

COMMENTS:

## FOR YOUR SAFETY AND SAFETY OF OTHERS!

Safety precautions should be followed at all times when operating this equipment. Failure to read and understand the safety messages and operating instructions could result in injury to yourself and others.

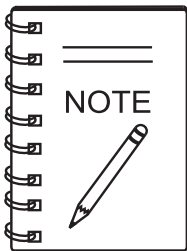

This manual has been developed to provide complete instructions for the safe and efficient operation of this equipment. Refer to the engine manufacturer's instructions for data relative to its safe operation.

Before using this equipment ensure that the operating individual has read and understood all instructions in this manual.

## SAFETY MESSAGE ALERT SYMBOLS

The three Safety Messages shown below will inform you about potential hazards that could injure you or others. The Safety Messages specifically address the level of exposure to the operator, and are preceded by one of three words: **DANGER**, **WARNING**, or **CAUTION**.

### **DANGER**

You **WILL** be **KILLED** or **SERIOUSLY INJURED** if you **DO NOT** follow these directions.

### **WARNING**

You **CAN** be **KILLED** or **SERIOUSLY INJURED** if you **DO NOT** follow these directions.

### **CAUTION**

You **CAN** be **INJURED** if you **DO NOT** follow these directions.

## HAZARD SYMBOLS

Potential hazards associated with the operation of this equipment will be referenced with Hazard Symbols which appear throughout this manual, and will be referenced in conjunction with Safety Message Alert Symbols.

### **WARNING — Lethal Exhaust Gas Hazards**



Engine fuel exhaust gases contain poisonous carbon monoxide. This gas is colorless and odorless, and can cause death if inhaled. **NEVER** operate this equipment in a confined area or enclosed structure that does not provide ample free flow of air.

### **WARNING — Explosive Fuel Hazards**



Fuel is extremely flammable and its vapors can cause an explosion if ignited. **DO NOT** start the engine near spilled fuel or combustible fluids.

**DO NOT** fill the fuel tank while the engine is running or hot. **DO NOT** overfill tank, since spilled fuel could ignite if it comes into contact with hot engine parts or sparks from the ignition system. Store fuel in approved containers, in well-ventilated areas and away from sparks and flames.

### **WARNING — Burn Hazards**



Engine components can generate extreme heat. To prevent burns, **DO NOT** touch these areas while the engine is running or immediately after operation. Never operate the engine with heat shields or heat guards removed.

### **WARNING — Respiratory Hazards**



**ALWAYS** wear approved respiratory protection when required.



## ⚠ CAUTION — Rotating Blade



Rotating blade can cut and crush. Keep hands and feet clear.

## ⚠ CAUTION — Accidental Starting Hazards



Accidental starts can cause severe injury or death. **ALWAYS** place the equipment ON/OFF switch in the OFF position when the equipment is not in use. Disconnect negative battery cable from battery before servicing

## ⚠ CAUTION — Eye and Hearing Hazards



**ALWAYS** wear approved eye and hearing protection when required.

## ⚠ WARNING — Crush Hazard



**ALWAYS** ensure saw is **SECURELY** placed on appropriate blocks or jackstands when performing maintenance requiring the saw to be elevated.

## ⚠ CAUTION — Overspeed Conditions



**NEVER** tamper with the factory setting of the engine governor. Personal injury and equipment damage can result if operating in speed ranges above the maximum allowable.

## ⚠ WARNING — Skin Injection Hazards



**NEVER** use your hand to find hydraulic leaks. Use a piece of wood or cardboard. Hydraulic fluid injected into the skin must be treated by a knowledgeable physician immediately or severe injury or death can occur.

## ⚠ CAUTION — Guards and Covers in Place



**NEVER** operate the saw without blade guards and covers in place. Adhere to safety guidelines and applicable local regulations.

## ⚠ CAUTION — Equipment Damage Hazards

Other important messages are provided throughout this manual to help prevent damage to your equipment, other property or the surrounding environment.

# RULES AND REGULATIONS

## **WARNING — Read This Manual**

Failure to follow instructions in this manual may lead to serious injury or even **DEATH!** This equipment is to be operated by trained and qualified personnel only! This equipment is for industrial use only.

### GENERAL SAFETY

■ **DO NOT** operate or service this equipment before reading this entire manual.



■ This equipment should not be operated by persons under 18 years of age.

■ **NEVER** operate this equipment without proper protective clothing, shatterproof glasses, steel-toed boots and other protective devices required by the job.



■ **NEVER** operate this equipment when not feeling well due to fatigue, illness or when under medication.



■ **NEVER** operate this equipment under the influence of drugs or alcohol.



■ **NEVER** disconnect any “**emergency or safety devices.**” These devices are intended for operator safety. Disconnection of these devices can cause severe injury, bodily harm or even death! Disconnection of any of these devices will void all warranties.

■ **NEVER** use accessories or attachments that are not recommended by Multiquip for this equipment. Damage to the equipment and/or injury to user may result.

■ Manufacturer does not assume responsibility for any accident due to equipment modifications. Unauthorized equipment modification will void all warranties. Any modification which could lead to a change in the original characteristics of the machine should be made only by the manufacturer who shall confirm that the machine is in conformity with appropriate safety regulations.

■ Whenever necessary, replace nameplate, operation and safety decals when they become difficult to read.

■ **ALWAYS** check the equipment for loosened threads or bolts before starting.



■ **NEVER** touch the hot exhaust manifold, muffler or cylinder. Allow these parts to cool before servicing engine or pump.

■ **ALWAYS** allow the engine to cool before adding fuel or performing service and maintenance functions. Contact with **hot** components can cause serious burns.

■ **NEVER** operate this equipment in any enclosed or narrow area where free flow of the air is restricted. The engine of this equipment requires an adequate free flow of cooling air. If the air flow is restricted it will cause serious damage to the equipment or engine and may cause injury to people and property. Remember the engine gives off **DEADLY** gases.



■ **ALWAYS** refuel in a well-ventilated area, away from sparks and open flames.

■ **ALWAYS** use extreme caution when working with **flammable** liquids. When refueling, **stop** the engine and allow it to cool.

■ **DO NOT** smoke around or near the equipment. Fire or explosion could result from fuel vapors, or if fuel is spilled on a hot engine.



■ **NEVER** operate the equipment in an explosive atmosphere or near combustible materials. An explosion or fire could result causing severe **bodily harm or even death.**





■ **AVOID** wearing jewelry or loose fitting clothing that may snag on the controls or moving parts. This can cause serious injury.

■ Make certain the operator knows how to and is capable of turning the engine OFF in case of an emergency.

■ **DO NOT** top-off fuel tank. Topping-off is dangerous as it causes fuel to spill.

## RULES AND REGULATIONS

- **NEVER** use fuel as a cleaning agent.
- **ALWAYS** store the equipment in a clean, dry location out of the reach of children.
- **NEVER** run engine without air cleaner or air filter. Severe engine damage may occur. Service air cleaner at recommended service intervals to prevent engine damage.
- **NEVER** leave the equipment unattended with the engine running. Turn off engine when unattended.
- **CAUTION** must always be observed while servicing this equipment. Rotating parts can cause injury if contacted.
- **ALWAYS** keep the work area well-organized.
- Keep the saw clean. It will perform better and last longer.
- **ALWAYS** check to make sure that the cutting area is clear before starting the engine. **ALWAYS** clear the cutting area of any debris, tools, etc. that would constitute a hazard while the saw is in operation.
- Keep all inexperienced and unauthorized people clear of the cutting area when operating the saw.
- No one other than the operator is to be in the working area when the saw is in operation.
- **NEVER** allow passengers or riders on the saw during operation or transportation.
- Make certain all protective guards are securely in place **BEFORE** operating the saw. This saw is supplied with a blade guard, blade flange guard and a belt guard.
- **NEVER** place your **feet** or **hands** inside the guards while starting or operating this equipment.
- **DO NOT** go near rotating parts, (blades, belts, pulleys or wheels), while engine is running.
- **Moving Parts** – Shut down the engine before performing service or maintenance functions. Contact with moving parts can cause serious injury. 
- **NEVER** touch the hot exhaust manifold, muffler or cylinder. Allow these parts to cool before servicing the saw. Contact with **hot!** components can cause serious burns. 
- Verify the engine start switch is set to the OFF position before installing a blade.
- Use proper blades and follow the blade manufacturer's recommendations. Match the blade RPM (blade shaft RPM) to the recommended blade surface feet per minute. (SFPM).
- Ensure the 5/8" blade-mounting bolt is tightened to 125-175 foot lbs. of torque.
- **NEVER** leave the machine **unattended** while running.
- Ensure brakes are applied when leaving or when using on a slope. This saw utilizes a brake system where the brakes are automatically applied when the engine is stopped.
- Start engine with the control handle in the NEUTRAL position to prevent unexpected saw movement.
- Do not start engine on a sloping surface to prevent unexpected loss of control.
- **DO NOT** use on excessive slopes or on extremely uneven surfaces.
- If the saw must be parked on a slope and engine turned off, ensure the parking brake is engaged and holds the saw safely in place. Turning the saw across the angle of the slope will help prevent accidental downhill movement. Block the saw as well when leaving.

# RULES AND REGULATIONS

- Always store equipment properly when not being used. Equipment should be stored in a clean, dry location out of the reach of children. When storing the saw in freezing weather, blow out the water lines to prevent damage to components in the water delivery system.
- **DON'T POLLUTE!** Waste Oils and other chemicals must be disposed of in a manner consistent with local and state environmental protection regulations.
- Always observe all applicable compulsory regulations relevant to environmental protection, especially fuel storage, the handling of hazardous substances, and the wearing of protective clothing and equipment. Instruct the user as necessary, or, as the user, request this information and training.

## DIAMOND BLADE SAFETY

- Use appropriate steel-centered diamond blades manufactured for particular use on your saw. See further blade information in this manual.

### **WARNING — Inspect Diamond Blades**



**ALWAYS** inspect diamond blades before each use. The blade should exhibit no cracks, dings, or flaws in the steel centered core and/or rim. Center (arbor) hole must be undamaged and true.

- Examine blade flanges for damage and excessive wear.
- Ensure the cleanliness of the blade before blade is installed. Blade should fit snugly on the shaft and against the inside/outside blade flanges.
- Ensure the blade is marked with an operating speed greater than the spindle speed of the saw.
- Only cut the material that is specified for the diamond blade. Read the specifications of the diamond blade to ensure the proper tool has been matched to the material being cut. The saw has been engineered for **WET CUTTING**. Ensure a **WET CUTTING** blade is being used and that the water supply system to the blade is properly functioning and being used.
- **ALWAYS** keep blade guards in place. Exposure of the diamond blade must not exceed 180 degrees.
- Ensure that the diamond blade does not come into contact with the ground or surface during transportation. **DO NOT** drop the diamond blade on ground or surface.
- The engine governor is set to permit maximum engine speed in a no-load condition. Do not tamper with the engine governor to increase the speed. Increasing the engine speed could allow the maximum rated spindle speed to be exceeded, creating an unsafe condition.
- Ensure that the blade is mounted for proper operating direction.
- Adhere to the blade manufacturer's recommendations on handling, storage, and safe usage of blades.

# RULES AND REGULATIONS

## SAW LIFTING AND LOADING SAFETY

### CAUTION — Lifting Saw

This saw is very **heavy**. Use proper heavy lifting procedures and **DO NOT** attempt to lift by the guards.

### DANGER — Do Not Stand Under Saw

**NEVER** stand under or allow anyone else to stand under the saw while it is being lifted.

- **DO NOT** use the handle bars and/or front pointer as lifting points.
- **ALWAYS** use ramps capable of supporting the weight of the saw and the operator to load and unload the saw.
- **NEVER** tip the engine to extreme angles as it may cause oil to gravitate into the cylinder head making the engine start difficult.

## TRANSPORTING (VIA TRUCK/TRAILER)

- **ALWAYS** shutdown engine before transporting.
- Tighten fuel tank cap securely and close fuel petcock to prevent fuel from spilling.
- Drain fuel when transporting saw for long distances or over bad roads.
- Use appropriate lifting equipment to ensure the safe movement of the saw.
- When placing the saw on a truck-bed for transport, **always** tie-down the saw.
- Do not use the handlebars or front pointer as tie-down points.
- Never attempt to tow the saw untrailerred behind a vehicle.
- **NEVER** transport the saw to or from the job site with the blade mounted.
- If the saw is being transported via a trailer, make sure the trailer complies with all local and state safety transportation laws. Refer to the following “**Towing Safety Precautions**” section for basic towing techniques.

## TOWING SAFETY PRECAUTIONS (TRAILER USAGE)

### CAUTION — Transporting Saw

Conform to **Department of Transportation (DOT) Safety Towing Regulations** before transporting saw on public roads.

To reduce the possibility of an accident while transporting the saw on public roads, always make sure the trailer that supports the saw and the towing vehicle are in good operating condition and both units are mechanically sound.

The following list of suggestions should be used when towing your saw:



- Check the tire air pressure on both towing vehicle and trailer. Refer to the tire manufacturer’s recommended pressure. Also check the tire tread wear on both vehicles.
- Make sure the hitch and coupling of the towing vehicle are rated equal to or greater than the trailer “gross vehicle weight rating” (GVWR) of 6,000 lbs.
- **ALWAYS** inspect the hitch and coupling for wear. **NEVER** tow a trailer with defective hitches, couplings, chains, etc.
- **ALWAYS** make sure the trailer is equipped with **Safety Chains** and ensure they are attached properly.
- **ALWAYS** make sure the vehicle and trailer directional, backup, brake, and trailer lights are connected and working.
- **DO NOT** exceed the recommended highway speed when towing.
- Use chock-blocks at each wheel when parked to prevent trailer from rolling.
- Use the trailer’s swivel jack to adjust the trailer height to a level position while parked.
- Avoid sudden stops and starts. This can cause the trailer to skid or jack-knife. Smooth, gradual starts and stops will improve towing.
- Avoid sharp turns.
- Trailer should be adjusted to a level position at all times when towing.
- Raise and lock trailer wheel stand in the “**UP**” position when transporting.
- DOT requirements include the following:
  - Connect and test electric brake operation.
  - Secure portable power cables in cable tray with tie wraps.



# RULES AND REGULATIONS

## BATTERY

The battery contains acids that can cause injury to the eyes and skin. To avoid eye irritation, **ALWAYS** wear safety glasses or face shielding. Use well insulated gloves when picking the battery up. Use the following guidelines when handling the battery.



- **DO NOT** drop the battery. Any impact to the battery may cause it to explode. 
- **DO NOT** expose the battery to open flames, sparks, lit cigarettes etc. The battery contains combustible gases and liquids. If these gases and liquids come in contact with a flame or spark, an explosion can occur.
- **ALWAYS** keep the battery charged. If the battery is not charged a buildup of combustible gas will occur.
- **ALWAYS** recharge the battery in a well-ventilated area to avoid risk of a dangerous concentration of combustible gases.
- **ALWAYS** keep battery cables in good working condition. Repair or replace all worn cables.
- Disconnect battery cables before inspecting electrical system and never “spark” battery terminals to test for charge. 
- If the battery liquid (dilute sulfuric acid) comes in contact with **clothing or skin**, rinse skin or clothing immediately with plenty of water. 
- If the battery liquid (dilute sulfuric acid) comes in contact with your **eyes**, rinse eyes immediately with plenty of water, then contact the nearest doctor or hospital and seek medical attention.

## MAINTENANCE SAFETY

- Maintain this equipment in a safe operating condition at all times.
- **ALWAYS** shut down the engine and disconnect battery before performing service or maintenance functions. Contact with moving parts can cause serious injury.
- Securely support any saw components that must be raised.


- **NEVER** lubricate components or attempt service on a running saw.
- **ALWAYS** allow the saw a proper amount of time to cool before servicing.
- Prior to service, level the frame surface.
- Anytime the saw is lifted onto its nose, or tilted fully back, such as for maintenance access, the high end of the saw **MUST** be blocked up to prevent the possibility of crush injury.
- Make sure that there is no buildup of concrete, grease, oil or debris on the machine.
- Repair damage to the saw immediately and always replace broken parts.
- Dispose of hazardous waste properly. Examples of potentially hazardous waste are used motor oil, fuel and fuel filters.
- **DO NOT** use plastic food containers to dispose of hazardous waste.
- **DO NOT** pour waste oil or fuel directly onto the ground, down a drain or into any water source.
- **NEVER** store saw with fuel in the tank for any extended period of time. Always clean up spilled fuel immediately.

## EMERGENCIES

- **ALWAYS** know the location of the nearest **fire extinguisher**. 
- **ALWAYS** know the location of the nearest **first aid kit**. 
- Know the phone numbers of the nearest **ambulance**, **doctor** and **fire department**. Ensure that a phone or radio is readily available at the jobsite. If this is not possible, know the location of the nearest phone. This information will be invaluable in the event of an emergency.



See Figures 1 and 2 and Table 1 for saw dimensions.

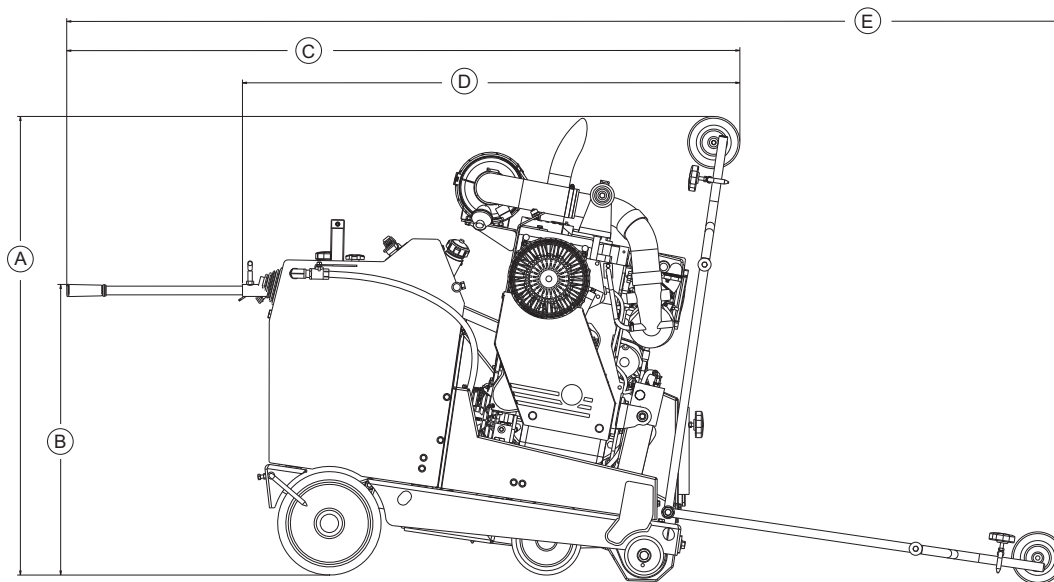

**Figure 1. Chassis and Dimensions — Side View**

TABLE 1. CHASSIS AND DIMENSIONS		
REFERENCE LETTER	DESCRIPTION	DIMENSIONS in. (mm)
A	Max Height (Front Pointer raised)	52-5/8 in. (1335 mm)
B	Max Handle Bar Height	33-3/8 in. (847 mm)
C	Max Length (Handle Bars Installed & Front Pointer fully raised)	77-1/4 in. (1962 mm)
D	Length (Handle Bars not Installed & Front Pointer fully raised)	57-1/8 in. (1450 mm)
E	Max Length (Handle Bars Installed & Front Pointer lowered)	114-1/4 in. (2901 mm)
F	Max Width	36-1/8 in. (918 mm)
G	Frame Width	30-1/8 in. (765 mm)
H	Frame Length	50 in. (1270 mm)
I	Front Wheel Width	28-1/8 in. (715 mm)
J	Rear Wheel Width	28-1/8 in. (715 mm)
K	Blade Shaft Inner Flange to Inner Flange Width	33-5/8 in. (855 mm)
	Handlebars	Stay-Level Handlebar System
	Console Mounting	Vibration Control System
	Chassis	Cold-Formed Welded Box Construction
	Night Light (M18004)	Optional
<b>Crated Dimension (L x W x H): 60 x 43 x 64 in. (1525 x 1090 x 1625 mm)</b>		

# SPECIFICATIONS

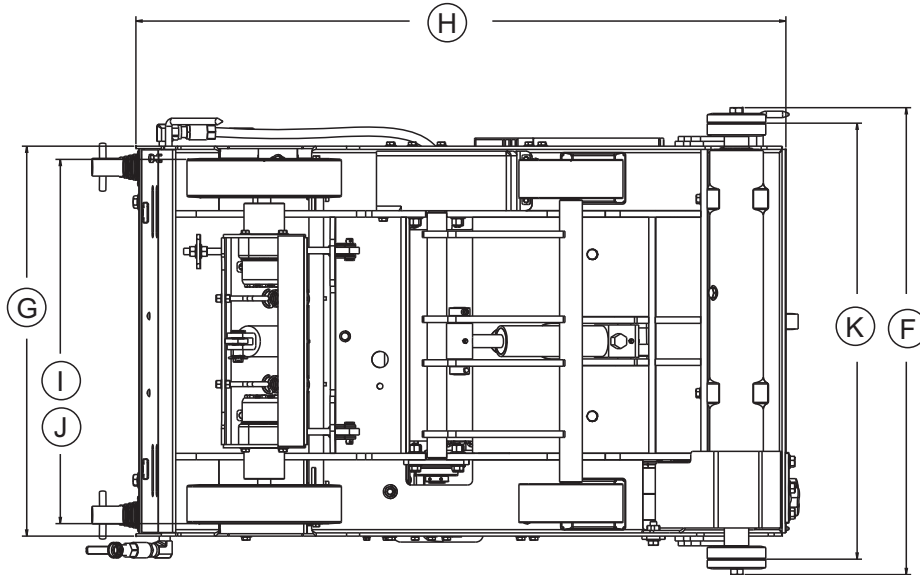


Figure 2. Chassis and Dimensions — Bottom View

TABLE 2. BLADE AND SHAFT SPECIFICATIONS

Blade Shaft Assembly	Oil bath design, fully enclosed housing
Blade Shaft Bearings	Pressurized oil bath lubrication
Blade Shaft Diameter	2-3/8 in. (60mm)
Arbor Diameter	1 in. (25.4 mm)
Blade Flanges	Quick disconnect system, inner flanges mounted to shaft
Blade Flange Sizes	4-1/2 in. and 6 in. (114mm and 152 mm)
Drive Belts	10 belts, (2) 5G 3VX-530 multi-groove belts
Max. Blade Raise Height	20 in. (508 mm)
Blade Mounting	Left or Right
Max. Blade Diameter	36 in. (914 mm)
Max. Depth of Cut	15 in. (381 mm)
Blade Guard Capacity	16-36 in. (406 mm-914 mm)
Blade Guard	Slip-on, tapered mount
Blade Raise-Lower	Electro-hydraulic pump
Blade Shaft Clutch	Standard
Blade Shaft Clutch Control	Belt drive tension automatically controlled by hydraulic tensioning system
Water Control	Left and right side water valves
Water Distribution	Dual water lines directly deliver water to blade



# ENGINE SPECIFICATIONS

**TABLE 3. ENGINE / MOTOR SPECIFICATIONS**

<b>Engine Manufacture</b>	<b>Deutz</b>
<b>Model</b>	BF3L2011
<b>Max RPM</b>	3000
<b>Horsepower / Max kW</b>	60.2 / 44.9
<b>Peak Torque</b>	133.4 lb-ft. / 181 Nm
<b>Fuel</b>	Diesel
<b>Fuel Capacity</b>	8.25 gallons / 31.2L
<b>Air Filter</b>	Dual element radial seal with integral turbo pre-cleaner
<b>Oil Capacity</b>	8 quarts / 7.5L
<b>Engine Coolant</b>	Oil to Air

**TABLE 4. TRANSMISSION SYSTEM SPECIFICATIONS**

<b>Transmission Pump</b>	Hydro-gear hydrostatic transmission pump
<b>Wheel Motors</b>	Hydro-gear hydrostatic wheel motors
<b>Travel Speed</b>	0-275 FPM / 0-84 MPM, infinitely variable
<b>Brakes</b>	Automatic actuating parking brake
<b>Wheels Rear</b>	12 in x 3 in. (305 mm x 76 mm)
<b>Wheels Front</b>	8 in x 3 in. (203 mm x 76 mm)

**TABLE 5. WEIGHTS**

<b>Uncrated Weight</b>	1725 lbs. (782 Kg)
<b>Crated Weight</b>	1825 lbs. (827.8 Kg)

# INTENDED USE / FAMILIARIZATION

---

## INTENDED USE

Operate the SP7060 Multiquip Saw, tools and components in accordance with the manufacturer's instructions. Use of any other tools for stated operation is considered contrary to designated use. The risk of such use lies entirely with the user. The manufacturer cannot be held liable for damages as a result of misuse.

## ENGINE

The SP7060 saw is classified in the industry as a "high" powered saw. This classification is particularly useful when selecting the proper cutting tool (blade) for an application.

The SP7060 saw is powered by a liquid cooled, 3 cylinder, turbocharged diesel engine rated at 60.2 HP (44.9 kW) at 3,000 RPM. Blade rotation is belt driven. Wheel Drive system is driven by a hydrostatic transmission consisting of a variable displacement pump and two fixed displacement wheel motors.

Refer to the **Engine Owner's Manual** for specific instructions regarding engine operation and maintenance practices.

## WATER SYSTEM

All SP7060 saws provide a hardy water plumbing system that evenly distributes water volume and optimum flow rate to both sides of the blade to keep it cool when cutting. The basic water system provides a valve that connects to a standard garden hose. The water is delivered (via a hose) to the saw blade.

**All MULTIQUIP SP7060 saws are designed, engineered and manufactured with strict adherence to American National Standards Institute, Inc. (ANSI) guidelines B7.1 and B7.5.**

## FEATURES

- Stay-level handlebar system adjusts handlebar angle automatically.
- Engine stop switch conveniently located on operator's control panel.
- Console mounted with vibration control system.
- Chassis cold-formed welded box construction.
- Pressurized oil bath lubrication (blade shaft bearings).
- Oil bath design, fully enclosed housing.
- Quick disconnect blade flange system; inner flanges mounted to shaft.
- Blade mounting left side or right side.
- Saw position guide helps ensure straight cuts
- Dual water lines directly deliver water to blade.
- Slip-on, tapered mount blade guard for ease of removal and installation.
- Blade raise-lower by electro-hydraulic pump.
- Belt drive tension automatically controlled by hydraulic tensioning system.
- Dual filter element air filter with integral turbo pre-cleaner.
- Hydro-gear hydrostatic transmission pump.
- Hydro-gear hydrostatic wheel motors.
- Travel speed up to 84 MPM (meters per minute)/ 275 FPM.
- Automatic actuating parking brake.
- Optional night light.

# SERIAL TAG INFORMATION

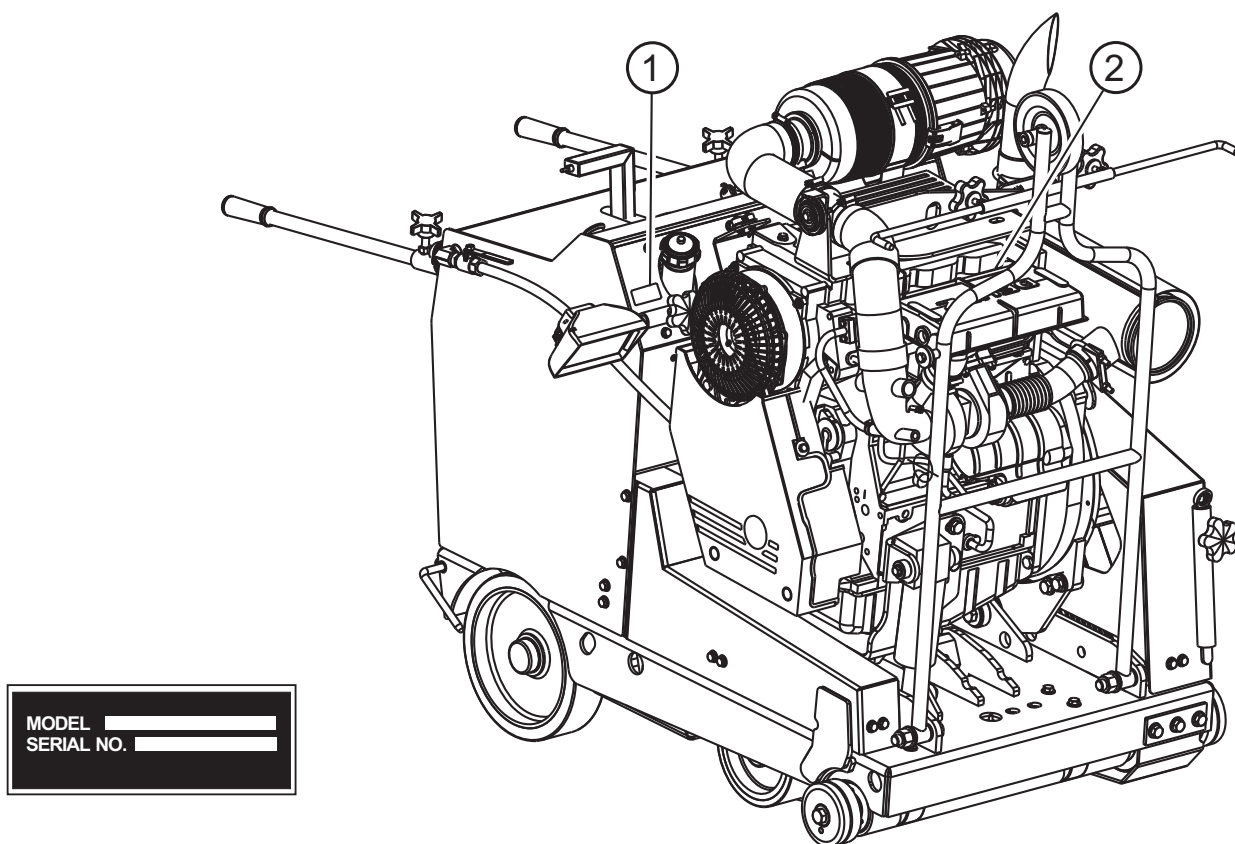


Figure 3. Serial Tag/Locations

## SERIAL TAG

The serial tag contains the model number and serial number of the saw. The information details all parts that were included with the saw when it was shipped from the factory, as well as the date of manufacture.

The **SERIAL TAG** is bonded to the inside of the console (Figure 3, Item 1).

Record these numbers, in case you need to contact the manufacturer for information or service in the future.

Record your **ENGINE** model, (Item 2) specification number and serial number here:

Table 6. Serial Tag Information		
MODEL NUMBER	SERIAL NUMBER	ENGINE NUMBER

## CONTROLS AND INDICATORS

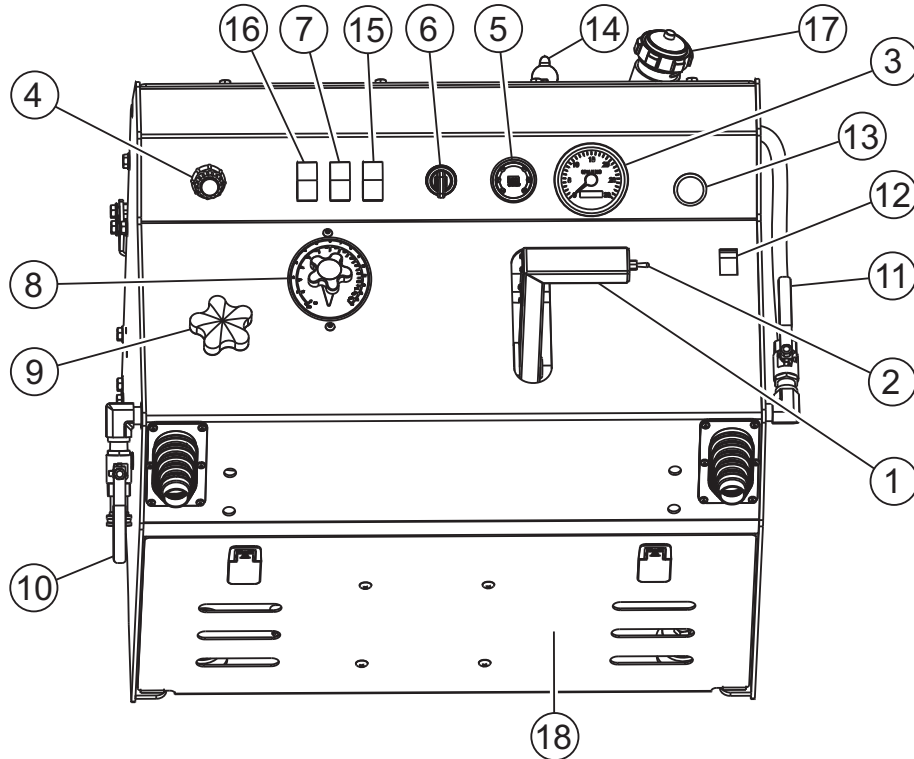


Figure 4. Controls and Indicators

Figures 4 and 5 show the location of the controls, indicators and general maintenance parts. The function of each control, indicator or maintenance part is explained below.

- 1. FNR Handle** — Use to engage the saw in a forward or backward direction. Push handle forward to move the saw forward; pull handle back to move saw backward.
- 2. Raise/Lower Switch** — Use to lift or lower the front of the saw (and blade if installed).
- 3. Blade Shaft RPM** — Indicates blade shaft speed in revolutions per minute.
- 4. Throttle Control** — Controls the speed of the engine. Turn knob counter-clockwise to increase engine speed. Turn knob clockwise to reduce engine speed. For quick throttle response, depress red button and push or pull knob.
- 5. System Status** — Allows operator to monitor engine and electrical functions.
- 6. Ignition Switch** — With key inserted turn clockwise to start engine.
- 7. Light Switch** — When activated, turns on light. Lights offer better visibility when working indoors.
- 8. Depth Indicator** — Indicates relative depth of blade in surface.
- 9. Depth Stop** — Allows repeatable cutting depths.
- 10. Left Water Flow Valve** — Meters water supply.
- 11. Right Water Flow Valve** — Opens and closes water supply to water supply system.
- 12. Water Pump Switch (Optional)** — Toggle to turn pump on or off.
- 13. Emergency Stop Button** — Press the RED emergency stop button to shut the system down.
- 14. Socket Connector** — Use to plug in optional light.
- 15. Blade Shaft Engage/Disengage Switch** — Toggle switch to engage or disengage the blade shaft drive.
- 16. Auxiliary Switch**
- 17. Fuel Filler Cap** — Remove this cap to add fuel.
- 18. Rear Access Panel** — Remove to access items such as the battery, hydraulic filter, etc.

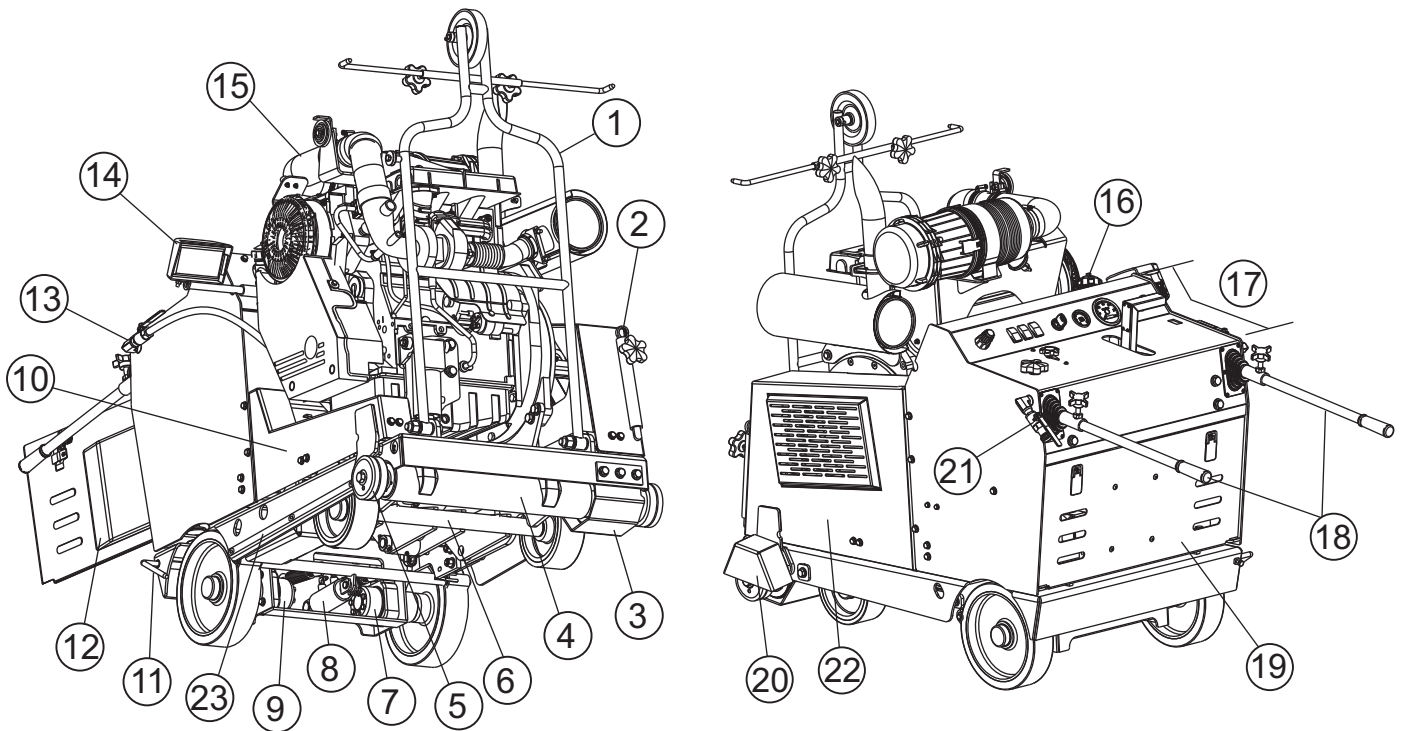


Figure 5. Components

- |                             |  |
|-----------------------------|--|
| 1. Front Pointer Assembly   | 13. Rightside Water On/Off Control Valve |
| 2. Blade Wrench             | 14. Light Assembly                       |
| 3. Blade Shaft Pulley Guard | 15. Engine Assembly                      |
| 4. Blade Shaft Assembly     | 16. Engine Fuel Filler Cap               |
| 5. Blade Flange             | 17. Control and Indicator Panel          |
| 6. Front Axle Assembly      | 18. Stay-Level Handles (SLH)             |
| 7. Left Wheel Motor         | 19. Rear Access Panel                    |
| 8. Brake Cylinder           | 20. Flange Guard                         |
| 9. Right Wheel Motor        | 21. Leftside Water Metering Valve        |
| 10. Engine Guard            | 22. Belt Guard                           |
| 11. Rear Pointer            | 23. Slurry Strip                         |
| 12. Documentation Box       |  |

## BASIC ENGINE INFORMATION

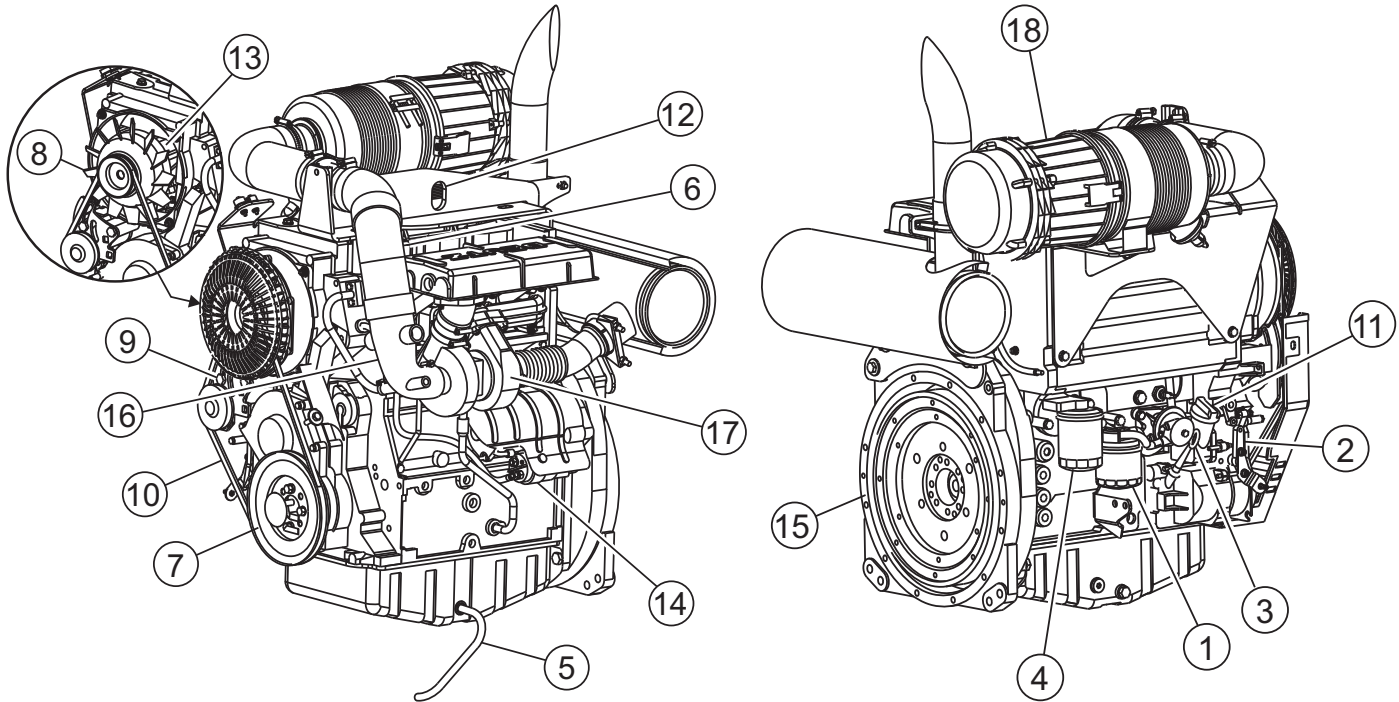


Figure 6. Basic Engine Components

### BASIC ENGINE COMPONENTS

The following refers to basic engine components and their functions that an operator may need to reference. The manufacturer's engine manual provides further instructions and details of operation and servicing. The engine shown in Figure 6 is a **Deutz BF3L2011** engine.

1. **Fuel Filter** — Removes dirt and water from the engine fuel.
2. **Governor Lever** — This lever restricts engine speed (high idle and low idle) through a speed control device linked to the accelerator system.
3. **Oil Dip Stick** — Remove to check amount and condition of oil in crankcase.
4. **Oil Filter** — Spin-on type, filters oil for contaminants.
5. **Oil Drain Plug and Hose** — Remove plug and attach drain hose to drain crankcase oil.
6. **Oil Filler Port** — Remove to add fresh crankcase oil.
7. **Crankshaft V-Pulley** — Check fan V-belt between V-Pulley and fan to determine proper belt tension.
8. **Cooling Fan** — Driven by the V-belt, the cooling fan cools the engine by cooling engine oil that circulates through the engine block and cylinder head.
9. **V-belt Tension Adjustment** — This bolt provides means to adjust the V-belt tension at the alternator bracket.
10. **V-belt (Fan belt)** — Driven by the engine crank during operation, drives the fan as well as the alternator.
11. **Oil Fill Cap** — Remove to add engine oil.
12. **Lifting Eye** — The lifting eye is provided if the removal/installation of the engine becomes necessary.
13. **Alternator** — Located inside the fan assembly. Provides current to the electrical system and charges the battery. Driven by means of a crankshaft/V-belt pulley system.
14. **Starter** — Starts engine when ignition key is rotated to the "START" position.
15. **Flywheel** — Main power is taken off from the flywheel end.
16. **Air Intake Port** — Provides air from the air cleaner to the turbocharger unit.
17. **Turbocharger** — Provides pressurized intake air to the cylinder by means of a turbine energized by exhaust gas that rotates the blower.
18. **Air Cleaner Assembly** — Provides clean filtered air to the air intake port.



# CHOOSING PROPER BLADE SIZE

## CHOOSING PROPER BLADE SIZE


Proper blade selection is a product of:

- Understanding the capability of your saw
- Understanding the specifications of the engine
- Understanding the blade shaft speed of your saw
- Understanding diamond blade operating limitations
- The depth of cut required
- Cutting conditions
- Desired cutting performance requirements

### Engine (RPM) and Surface Feet per Minute (SFPM) Speeds

This saw uses a belt drive system to propel the diamond blade. Specifically sized engine drive and blade shaft pulleys, engine (RPM) and blade diameter determine the ultimate peripheral speed (SFPM) of the diamond blade. It is important to understand the SFPM speed — **For safety and performance, it is essential that the selected diameter diamond blade be matched up to a proper SFPM (see Table 8).**

Five 7060 models are available (706016, 706020, 706026, 706030, 706036) and are designed with different pulley ratio speeds to govern the blade shaft RPM output. The combination of the different diameters of the pulleys along with engine (RPM) determines this ratio that ultimately provides a RPM speed at the blade shaft (Figure 7).

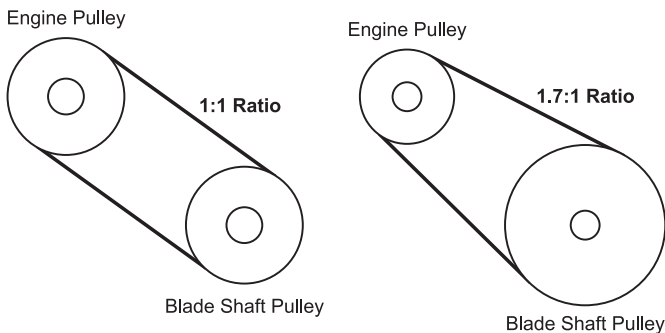

**Figure 7. Blade Shaft Ratios**

## Ratio Speeds and Blade Guard Size

The 7060 Series offer five blade guard sizes (16", 20", 26", 30", 36") that will accommodate most commonly used diamond blades up to a 36" (914 mm). The series further offers four distinct pulley ratio set-ups that provide specific blade shaft RPM. Pairing a diamond blade diameter to a proper ratio speed and blade guard size is imperative. Additionally, matching up blade diameters with the appropriate blade guard size is equally as important. See Table 7.

Blade Guard	16"	20"	26"	30"	36"
Diamond Blade Diameter (in.)	14"	16"	24"	24"	26"
	16"	18"	26"	26"	30"
		20"		30"	36"

# CHOOSING PROPER BLADE SIZE

## Blade RPM vs. Surface Feet Per Minute (SFPM)

When choosing a blade for your cutting conditions, follow the blade manufacturer's recommendations. Match the blade speed (Blade Shaft RPM) to the recommended blade Surface Feet Per Minute (SFPM). See Table 8.

### WARNING

Maximum allowable blade surface feet per minute per ANSI Standard B.7.1 is 16,000 SFPM.

### CAUTION

Verify the engine start switch is **OFF** before removing or installing a blade.

Tighten the 5/8" blade-mounting bolt to 125-175 ft. lbs. of torque.

**Table 8. Surface Feet per Minute (SFPM) Data ~ No Load**

Saw Model	Ratio: Engine RPM'S	Engine Pulley Size	Blade Shaft Pulley Size	Depth of Cut (in.)	Eng RPM, NO LOAD	Bladeshaft RPM	14" SFPM	16" SFPM	18" SFPM	20" SFPM	24" SFPM	26" SFPM	30" SFPM	36" SFPM	Blade Flange Dia.
Circumference of Blade in Feet: 3.665								4.189	4.712	5.236	6.283	6.807	7.854	9.425	
706016	1.02	4.10	4.20	5.75	3000	2929	10733	12267	13801	15334	18401	19934	23001	27601	4.50"
706020	1.16	4.10	4.75	7.50	3000	2589	9490	10847	12203	13558	16270	17626	20338	24405	4.50"
706026	1.61	3.30	5.30	10.25	3000	1868	6846	7824	8802	9780	11737	12715	14671	17605	4.50"
706030	1.61	3.30	5.30	12.00	3000	1868	6846	7824	8802	9780	11737	12715	14671	17605	6.00"
706036	1.70	3.30	5.60	15.00	2800	1650	6047	6912	7775	8639	10367	11231	12959	15551	6.00"



## SPECIFIC TOOLS / SAW BLADES

### SPECIFIC TOOLS TO BE USED

This saw is to use tools (blades) as follows:


Steel core segmented or continuous diamond rim cutting wheel

Any other type of tool is not to be used.

### SAW BLADES

#### **WARNING — Inspect Diamond Blade**

Failure to thoroughly inspect the diamond blade (Figure 8) for operational safety could result in damage to the blade or the saw and may cause injury to the user or others in the operating area. Discard damaged or worn blades and replace with fresh blade.

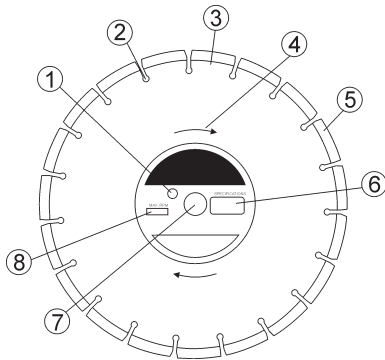

**Figure 8. Diamond Blade**

1. **Drive Pin Hole** — A commonly located hole on the diamond blade core that prevents operational blade slippage between the inner & outer blade flanges (collars). Inspect the diameter of the hole to ensure there is no distortion, and that a snug fit develops between the hole and drive pin.
2. **Stress Relief Holes (Gullets)** — Check the steel core for cracks that may have propagated from the slots and/or gullets. Cracks indicate extreme fatigue failure, and if sawing continues, catastrophic failure will occur.
3. **Edge of the Steel Core** — Check the diameter edge for discoloration (blue oxidation) indicating an overheating condition caused by insufficient cooling water/air. Overheating of blades may lead to loss of core tension and/or increase the possibility for blade failure. Check to make sure the steel core's width is uniform about the rim of the blade and not succumbing

to an “under cutting” condition brought about by highly abrasive material or improper under cutting core protection.

4. **Directional Arrow** — Check to ensure that the blade is oriented properly on the spindle/arbor for sawing. Reference the directional arrow on the blade and place it so the direction of rotation “downcuts” with the turn of the shaft.
5. **Diamond Segment or Rim** — Ensure there are no cracks, dings, or missing portions of the diamond segment/rim. **DO NOT use a blade that is missing a segment or a portion of the rim.** Damaged and/or missing segments/rims may cause damage to your saw, and injury to the user or others in the operating area.
6. **Specifications** — Ensure that the blade specifications, size, and diameter properly match up to the sawing operation. Wet blades must have water to act as a coolant. Utilizing a diamond blade not matched properly to the task may result in poor performance and/or blade damage.
7. **Arbor Hole** — It is essential that the arbor hole diameter properly matches the shaft arbor, and that it is free from distortions. Correct blade flanges (collars) must be used. The inside face of the flanges must be clean and free of debris. An out of round arbor condition will cause damage to the blade and the saw.
8. **MAX RPM** — This RPM reference is the maximum safe operating speed for the blade selected. **NEVER** exceed the max RPM on the diamond blade. Exceeding the max RPM is dangerous and may cause poor performance and may damage the blade. All blades used must be designed for the maximum spindle RPM.

# INSTALLING THE BLADE


## INSTALLING THE BLADE

The blade can be mounted on either side of the saw to accommodate different cutting jobs. With the proper sized blade selected, reference the following procedure to install the new blade.




Ensure the flange faces are kept clean and smooth as well as the inside diameter of the blade shaft.

1. Raise the saw so the blade will clear the ground when installed.
2. Remove the blade flange bolt. This bolt is LEFT-HAND thread on the RIGHT side of the saw and RIGHT-HAND thread on the LEFT side of the saw.
3. Verify the blade flanges are clean and not damaged. Pay particular attention to all holes and recesses. Clean or “rod-out” as necessary (Figure 9).

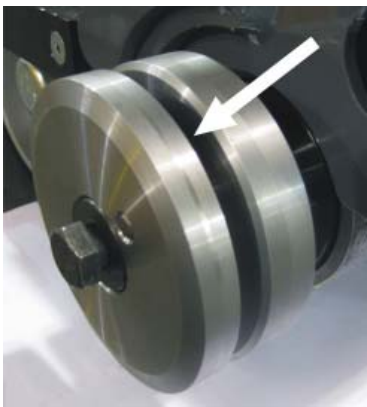

**Figure 9. Inspect and Clean Flange**

4. Taking note of the direction of rotation of the blade (Figure 11, Item A), insert the bushing and mounting bolt through the outer flange and blade (Figure 10).
5. Align flange pin through the blade into the inner flange.

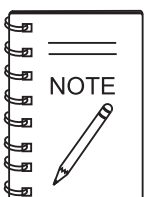

The blade mounting bolt on the right side of the saw (as viewed from the operator's position), has a *left-hand* thread, while the bolt on the left side of the saw has a *right-hand* thread.




**Figure 10. Aligning Flange Pin Through Blade**

### **⚠ WARNING — Tighten Blade Mounting Bolt**

Failure to properly tighten the blade mounting bolt can result in the bolts coming loose with the blade flange potentially falling off the rotating blade shaft assembly. The blade and other parts coming loose from the saw during operation pose a high risk of serious injury or even death!

6. With the blade still off the ground, tighten mounting bolt as tight as can be achieved until blade spins. (Figure 11, Item B shows tightening direction for blade mounted on RIGHT side of saw.)

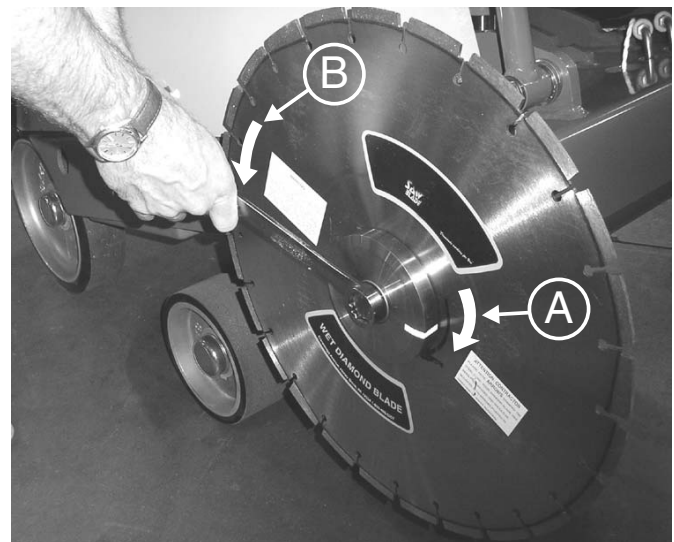


- A. Blade Direction of Rotation
- B. Tightening Direction - Right Side

**Figure 11. Blade Rotation Direction**

# INSTALLING THE BLADE

## **CAUTION — Improper Torque**

An improperly torqued mounting bolt can cause the inside diameter of the blade, blade shaft, and flange bushing to quickly wear. This can result in poor cutting characteristics or premature failure of these parts, requiring replacement and machine “downtime.”

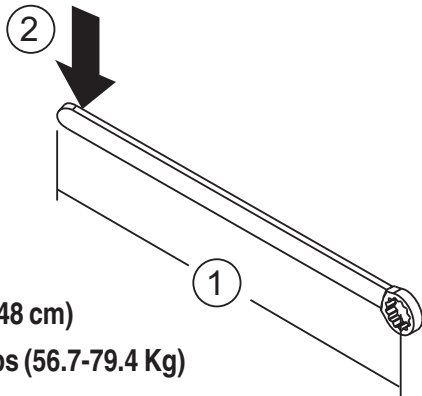


1. 12 In. (30.48 cm)
2. 125-175 lbs (56.7-79.4 Kg)

**Figure 12. Blade Wrench**



125-175 lbs. (56.7 -79.4 Kg) of weight applied to the end of the blade wrench will provide 125-175 ft. lbs. (169.5 -237.3 Nm) of torque to the blade mounting bolt. (Figure 12.)

7. Lower the blade to the ground surface (Figure 13, Item A) to prevent blade from spinning and tighten the mounting bolt to 125-175 ft. lbs. (169.5-237.3Nm) of torque (Figure 13, Item B).

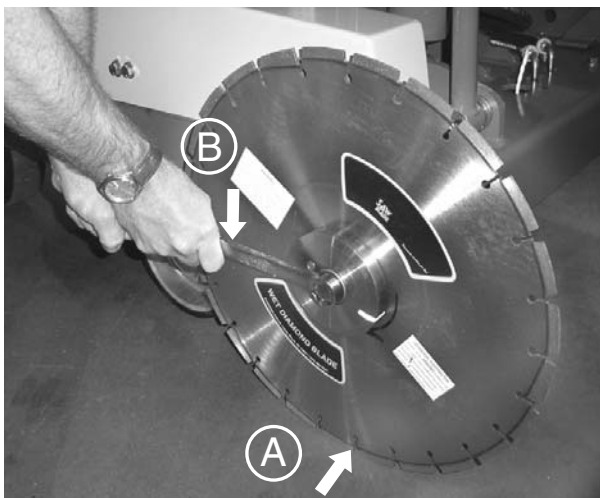

**Figure 13. Torque Flange Bolt**

## Stacking Blades for Wide Cuts

Combining or stacking blades together to make wide cuts requires an optional bushing extension kit.

### **WARNING**

**NEVER** attempt to stack blades beyond the capacity of the kits described here. **NEVER** operate the saw without blade guards in place.

- Kit #18501 allows blade stacking from .375" to .75" thickness.
- Kit #18502 allows blade stacking from .75" to 1.125" thickness.

1. Remove existing blade (See previous section).
2. Replace the standard flange bushing, outer flange, and mounting bolt that came with the saw with the extended bolt and bushing and the new outer flange supplied with the kit. Remember that the mounting bolt for the right side of the saw has a left-hand thread while the mounting bolt for the left side of the saw has a right-hand thread.
3. Insert the bushing and mounting bolt through the outer flange and stack of blades. Spacers are required between blades when stacking multiple blades. The longer bushing and bolt allow blades to be stacked together while maintaining proper alignment of flange bushing into blade shaft.
4. Align flange pin through the stack of blades into the inner flange.
5. Tighten the 5/8" Mounting Bolt to 125-175 ft. lbs. of torque.

### **WARNING**

The operator must match the diamond blade diameter to the proper blade guard size. See Table 7.

## BLADE GUARD

The blade guard can be mounted on either side of the saw to accommodate different cutting jobs.

### Removing a Blade Guard:



The saw utilizes a tapered blade guard mounting clip that, during operation, settles in the taper by the weight of the guard locking itself into place, providing a rigid, rattle-free fit.

1. Remove the water delivery hose from the blade guard (Figure 14).

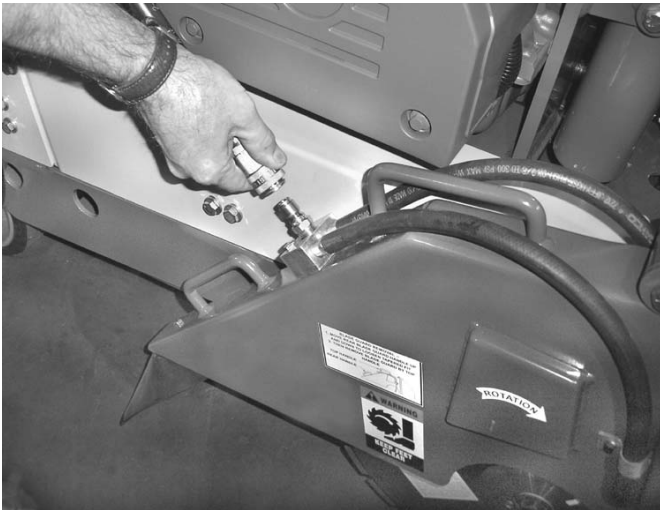


Figure 14. Blade Guard Water Delivery Connector

2. Standing toward the back of the blade guard, grasp the top handle firmly with your outboard hand (this will be the right hand if the guard is mounted on the right as viewed from the operator's position), and prepare to support the weight of the blade guard (Figure 15).

3. With the opposite hand, grasp the rear handle and rock back and forth with an upward pressure to release the blade guard tapered mounting clip. Lift straight up, then pull back once the tapered lock is released. Install blade guard in reverse order.



Figure 15. Removing The Blade Guard

### **! WARNING**


**NEVER** operate the saw with the front half of the Blade Guard removed.



## Installing a Blade Guard

### Blade Guards with Standard Water Systems:

1. Slide the blade guard straight downward to engage the tapered mounting clip (Figure 16).

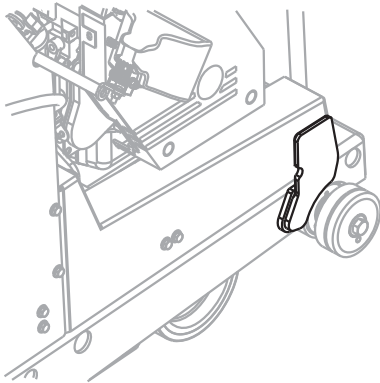


**Figure 16. Tapered Mounting Clip**

2. Connect the water delivery hose to the blade guard (Figure 14).
3. Ensure that the hose ends maintain a 45° angle and maintain a light contact with the surface of the blade.
4. Ensure the front hinged section of the blade guard is fully closed before use.



**Figure 17. Water Hose Detail**

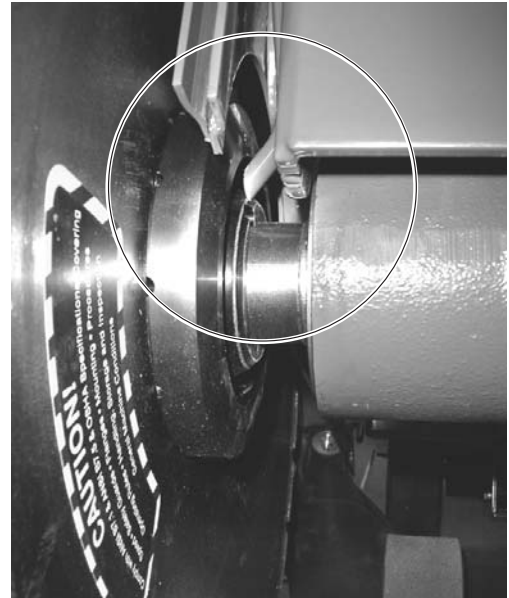

**Figure 18. Water Tube Detail (Inner side)**


### Blade Guards with Waterjet Water Systems:

1. Slide the blade guard straight downward to engage the tapered mounting clip (Figure 16).
2. Ensure that the water delivery tubes are pointed toward the water distribution grooves in the blade flanges (Figure 20).
3. Ensure the front hinged section of the blade guard is fully closed before use.

## INSTALLING THE FLANGE GUARD

The flange guard protects the blade flange when not in use.

1. Slide the flange guard onto the guard mounting tab on the frame (Figure 19).
2. Verify that the blade flange not in use is secured to the blade shaft by tightening the mounting bolt.

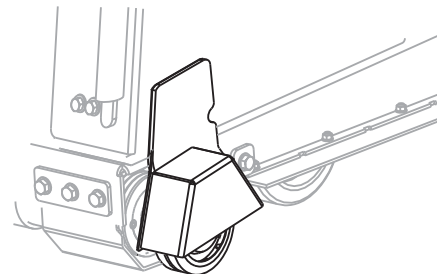

**Figure 19. Flange Guard Installed**

# WATER DELIVERY SYSTEMS

## WATER DELIVERY SYSTEM


### **CAUTION**

When storing the saw where temperatures may drop below freezing, blow out the water lines to prevent damage to the water delivery system.

1. Connect the water supply hose to the water inlet (garden hose) fitting on the left side of the saw (Figure 5, Item 21).
2. Verify that the water hose on the saw is connected to the blade guard, (Figure 14), and that the water hoses or tubes are pointed into both blade flanges.
3. Ensure that the hose ends maintain a 45° angle and maintain a light contact with the surface of the blade.



Figure 20. Large Bladeguard Water Tube

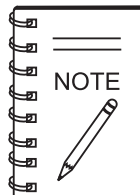

The lever on the left side of the control panel regulates water flow volume. The lever on the right side of the control panel turns the water ON and OFF.

# STAY-LEVEL HANDLEBARS/BATTERY

## STAY-LEVEL HANDLEBARS (SLH)

This saw incorporates a unique handlebar design that allows the handlebars to maintain a level height position regardless of the angle of the saw. Along with this, the height of the handlebars can be adjusted for individual operator providing for more comfortable operation.

To adjust the handlebar height:

1. Loosen the SLH linkage adjustment plate bolts (Figure 21).
2. Set the handlebars to the desired height.
3. Tighten the SLH linkage adjustment plate bolts.

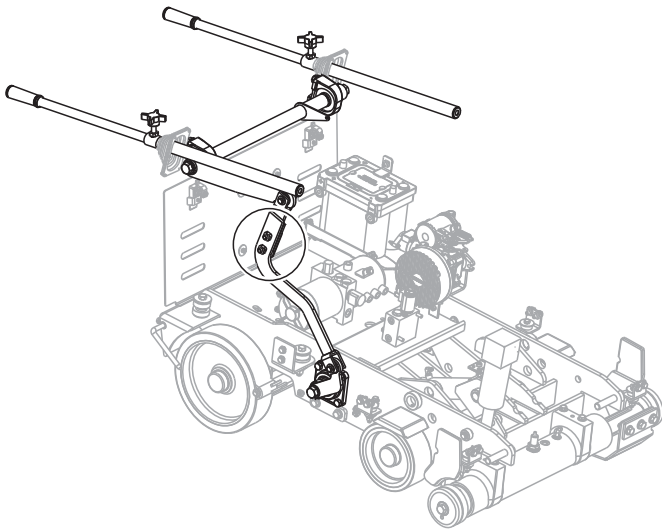


Figure 21. Stay-Level Handlebars

## BATTERY SETUP

### WARNING — Battery hazards



Always recharge the battery in a well-ventilated area to avoid risk of a dangerous concentration of combustible gases.

Battery electrolyte contains corrosive, toxic chemical. (dilute sulfuric acid). Avoid contact with eyes and skin.

### WARNING — Shock hazards



Disconnect battery cables before inspecting electrical system and never “spark” battery terminals to test for charge.

### CAUTION — Battery safety

Use all safety precautions specified by the battery manufacturer when working with the battery.

This saw was shipped with a wet charged battery (Figure 22). This battery may need to be charged for a brief period of time as per the manufacturer instructions.


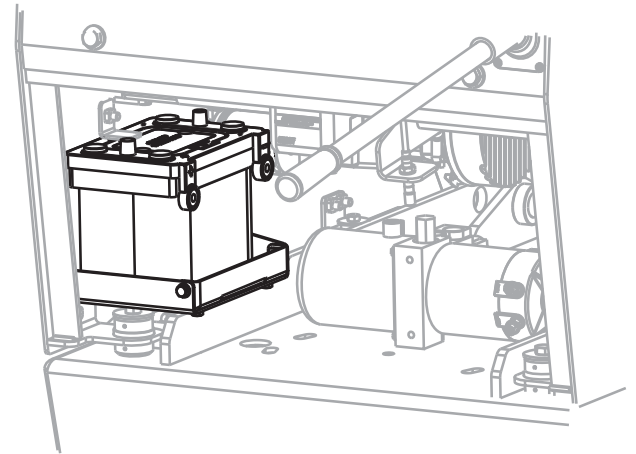


Figure 22. Battery and Battery Box

To install the battery on the saw, make sure that the battery is properly clamped into the battery box. Connect the positive cables to the positive terminals on the battery first, then connect the negative cables to the negative terminals.

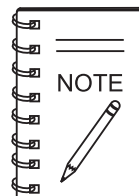

The 7060 uses two positive battery cables and two negative battery cables. One set is for engine start, and the other is for the raise/lower pump assembly. Make sure that both sets of cables are connected to the battery. Also, LIMIT the cycling of the raise/lower system on battery power only. Frequent cycling will diminish the life of the battery.

# FUELING THE SAW

## FUELING THE SAW

This saw features an 8-gallon, clear, molded plastic fuel tank for ease of checking the fuel level. It has a central drain and a shutoff valve. The fuel tank cap is located at the front of the control panel console, and a fuel gauge tube is featured on the front of the console.

### ⚠ CAUTION — Fuel Safety



Handle fuel safely.

Motor fuels are highly flammable and can be dangerous if mishandled.

**DO NOT** smoke while refueling.

**DO NOT** attempt to refuel the saw if the engine is hot or running.

Avoid spilling fuel on the control panel or engine. Clean up fuel spills to avoid falls from slipping.

**DO NOT** overtighten the fuel tank cap.

### ⚠ WARNING — Diesel Fuel only

Use **DIESEL FUEL ONLY**.

**NEVER** use gasoline or fuels not specifically for use in the Deutz Diesel engine.

1. Determine if the engine fuel is low. ( Figure 23)
2. If fuel level is low, remove the fuel filler cap and fill with diesel fuel (Cetane fuel number 45 or greater).

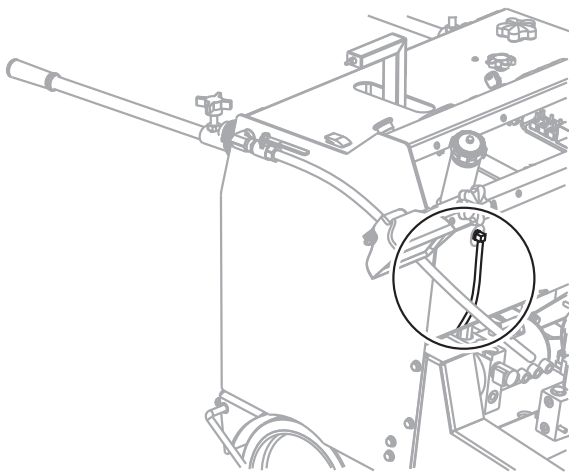


Figure 23. Fuel Gauge

## Priming the Fuel System

Saws **UPTO** S/N ZC3700225 utilize a fuel primer bulb when fueling the saw for the first time or refilling after running out of fuel. Locate the fuel primer bulb inside the console beneath the fuel tank (Figure 24, Item A) and squeeze the fuel priming bulb until it fills with fuel, (it will become firm when properly primed), priming the fuel transfer pump.

Saws **AFTER** S/N ZC3700225 utilize a fuel primer button built into the engine transfer pump (Figure 24, Item B).

### ⚠ WARNING — Fuel

**DO NOT** crank the engine without fuel in the line between the tank and the primary fuel pump to prevent damage to the primary fuel transfer pump.


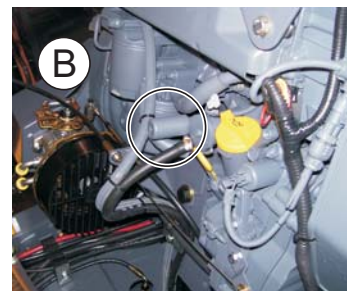


Figure 24. Fuel Primer Bulb (A) or Button (B)

## Storage With Fuel In System

### ⚠ CAUTION — Fuel

**DO NOT** store with fuel in the tank for an extended period of time. Completely drain fuel system (tank, lines, etc.) if the unit is to be put into long term storage. For shorter or intermediate periods of time, the tank should be filled to avoid condensation that could cause contamination of the fuel.

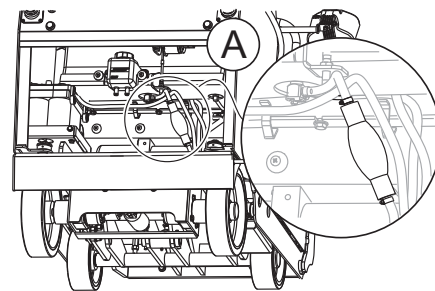

# COLD WEATHER OPERATION/POINTER ADJUSTMENT

## COLDWEATHER OPERATION

### Block Heaters

#### **CAUTION — Block Heaters**

**DO NOT** leave optional block heaters plugged in for extended periods when temperatures may rise above 20°F, (-6.67° Celsius). The oil could “cook” inside the crankcase and damage the engine.

If the water system is not drained when the saw is not in use and temperatures fall below 32° F (0° C), damage may occur to optional water pumps.

In extreme cold weather, optional block heaters may be used. Block heaters are installed directly onto the crankcase and are operated by plugging into a 110VAC electrical outlet. Be sure to use appropriate gauge wire when using extension cords and abide by all safety rules when using electrical power, power cords, and extension cords. Do not use block heaters when the when temperatures are above 20° F (-6.67° Celsius).

### Draining the Water System

When low temperatures fall below 32° F (0° C):

1. If the saw is equipped with an optional water pump, open the drain petcock on the pump and allow the pump to drain. Turn the water pump switch on for a few seconds to purge any water remaining inside the pump body.
2. Tilt the saw UP and BACK, to allow water to drain.
3. Tilt the saw FORWARD, to allow water to drain again.
4. If an air compressor is available, blow out the system by applying compressed air to the water inlet.

## POINTER ADJUSTMENT

1. Lower the front pointer assembly (Figure 25).
2. Using 10-12 ft. (3-3.7 meters) of stringline, divide the length of the string in half and slide the string into one of the slots or gullets on the backside of the blade (as viewed standing in front of the pointer) See Figure 26, Item 2. Hold both ends of the string in one hand and pull the string taut (Item 3). Move your hand from side to side until both strings are touching both sides of the blade.
3. Adjust the pointer rod (Item 5) by loosening the lock knob (Item 4). Move the pointer directly over the middle of the two strings in your hand and tighten the pointer setscrew

to lock the pointer in position. Repeat this process for the rear pointer.

4. To raise the front pointer assembly (Item 1), first pull back and up on the pointer cable. Secure the pointer assembly in the desired raised position by locking the cable between the jaws of the cam cleat.

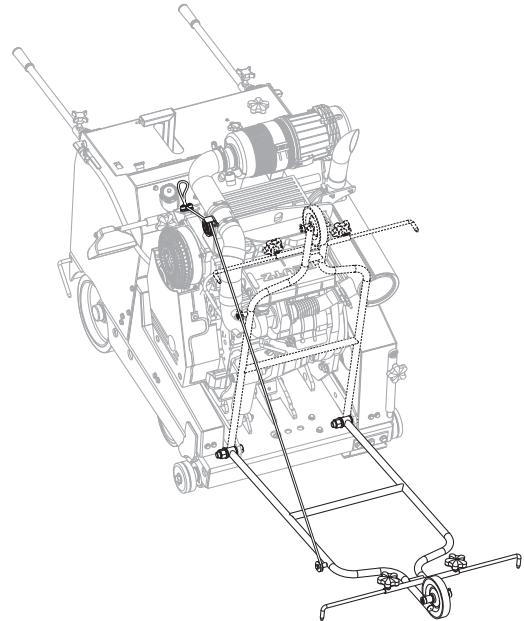


Figure 25. Pointer Assembly


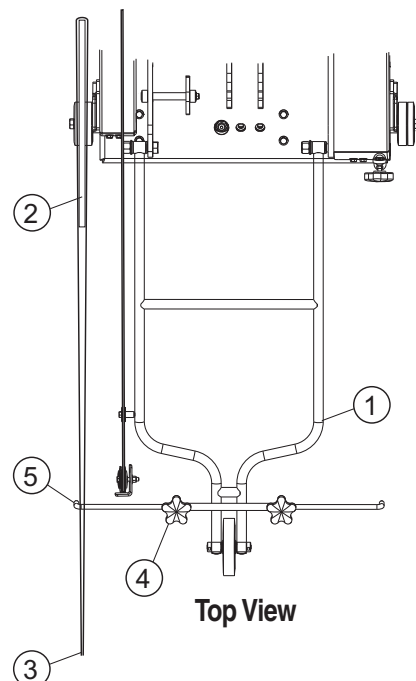


Figure 26. Adjusting the Pointer Assembly

# RAISE-LOWER CONTROLS

## RAISE - LOWER CONTROLS

The SP7060 saw uses a 12-volt hydraulic pump and cylinder to raise and lower the saw. The raise-lower function is controlled by the operator through a 3-position toggle switch on the raise-lower control handle located on the operator's control panel.

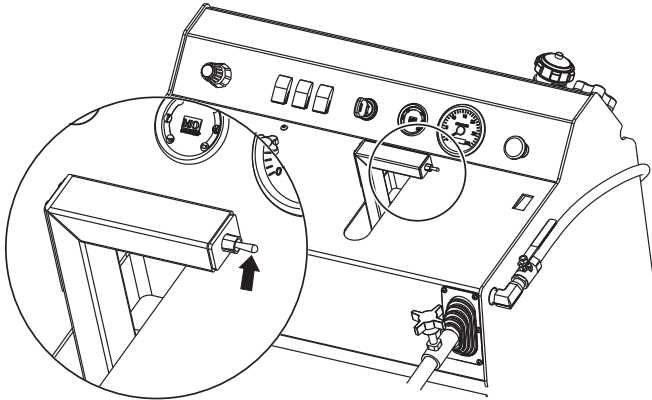


**Figure 27. Raise-Lower Control Toggle Switch**

1. To lower the blade, push the toggle switch located on the end of the control handle FORWARD (Figure 27).
2. To raise the blade, pull the toggle switch located on the end of the control handle BACKWARD.

## Setting the Depth Indicator

1. Lower the blade until it just touches the cutting surface.
2. Set the depth indicator dial to zero. The depth indicator now accurately indicates how deep the blade is cutting (Figure 28).

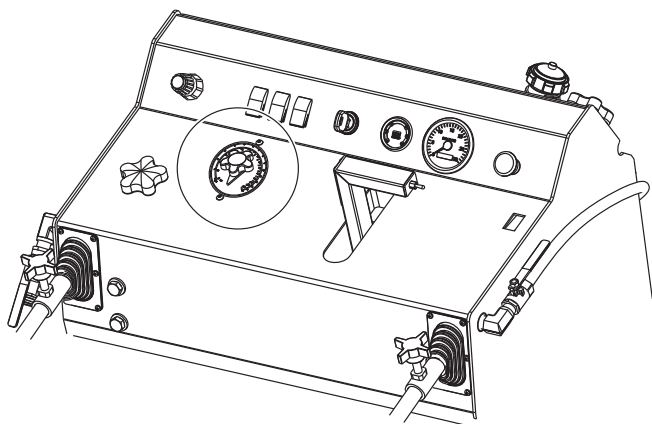



**Figure 28. Depth Indicator**

## Depth Control System

The SP7060 saw uses an electronically controlled depth stop to position and lock the blade at the desired cut depth.

To control the depth of cut with the saw running and blade mounted:

1. Raise the saw above the desired cutting depth.
2. Turn the depth control knob *counterclockwise* until the saw cannot be lowered by pushing the raise/lower switch forward (Figure 29).

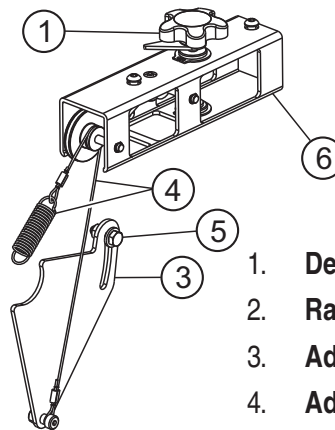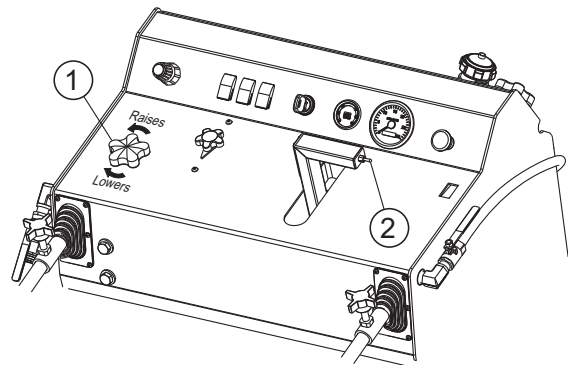

1. **Depth Control Knob**
2. **Raise/Lower Toggle Switch**
3. **Adjuster Bracket**
4. **Adjuster Cable/Spring assy.**
5. **Adjuster Nut**
6. **Depth Control Housing**

**Figure 29. Setting Depth Gauge and Depth Stop**

3. Hold the raise/lower toggle switch in the lowering position by pushing it forward and rotate the depth control knob *clockwise* until the desired cutting depth is achieved. The saw will repeat to the same depth until readjusted.

# BLADE SHAFT ENGAGE SYSTEM / WHEEL DRIVE SYSTEM

To Re-adjust for full cutting depth:

1. Hold the raise/lower switch in the lowering position and rotate the depth control knob *clockwise* until the saw is fully lowered.
2. Rotate depth control knob clockwise an additional 1 turn.

To disable the depth stop when it is not needed:

1. While holding the raise-lower toggle switch FORWARD, rotate depth control knob CLOCKWISE until saw is at full depth position.
2. Rotate depth control knob an additional 1-2 turns.

## BLADE SHAFT ROTATION — DISENGAGEMENT SYSTEM

The engine **MUST** be at IDLE when engaging or disengaging blade shaft drive (Figure 30, item 1).



Hydraulic system pressure must be sufficient to enable the blade shaft engage/disengage feature. Increasing engine RPM slightly may help facilitate the system pressure necessary to engage the blade shaft drive.

### To STOP blade shaft rotation:

Push rocker switch labeled BLADE SHAFT DISENGAGE (Figure 30, item 2). The engine (via the hydraulic lift cylinder) will tilt forward, disengaging the belt drive.

### To START blade shaft rotation:

Push rocker switch labeled BLADE SHAFT ENGAGE (Figure 30, item 2). The engine (via the hydraulic lift cylinder) will tilt backward, engaging the belt drive.

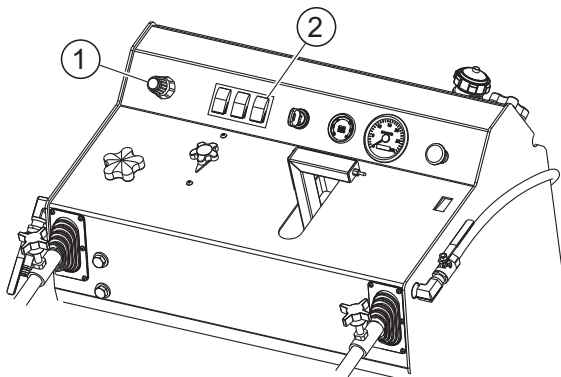


Figure 30. Blade shaft Engage/Disengage

## WHEEL DRIVE SYSTEM

The 7060 Series features a cable-controlled hydraulic powered gear motor system with infinite Forward-Neutral-Reverse (F-N-R) speed adjustment. This is controlled by the operator through the speed control handle located on the control panel. The saw is designed with a locked axle drive and can travel forward at transportation speeds up to 275 feet per minute.

A bi-directional variable displacement transmission pump powers two hydraulic wheel motors that are directly coupled to the wheels. This design provides vehicle propulsion in both forward and reverse depending on the position and direction of movement of the F-N-R control handle. The wheel drive system also provides dynamic braking action.

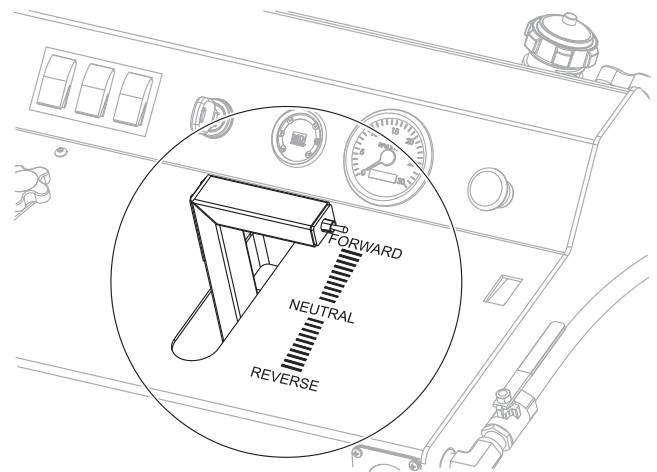


Figure 31. F-N-R Control

Refer to Figure 31.

- To increase the forward speed, slowly move the control handle FORWARD.
- To decrease the forward speed, pull the control handle BACKWARD.
- When the control handle is in the Neutral position the saw will have neither a forward nor reverse motion.
- As the control handle is passed backward through the neutral position the saw will start to move in REVERSE. Reverse speed is also controlled by the position of the control handle.

## STARTING AND STOPPING THE ENGINE


### **WARNING**

**DO NOT** leave the saw unattended while the engine is running. **NEVER** start, park, or leave the saw unattended on a slope.

### **CAUTION**

Allow the engine to warm up before increasing engine speed.

**DO NOT** stop the engine abruptly when hot. Reduce the throttle to idle and allow the engine to run one or two minutes before turning the ignition switch off. This allows the engine to cool down preventing damage to the turbo charger.

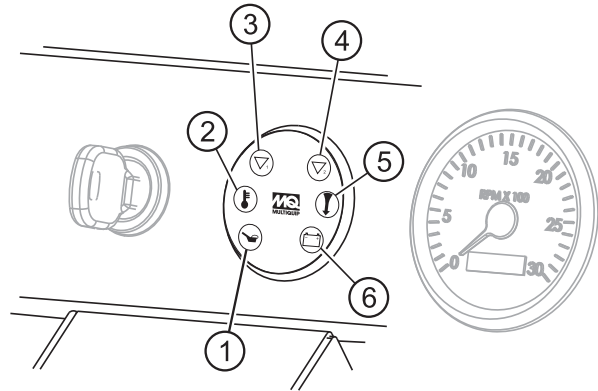


1. Engine oil pressure warning light
2. Engine high temp warning light
3. Glow plug warning light
4. Not used
5. Air filter warning light
6. Battery warning light


**Figure 33. Ignition Switch and System Status**

### Starting the Engine


1. Move the speed control handle to the NEUTRAL position.
2. Set the throttle to IDLE.
3. Make sure the emergency stop button is in the OUT position.
4. Ensure that water lines are attached and water is flowing to the saw blade.
5. Turn the ignition switch to the ON position (Figure 32).
8. Allow the engine to warm up for several minutes.
9. Set the throttle to the recommended engine RPM to match the recommended blade speed of the attached blade.
10. Lower the blade to the cut depth.
11. Move the control handle FORWARD to advance the cut.

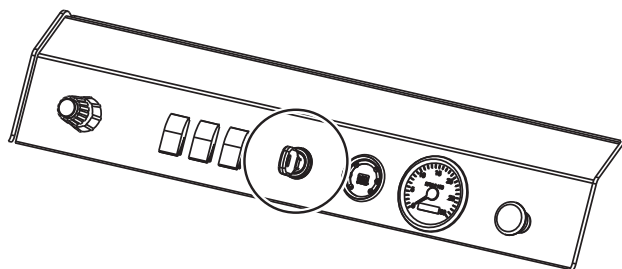

**Figure 32. ON/OFF Switch**

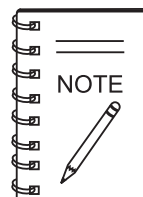

In case of an EMERGENCY, push the RED EMERGENCY-STOP BUTTON to stop all functions (Figure 34). Engine will not crank when emergency stop button is depressed.

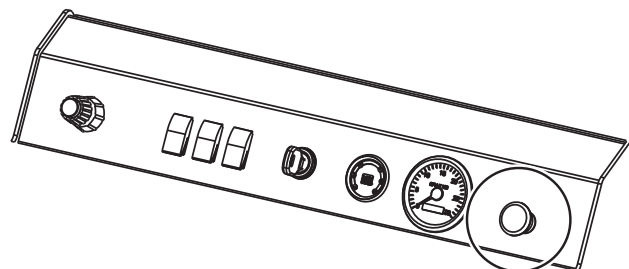

**Figure 34. Emergency Stop Button**

6. Wait for the glow plug indicator light to go out. See Figure 33.
7. Turn ignition switch to the START position; RELEASE switch after engine starts.

## Stopping the Engine

1. When finished with the cut, move the control handle to the NEUTRAL position.
2. Raise the saw blade out of the cut.
3. Reduce the throttle to idle.
4. Allow the engine to run one or two minutes to let the engine cool down.
5. To stop the engine, turn the Ignition Switch to the OFF position.

## Restarting After Running Out of Fuel

The 2011 series Deutz engines do not require bleeding of the fuel system if the engine runs out of fuel.

To restart the engine:

1. Refill the fuel tank with fresh, clean diesel fuel.
2. **Units up to S/N ZC3700225 only:** Re-prime the fuel system by squeezing the fuel prime bulb (located inside the console, directly under the fuel tank), until the fuel primer bulb becomes firm.
3. Crank the engine normally until it starts.

## OPERATING SYNOPSIS

**BEFORE STARTING** — Check all fluid levels. Secure blade firmly to blade shaft. Make sure all protective guards are in place and properly mounted. Wear eye, ear protection and protective clothing.

**WATER SUPPLY**— Connect water supply to water inlet. Move water ON/OFF CONTROL to ON position. Adjust WATER FLOW CONTROL lever to desired position. Drain watering system in cold weather to prevent damage due to freezing.

**BLADES** — Always follow blade manufacturer's recommendations for blade selection, speed and application. NEVER exceed blade manufacturer's maximum rated RPM. See previous steps for detailed blade mounting instructions.

**STARTING ENGINE** — Set CONTROL HANDLE to NEUTRAL position. Set THROTTLE to IDLE. Turn start switch to ON position. Wait for glow plug indicator light to go out. Momentarily turn switch to start position; release switch as soon as engine starts. Allow engine to warm up for several minutes before increasing engine speed. Use approved diesel fuel only.

**STOPPING ENGINE** — Do not stop engine abruptly when hot! Reduce THROTTLE to IDLE and allow engine to run 1 to 2 minutes before turning ignition switch off. Damage to engine may occur if not allowed to cool adequately.

**FWD-NEUTRAL-REV CONTROL** — The panel mounted handle controls FORWARD, NEUTRAL AND REVERSE operation. Neutral position stops or holds saw in a stationary position. Incremental movement in the FORWARD or REVERSE direction will increase speed proportionate to amount of movement.

**RAISE-LOWER FUNCTION** — RAISE-LOWER function is controlled by the switch mounted at the right side of the CONTROL HANDLE. Push toggle switch lever forward to lower saw. Pull toggle switch lever backward to raise saw.

**BRAKES** — This saw is equipped with parking brakes. Brakes are applied automatically when engine is off and disengaged when engine is running.



# LOADING AND TRANSPORTING

## LOADING, UNLOADING AND TRANSPORTING THE SAW

### Loading and Unloading

#### ⚠ WARNING

When **LOADING, UNLOADING** or when on a **STEEP SLOPE**, the engine **MUST BE** at 1800 RPM or above to prevent loss of control.

### Tie-Down Points

The saw is provided with holes at each corner of the lower frame for easy tie-down during transportation. See Figure 35.

#### ⚠ CAUTION

**NEVER** tie the back end of the saw down by strapping across the handlebars. Damage to the SLH (Stay Level Handles) system will occur.

#### ⚠ CAUTION

The use of tie-downs to secure the saw during transportation is highly recommended. **ALWAYS** secure the saw during transportation to prevent unwanted movement or shifting that could result in equipment damage or injury to personnel.

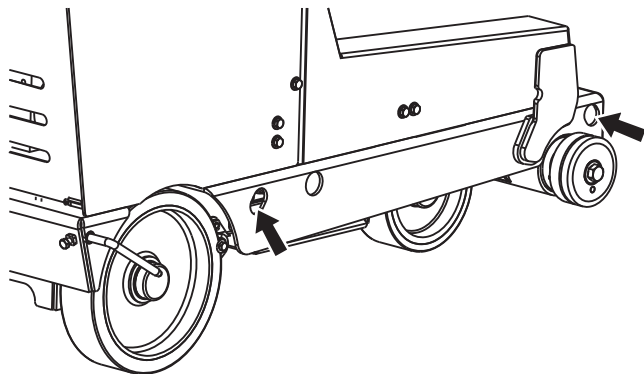


Figure 35. Tie-Down Points

### Lifting Point

The convenient single point for lifting the saw with a hoist is located above the engine (Figure 36).

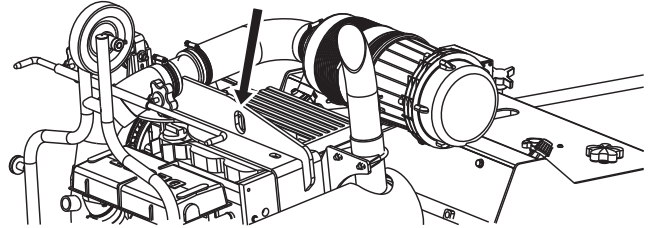


Figure 36. Lifting Point

#### ⚠ WARNING

#### AVOID INJURY!

Stay clear of the saw while it is being hoisted.

To avoid possible damage to the saw, use approved rigging (minimum 3000 lb. test) when hoisting the saw.

### Night Light

The night light (Figure 37) can be used on either side of the saw and can be extended and rotated for best illumination of the cutting area. Aim the light then lock it in position by tightening the lock knobs. The light can be removed for storage by loosening the lock knobs, disconnecting the light cord and sliding the light bar out of the saw.

To turn lights ON, push the rocker-style switch located on the instrument panel forward. To turn lights OFF, push rocker switch backward.

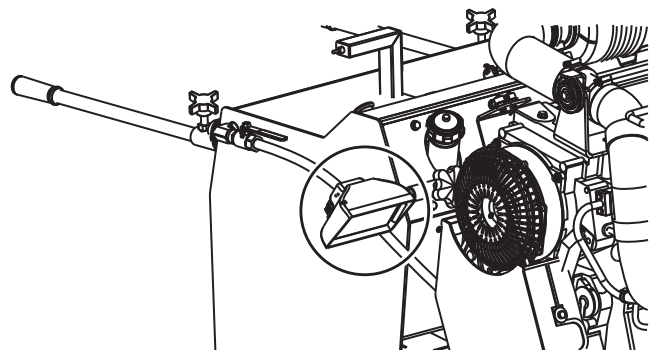


Figure 37. Night Light

## MAINTENANCE

### WARNING

Certain maintenance operations or machine adjustments require specialized knowledge and skill. Attempting to perform maintenance operations or adjustments without the proper knowledge, skills or training could result in equipment damage or injury to personnel. If in doubt, consult your dealer.

When performing maintenance operations on the saw or engine, follow all safety messages and rules for safe operation stated here and at the beginning of this manual.



See the engine manufacturer's manual supplied with your machine for appropriate maintenance schedule and troubleshooting guide for problems.

### WARNING — Accidental Starting Hazards

Accidental starts can cause severe injury or death!



**ALWAYS** place the ON/OFF switch in the OFF position.



Engine and muffler surfaces can get **HOT!** Allow to cool before servicing.



**ALWAYS** ensure saw is **SECURELY** placed on appropriate blocks or jackstands when performing maintenance requiring the saw to be elevated.

### CAUTION — Clean up spills



Avoid slips and falls!

Clean up all engine oil, hydraulic oil, and diesel fuel spills immediately.

## Maintenance Schedule

### Daily (8-10 Hours)

1. Check fluid levels in engine and reservoir; fill as necessary.
2. Visually inspect for wear and damage.
3. Visually inspect for engine leaks.
4. Check or replace the engine air filters as necessary.
5. Check operation of emergency stop button.

### Monthly (125-150 Hours)


1. Change hydraulic oil and filter (first 125 hours, then every 250 hours).
2. Change engine oil and filter.

### Yearly (500 Hours)

1. Replace fuel filter cartridge and v-belt.
2. Check fuel lines for leakage.
3. Check battery cables and connectors.
4. Check engine monitoring and warning system.

### AIR CLEANERS (DAILY)

The saw utilizes both a primary air filter and a safety air filter (Figure 39). The air filter restriction light (Figure 38, Item A) on the engine status indicator (Figure 38, Item B) will illuminate when the filter is plugged.

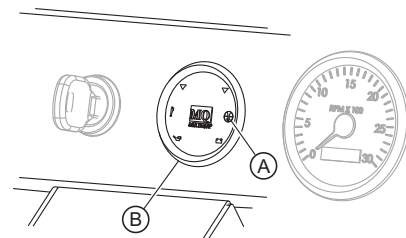

**Figure 38. Air Filter Restriction Light**

Empty the dust discharge valve daily and clean the discharge slot from time to time (Figure 39).

While the air filters should be checked daily and replaced when necessary, there is no need to “over-service” the air filters. That is, they require no cleaning and do not require the use of oil. If the primary filter becomes clogged, simply replace it.

Never blow dirt out with compressed air or try to clean with fluids. Damage can occur to the filter, and if re-installed, can result in damage to the engine.


## CAUTION — Air Filters

Safety air filters are **NOT** intended to be used for primary air filtration. When the primary air filter becomes clogged, replace it immediately. **DO NOT** run the saw using the safety filter *only*.

Replace the safety filter element every fourth primary filter element. See Table 9.

Table 9. Air and Oil Filter Chart

FILTER	PART NUMBER
Primary Air Filter	P772579
Safety Air Filter	P775300
Engine Oil Filter	306012 (Deutz #1174416-SP)
Hydraulic System Filter	306006
Fuel Filter	304010 (Donaldson #1174696)

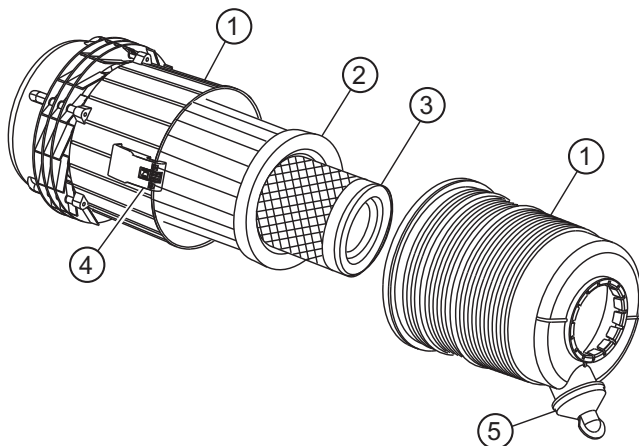

1. Air Cleaner Case
2. Primary Filter Element
3. Safety Filter Element
4. Latch
5. Dust Discharge Valve


Figure 39. Air Cleaner Components

## CAUTION — Air Cleaner Components

Operating the engine with loose or damaged air cleaner components could allow unfiltered air into the engine causing premature wear and failure.

## ENGINE

This saw features a 60 HP DEUTZ Tier II Turbocharged diesel engine, BF3L2011. Complete engine service details and recommendations can be found in the engine manufacturer's manual included with the saw. See Figure 40.

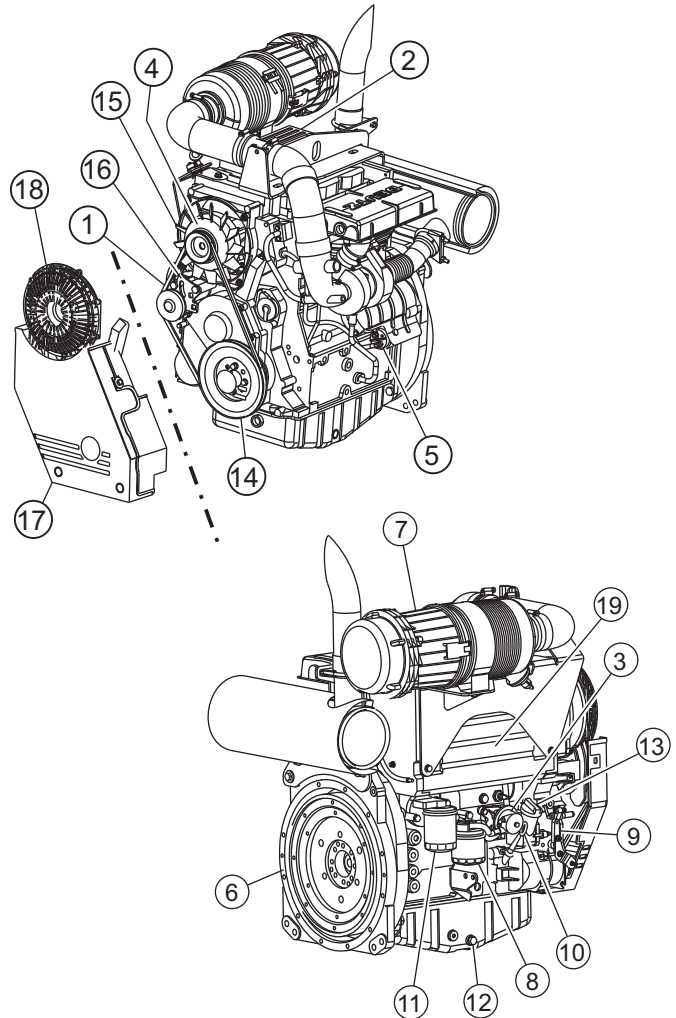

1. V-belt
2. Rocker Arm Cover
3. Fuel Injection Pump
4. Alternator
5. Starter motor
6. Flywheel
7. Air Filter/Cooling System
8. Fuel Filter
9. Throttle Lever
10. Dipstick (engine oil)
11. Engine Oil Filter
12. Drain Plug (engine oil)
13. Filler Port (engine oil)
14. Crank Shaft V-pulley
15. Cooling Fan
16. Adjustment bolt (V-belt tension)
17. Belt Guard
18. Fan Cover
19. Oil Cooler

Figure 40. Engine Service Areas



## Checking Engine Oil

1. Check engine oil level daily before starting the engine.
2. When checking or adding oil, place the machine so the engine is level.
3. Pull the engine oil dipstick from its holder (Figure 40, Item 10, Figure 40).
4. Determine if engine oil is low. Oil should be between the upper and lower limit (add oil) lines.
5. If oil is below the “Add Engine Oil” line, add oil up to the upper limit on the dipstick. Allow enough time for any oil to make its way to the oil pan before rechecking.

### **CAUTION — Do Not Overfill Oil Pan**

**DO NOT** overfill the oil pan with engine oil. Always keep the engine oil level at the upper limit lines on the dipstick due to the tilting of the engine during operation.

## Changing Engine Oil And Filter


1. Change the engine oil after the first 5 hours of use, then change every 6 months or 125 hours.
2. Remove the oil filler cap (Figure 40, Item 13), and fill engine crankcase with recommended type oil as listed in Table 2. Fill to the upper limit of dipstick.
3. Crankcase capacity with filter replacement is 8 quarts, (7.57 liters). Refer to Table 10 for recommended viscosity grade for temperature range.

**Table 10. Recommended Viscosity Grades**

SAE 0W-30, 0W-40	
SAE 5W-30, 5W-40	
SAE 10W-30, 10W-40	
SAE 15W-40	
SAE 20W-50	
°F	-20    0    20    32    40    60    80    100
°C	-30    -20    -10    0    10    20    30    40
TEMPERATURE RANGE EXPECTED BEFORE NEXT OIL CHANGE	

## Oil Filter (125 Hours)

1. Replace the engine oil filter (Figure 41) every oil change or 125 hours. Refer to your engine manual for specific details to perform this operation.

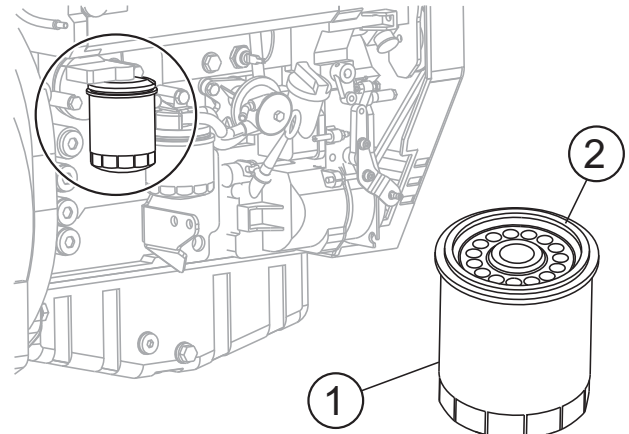


1. Engine Oil Filter
2. Filter Seal

**Figure 41. Oil Filter**

2. Be sure to coat the **seal** of the new oil filter with clean engine oil.
3. Spin on new filter until seal make contact with surface, then tighten additional 2/3 to 3/4 turn.

## Fuel Filter (500 Hours)

Replace the engine fuel filter (Figure 42) every 500 hours. Refer to your engine manual for specific details to perform this operation.

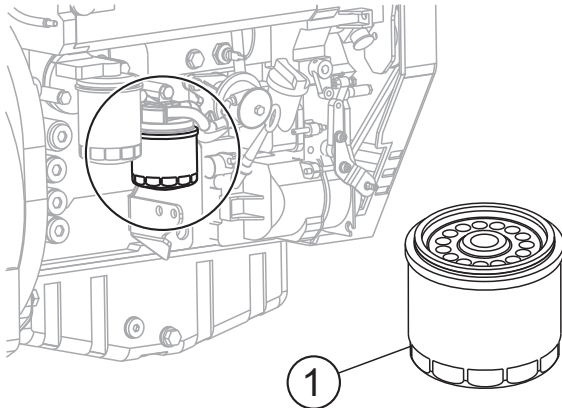

**Figure 42. Fuel Filter Removal**

## Oil And Fuel Lines

Check the oil and fuel lines and connections regularly for leaks or damage. Repair or replace as necessary.

## Engine Tune-Up

See your engine manual for specific information on tuning up your engine.



See the engine manual supplied with your machine for appropriate engine maintenance schedule and troubleshooting guide for problems.

At the front of the book, there is a “Daily Pre-Operation Checklist.” Make copies of this checklist and use it on a daily basis.

Disconnect negative (ground) battery cable and secure away before attempting any service or maintenance on the saw.

## LUBRICATION

This saw has many service-saving features, including fully enclosed oil bath lubricated blade shaft bearings that require no daily lubrication.

This saw has 4 grease fittings on the front axle assembly. See Figure 43.


Grease these fittings every 125 hours of operation with a premium grade waterproof E.P. (extreme pressure) grease.

### **! WARNING — Crush Injury**



#### **Prevent Crush Injury!**

Ensure the saw is securely placed on blocks before servicing lubrication points.

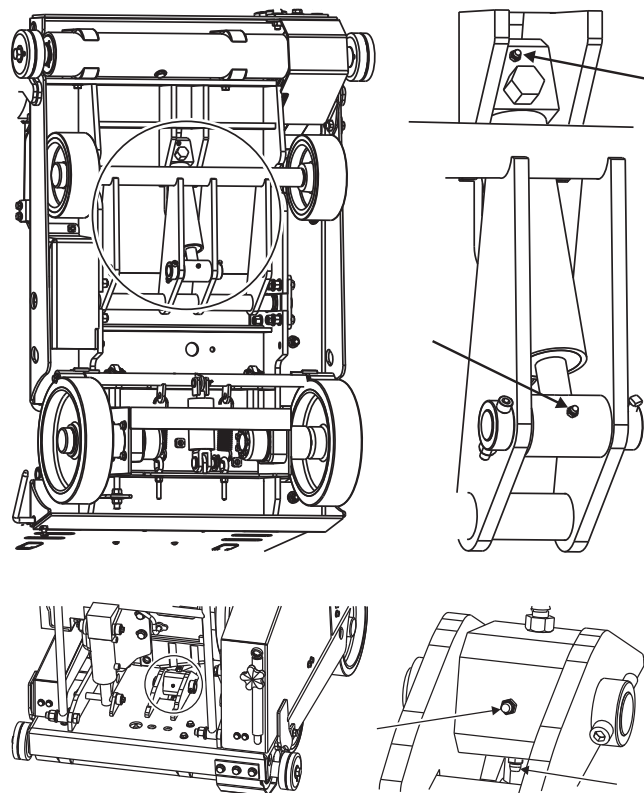


1. Front Axle Pivot Bearing
2. Hydraulic Lift Cylinder End

**Figure 43. Grease Fittings**

## COOLING SYSTEM

The Deutz 2011 Series engine uses a robust, heavy duty oil cooler system to cool the engine. The cooling system will benefit from periodic inspection and cleaning.

1. Disconnect the air intake hose at the lifting bale (Figure 44, Item A).
2. Remove 3 bolts that mount the air filter bracket to the engine (Item B), and cover the oil cooler (Item C).
3. Remove the air box cover (Item D).

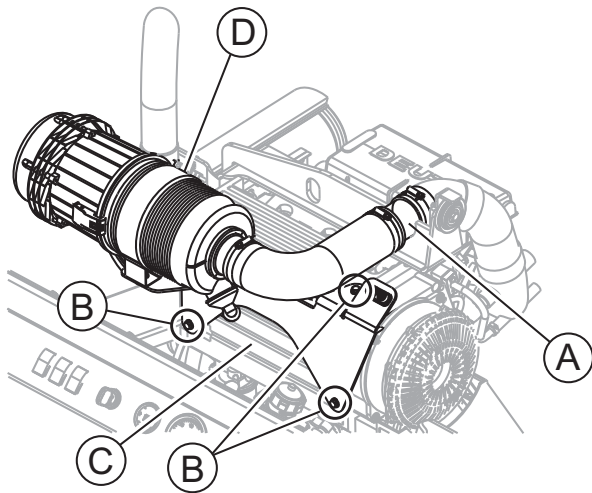

**Figure 44. Air Cleaner Removal**

4. Use a nylon bristle brush to gently brush the underside of the oil cover to break loose any accumulated dirt and debris.
5. Using compressed air, carefully blow from the top of the oil cooler to remove lodged dirt and debris. Blow out any dirt out of the air box.
6. Use compressed air to next blow accumulated dirt and debris from the fan air intake, fan, and fan tunnel.
7. Using a non-caustic degreasing agent, soak entire oil cooler and let sit for several minutes. With low pressure water, such as a garden hose with a spray nozzle, thoroughly rinse oil cooler and air box out.
8. Re-install air box cover, air filter assembly and mount, and tighten air intake hose connector.

Refer to your engine manual for additional information.

## BATTERY/CHARGING SYSTEM

### **! WARNING — Battery hazards**



Always recharge the battery in a well-ventilated area to avoid risk of a dangerous concentration of combustible gases.



Battery electrolyte contains corrosive, toxic chemical. (dilute sulfuric acid). Avoid contact with eyes and skin.



Shock or Fire due to electric short-circuit. Disconnect battery cables before inspecting electrical system and never "spark" battery terminals to test for charge.

This saw uses a Group 75, 12 Volt, 850 CCA (cold cranking amp) AGM Technology battery. See Figure 45.

1. Check and clean battery terminals for corrosion.
2. Never attempt to charge a battery that is frozen. The battery can explode unless first allowed to thaw.
3. Disconnect the negative terminal ( - ) of the battery during storage. If unit will be stored where ambient temperature will drop to  $-15^{\circ}\text{C}$  or less, remove and store battery in a warm, dry place.

## Replacing the Battery

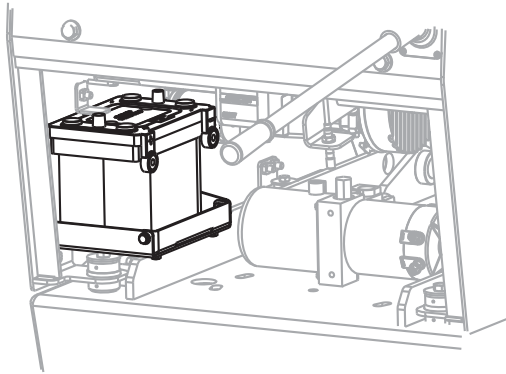


Figure 45. Battery Location

1. Remove rear access panel.
2. Disconnect both negative battery cables first, then disconnect both positive battery cables to prevent arcing.
3. Remove top battery retainer clip (Figure 46, Item A).
4. Remove lower battery retainer (Figure 46, Item B).
5. Carefully slide battery out of tray. Dispose of properly in accordance with ordinances and regulations in your area.
6. Install new battery in tray.
7. Install lower battery retainer. Push retainer tightly against battery and tighten bolt.
8. Install top battery retainer clip.
9. Re-connect both positive cables first, then both negative cables to prevent arcing.


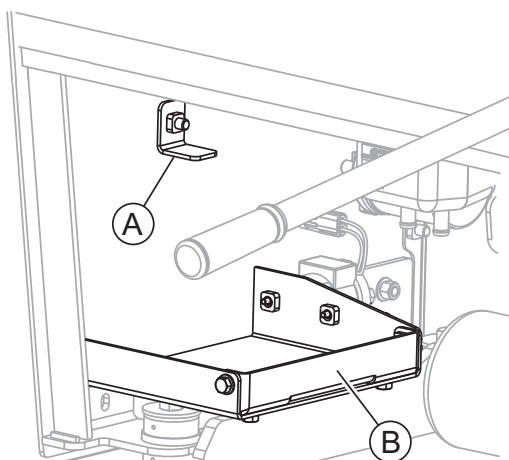


Figure 46. Battery Tray and Retainer Clips

## REMOVABLE GUARDS AND ACCESS PANELS

For ease of service access, the guards and access panels shown in Figure 47 are removable.

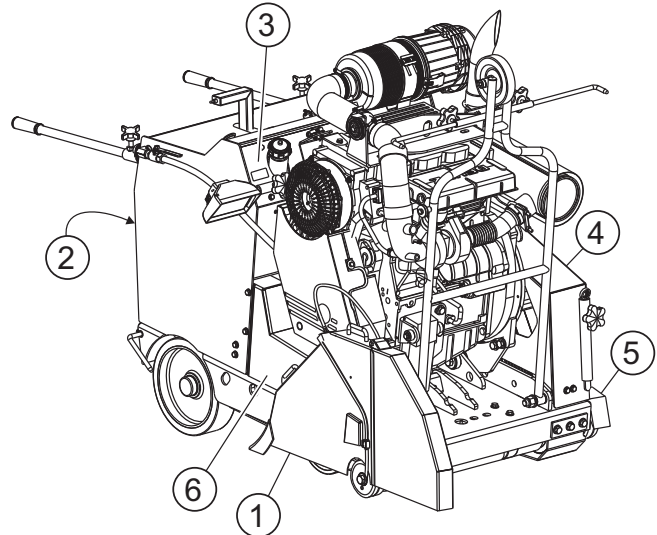

1. **Blade Guard**
2. **Rear Access Panel**
3. **Console Access Panel**
4. **Belt Guard**
5. **Flange Guard**
6. **Engine/SLH Guard**


Figure 47. Guards & Panels

### **⚠ WARNING — Replace Guards**

Replace guards and panels prior to starting the engine.

## BELTS AND PULLEYS

This saw uses a pair of Blade Shaft Drive Belts (5G 3VX 530) and a Hydrostatic Pump Belt (AX-35).

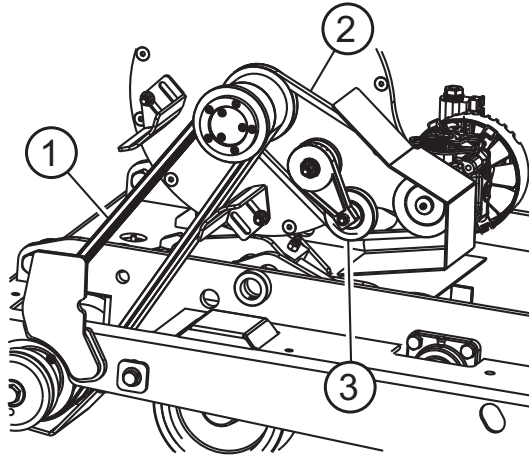

1. Blade Shaft Drive Belt
2. Pump Drive Belt
3. Belt Tensioner Pulley

Figure 48. Belt Locations

## V-Belt Tension

**CAUTION — Keep belts clean**

Keep belts clean of foreign material that may cause slippage. Never dress belts as this can cause premature failure.

The V-belt tension on this saw is automatically controlled by the hydraulic system that actuates the blade shaft engage/disengage system. Hydraulic pressure exerted on the engine tilt cylinder applies force on the belt drive system to engage blade shaft rotation.


Engine must be at idle when engaging or disengaging blade shaft drive:

### To STOP Blade shaft Rotation:

Push rocker switch labeled BLADE SHAFT forward. Engine will tilt forward, disengaging the drive belt.

### To START Blade shaft Rotation:

Push rocker switch labeled BLADE SHAFT backward. Engine will tilt back, engaging the belt drive.

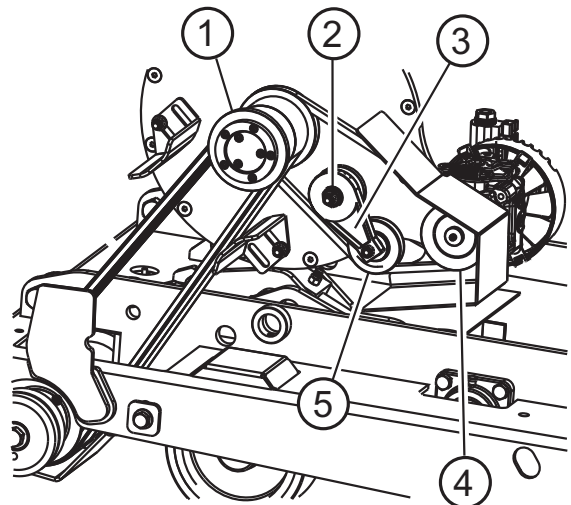

1. Engine Sheave
2. Tensioner Nut
3. Tensioner Base
4. Jackshaft Pulley
5. Tensioner Pulley

Figure 49. Belt Drive System




## ROTARY BELT TENSIONER

The rotary belt tensioner system uses a 9/16"-headed nut and a 15/16" or 1" nut to set belt tension by positioning an arm between the tensioner pulley and the tensioner base. Ridges on the base mark the amount of tension.

Adjust to 3-1/2 notches on the tensioner:

1. Loosen the 9/16" nut.
2. Rotate the tensioner nut clockwise until the desired belt tension is achieved.
3. Tighten the 9/16"nut.

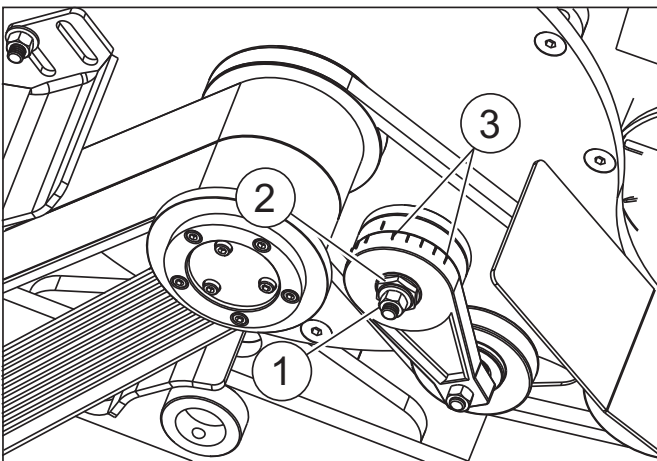


1. 9/16" Nut
2. Tensioner Nut
3. Adjustment Notches

**Figure 50. Tension Adjustment Notches**

## BLADE SHAFT


The fully enclosed blade shaft eliminates most maintenance (Figures 51 and 52). Should the blade shaft need service or repair however, contact the manufacturer for details.

### Blade Shaft Assembly

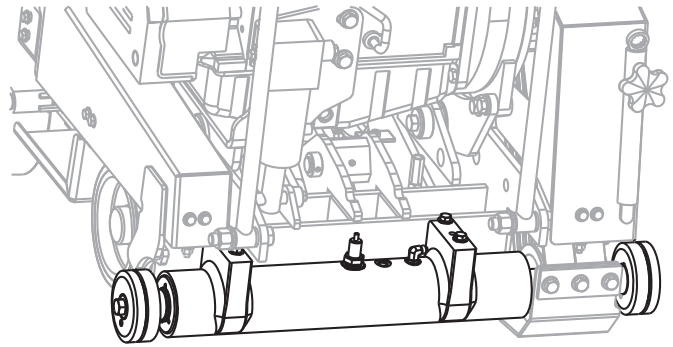

**Figure 51. Blade Shaft Assembly**

### External Components

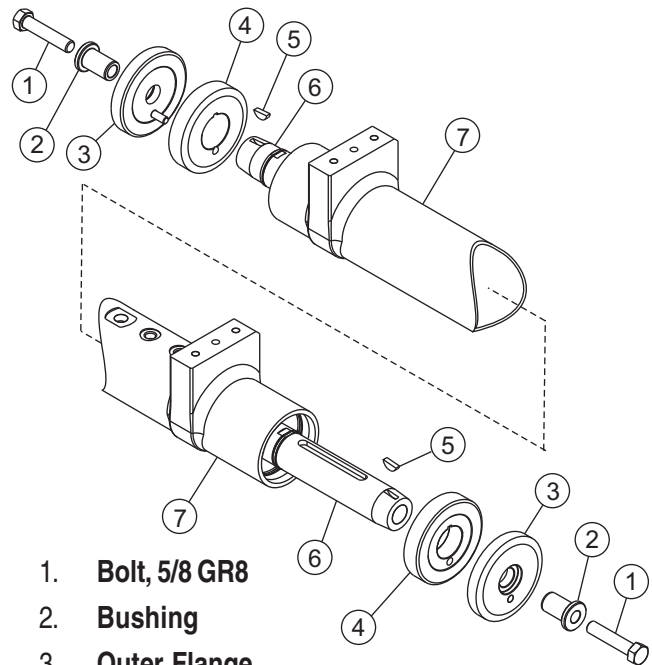

1. Bolt, 5/8 GR8
2. Bushing
3. Outer Flange
4. Inner Flange
5. Drive Key
6. Blade shaft
7. Blade shaft Housing

**Figure 52. Blade Shaft External Components**




## Removal and Replacement

To ensure correct blade shaft/wheel alignment, this operation should be performed by an authorized service center.

### Blade Alignment

Maintaining proper blade and drive system alignment will allow the saw to cut lines that are straight without much effort. Therefore the blade shaft flanges **MUST** be equidistant to the sides of the saw, (+/- .030"). See Figure 53 below where distance A must equal distance B.

The second requirement for the blade is that it **MUST** be square to horizontal (90° to flat surface). See Figure 53.

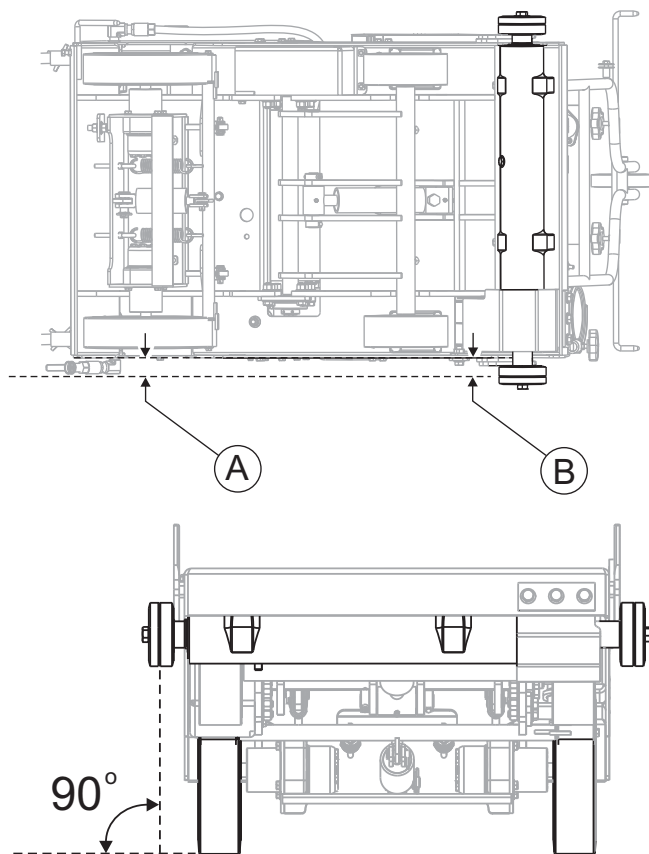


**Figure 53. Blade Alignment Requirements**

## DRIVE SYSTEM ALIGNMENT

In addition to blade alignment, maintaining proper blade and drive system alignment will allow the saw to cut lines that are straight without much effort. Therefore the front wheels and blade shaft axes **MUST** be at right angles to the frame edge.

In Figure 54, you see the distance "A" on the right side is shown as "A + .187" which means that the distance between centers of the front and rear drive axles are 3/16" longer than on the opposite side. This will have the effect of causing the saw to "steer" slightly to the left. After becoming familiar with the saws particular sawing characteristics, the operator may wish to have this alignment altered to fit his own preferences or to fit a particular application.

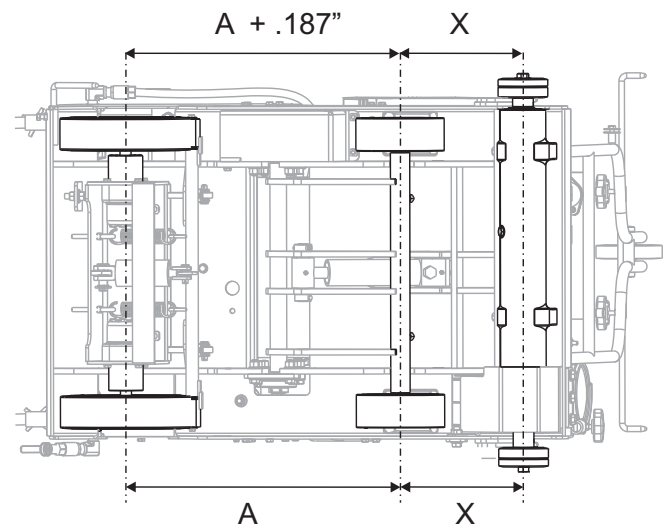


**Figure 54. Wheel Alignment Requirements**

### Drive System Alignment Adjustment

The drive wheels are aligned by adjusting the entire rear drive assembly.

1. Loosen the transaxle attachment bolts just enough to move the transaxle. Do not completely loosen the bolts.
2. Loosen and tighten the alignment jackscrew nuts to move the transaxle, and thus the wheels, in the appropriate direction to achieve the desired alignment distance (Figure 54).

- Lock down the transaxle attachment bolts when the appropriate alignment distance is set.

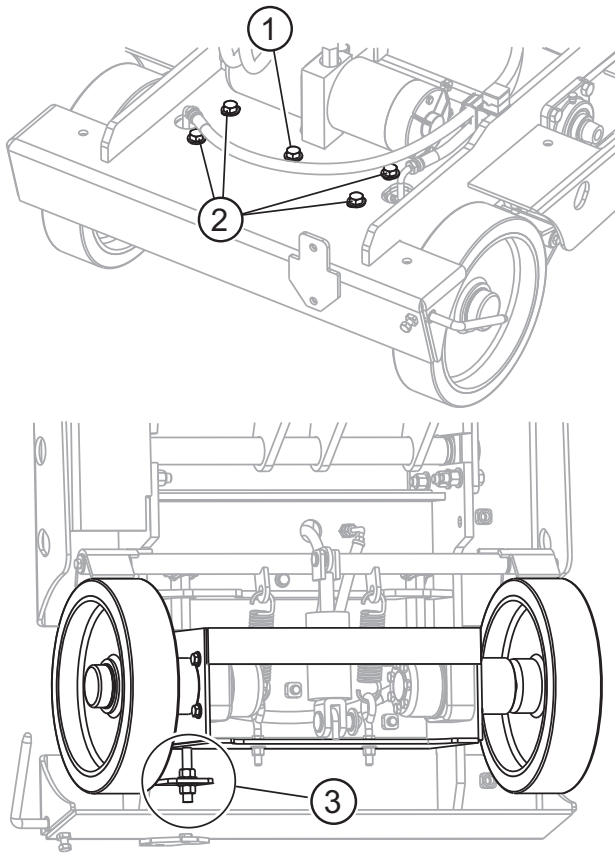

- Pivot Attachment Bolt
- Adjustment Attachment Bolts
- Adjustment Screw


**Figure 55. Drive Wheel Alignment Bolt Locations**

## BLADE FLANGE REMOVAL/INSTALLATION

Correct removal or installation of the inner blade flange requires a flange puller (p/n 18503). See Figure 56, items 2 and 3.

### **WARNING**

If unfamiliar with this operation, seek assistance or training from someone that is familiar with this operation. Because of the tapered fit between the blade flange and blade shaft, 5-10 tons of force is required to release the inner flange from the blade shaft. Both parts and tools can become dangerous projectiles if instructions are not followed properly.

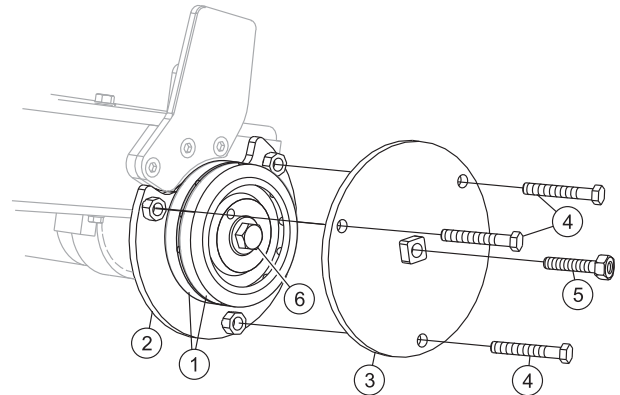

- Blade Flange
- Horseshoe Puller Plate
- Puller Plate
- Perimeter Bolt
- Center Puller Bolt
- Blade Mounting Bolt

**Figure 56. Blade Flange Puller**


## Removing the Inner Blade Flange

- With the outer blade flange in place, remove the blade mounting bolt (Figure 56, item 6).

### **WARNING — Outer Flange**

The outer flange **MUST** be in place to prevent the puller assembly and inner flange from flying off when the taper breaks loose. Injury or equipment damage could otherwise result.

- While the 3 perimeter bolts (item 4) hold the two puller plates together, slide the horseshoe plate (item 2) of the flange puller behind the shaft side of the inner flange.
- Tighten the center puller bolt (item 5) to remove the inner flange from the blade shaft.

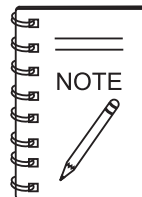

If the inner flange does not readily break free from the tapered blade shaft while the center puller bolt is tightened, lightly tap on the center puller bolt to allow the flange to break free from the shaft.


## Installing the Inner Blade Flange

1. Ensure that the tapered portion of the blade shaft and the inner blade flange are clean and free of burrs or indentations. Clean and repair as necessary. See Figure 57.
2. Ensure that the drive key (Figure 57, item 6) is in place.
3. Slide the Inner Flange (item 5) onto the tapered portion of the blade shaft.

**⚠ CAUTION — Do not use lubricant**

**DO NOT** use lubricant of any kind. Lubricant prevents the tapered surface of the Flange and Shaft from mating properly.


4. Install the outer blade flange (item 3), flange bushing (item 2), and mounting bolt (item 1).
5. Tighten with a 1/2" impact wrench to seat the tapered surfaces of the inner flange and blade shaft.

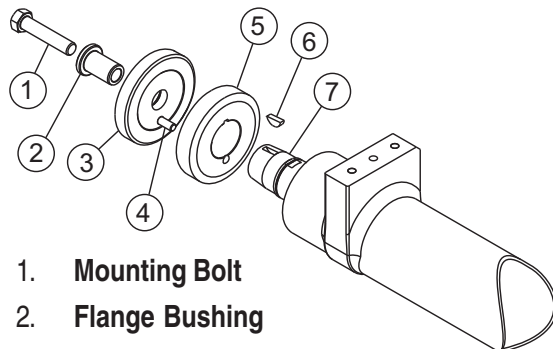

1. **Mounting Bolt**
2. **Flange Bushing**
3. **Outer Flange**
4. **Dowel Pin**
5. **Inner Flange**
6. **Drive Key**
7. **Blade Shaft**

**Figure 57. Inner Blade Flange Installation**

6. Loosen the mounting bolt and remove the outer flange and bushing.
7. Inspect the inner flange to ensure the proper seating of the tapered fit. The inner flange should be seated between .030" and 0.0" (flush) to the end of the blade shaft. See Figure 58.

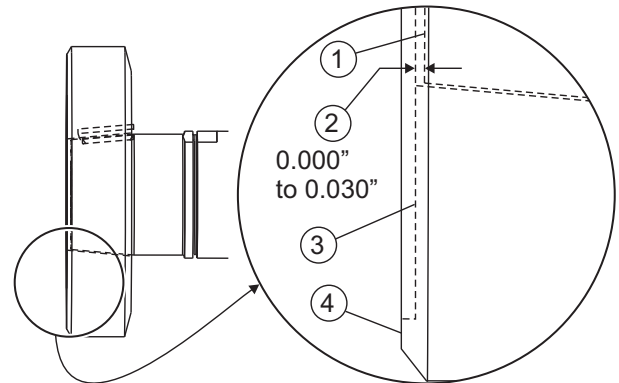


1. **Blade Shaft**
2. **Tolerance**
3. **Inner Flange Inside Face**
4. **Surface Area to be Checked For Runout While Rotating**

**Figure 58. Inner Flange Seating**

8. Test to ensure that the inner flange does not wobble when rotated. Use a dial indicator on the face of the flange (Figure 58, item 4). Maximum tolerance is .002" runout on the face of the flange when rotated.

## CIRCUIT BREAKERS AND STARTER RELAYS

Thermal circuit breakers and glow plug starter relays are located behind the console access cover at the top of the console. See Figure 59.

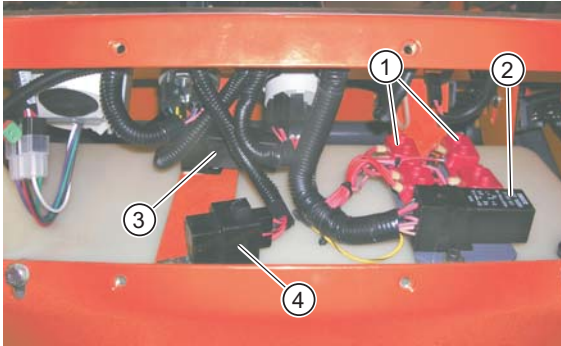

1. **Circuit Breakers**
2. **Relay, Glow Plug**
3. **Delay Timer**
4. **Starter Relay**

**Figure 59. Circuit Breakers and Starter Relay**

Under normal circumstances the circuit breakers do not require service. They automatically reset when an overload condition is corrected. If a breaker is cycling on and off, locate the cause of the electrical overload and repair as required.


## MAXIMUM CUT DEPTH ADJUSTMENT

The saw comes factory-adjusted for maximum usable cut depth. Should this setting need to be changed, perform the following:



While adjustment of the depth stop limiting bolts can change the maximum usable cut depth, they should not be adjusted to compensate for unit “wobble” or blade/cut problems. These are a result of other issues that should be addressed.

1. With the **BLADE REMOVED**, park the saw on a flat and level surface.
2. Fully lower the saw onto the depth limiting stop bolts. See Figure 60.
3. Measure the distance from the blade flanges to the surface.
4. If adjustment is required, loosen locknut on the right-side depth limiting stop bolt (Figure 60, item 2) and screw bolt

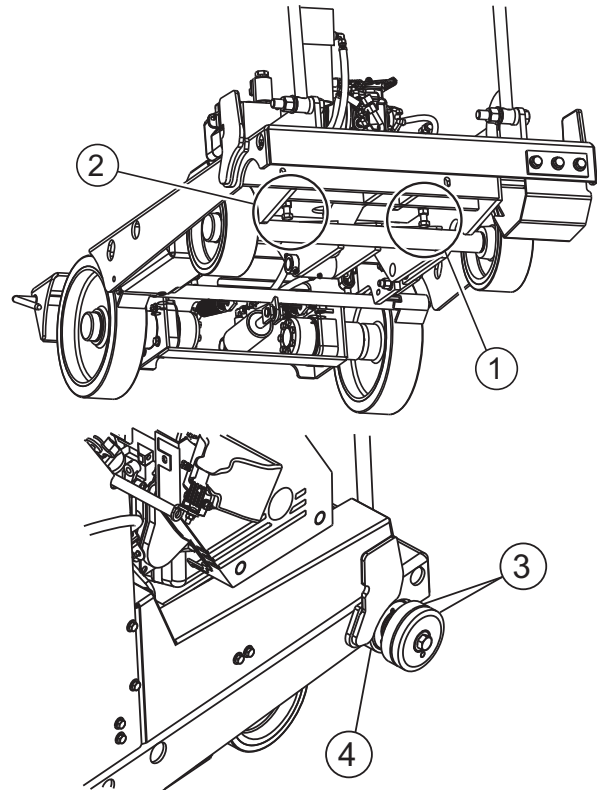

1. **Left-Side Stop Bolt**
2. **Right-Side Stop Bolt**
3. **Blade Flanges**
4. **Blade Shaft Housing**

**Figure 60. Depth Adjustment**


in several turns until it no longer makes contact with the axle.

5. Adjust the left-side stop bolt (item 1) in or out until the blade flange or lower belt guard achieves 1/8" to 3/16" ground clearance. Tighten lock nut on left side.
6. Raise saw and place 2 jack stands under the blade shaft housing.
7. While holding the raise-lower switch in the lowering position, raise the front axle assembly until it contacts the left-side depth limiting stop bolt.
8. While holding the axle firmly against the left-side depth limiting stop bolt, screw the right-side depth limiting stop bolt out until it makes contact with the axle. Tighten lock nut on right side.

Following this procedure will prevent torsional stresses being applied to the frame when fully lowered due to uneven adjustment of depth limiting stop bolts.

## PTO DRIVE MAINTENANCE

Disassembly of the PTO drive and replacement of the PTO drive sheave/bearing assembly requires the PTO bearing puller, p/n 18610. The sheave/bearing assembly is not serviceable and must be replaced as a complete unit. Reference Figure 61 for components.

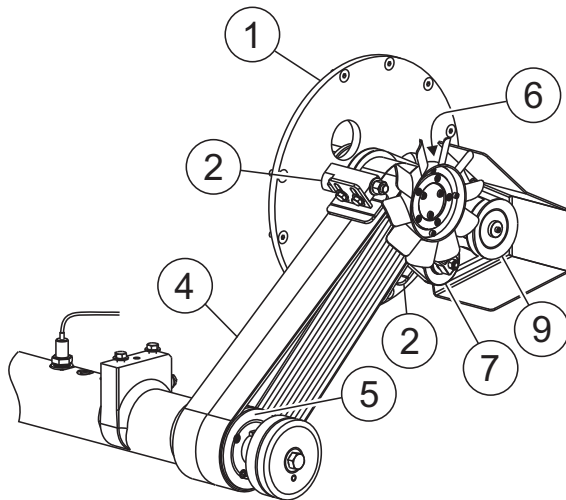


1. **Engine Adapter Plate**
2. **Belt Shoe**
3. **Drivebelt Pulley**
4. **Drivebelts**
5. **Blade shaft Pulley**
6. **Idler Arm Tensioner**
7. **Idler Pulley**
8. **Idler Arm Belt**
9. **Pump Drive Pulley**

**Figure 61. PTO Drive Assembly**

## RAISE-LOWER SYSTEM

The saw uses a 12-volt hydraulic pump and hydraulic cylinder to power the raise-lower system.


1. Check hydraulic oil level daily.
2. When checking or adding hydraulic oil, place the machine so the saw frame is level to get an accurate reading.

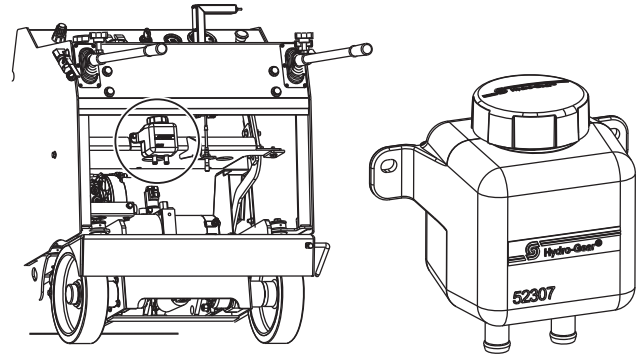

**Figure 62. Hydraulic Oil Reservoir**

3. Hydraulic oil should be 1/2" to 1" in the oil reserve when cold.
4. If hydraulic oil level is low, add oil to 1/2" to 1".
5. Use **15W-40** premium grade engine oil.



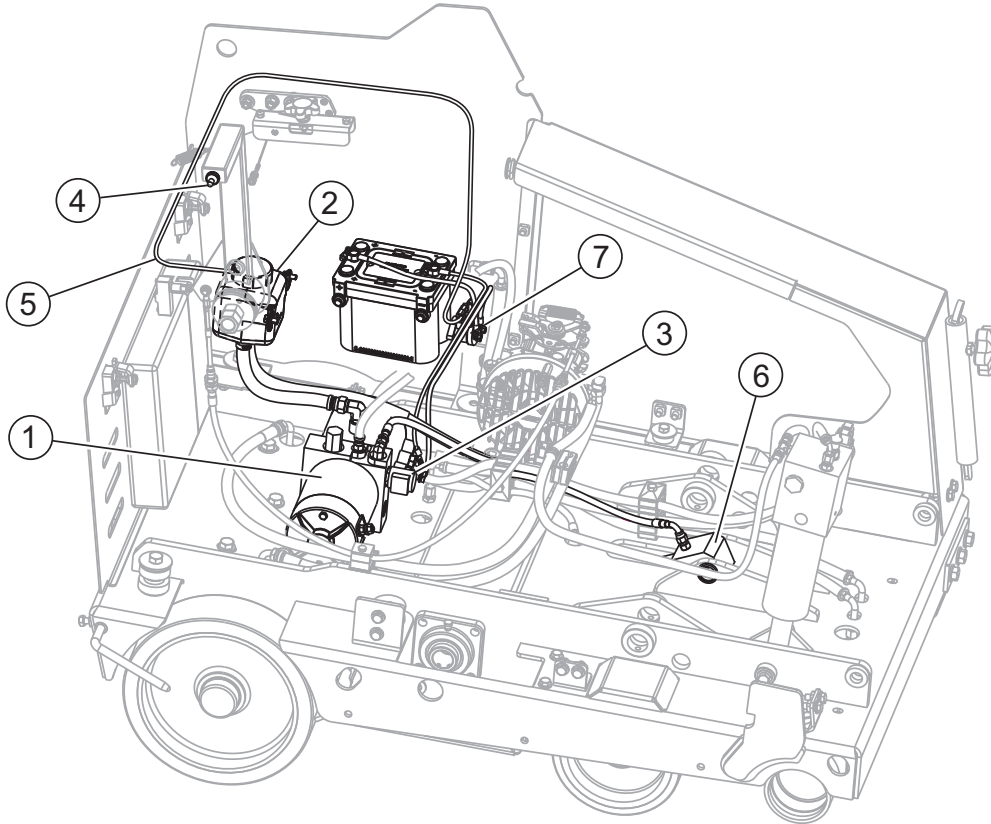

1. Pump Motor
2. Lift Pump Reservoir
3. Raise-Lower Valve (Solenoid)
4. Raise-Lower Toggle
5. Raise-Lower Wire Harness
6. Lift Cylinder
7. Lift Pump Solenoid

**Figure 63. Raise-Lower System**


## Raise-Lower System Troubleshooting

Refer to Figure 63 and the following table to assist in troubleshooting the raise-lower system.

Table 11. Raise-Lower System Troubleshooting	
Indication	Possible Causes
Won't raise	Battery discharged, raise-lower solenoid faulty, cables loose or damaged, defective wiring
Won't lower	Bad switch, faulty wiring connection, coil bad, valve cartridge bad



## F-N-R CONTROL ADJUSTMENT

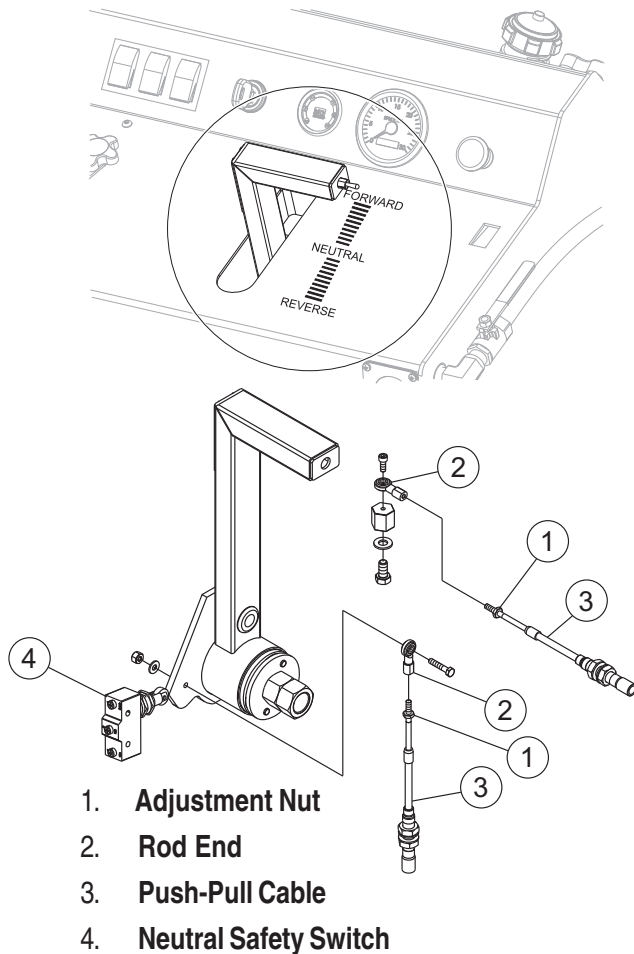

**Figure 64. F-N-R Control Adjustment**

Control (cable) adjustment for the F-N-R should not normally be necessary; however, some adjustment can be made on each of the rod end adjustment nuts. See Figure 64.

## HYDRAULIC SYSTEM MAINTENANCE

### **! DANGER — Hydraulic Leaks**




**NEVER** use your hand to find hydraulic leaks. Use a piece of wood or cardboard. Hydraulic fluid injected into the skin must be treated by a knowledgeable physician immediately or severe injury or death can occur.

Many hydraulic problems are a result of low fluid levels. Before checking any other possibilities, make sure the hydraulic fluid level is correct. See Figure 66 for hydraulic components. Hydraulic problems could be a result of the following:


1. Incorrect hydraulic fluid level.
2. Plugged hydraulic oil filter
3. Loose or leaking fittings.
4. Ruptured/damaged hydraulic lines.
5. Faulty hydraulic pump.

### Hydraulic Oil System

1. Check hydraulic oil level daily.
2. When checking or adding hydraulic oil, place the machine so the saw frame is level to get an accurate reading.
3. Hydraulic oil should be 1/2" to 1" in the Oil Reserve when cold.
4. If hydraulic oil level is low add oil to 1/2" to 1".
5. Use **15W-40** premium grade engine oil.

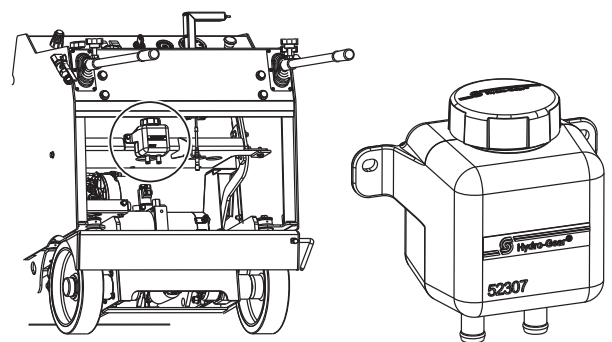


**Figure 65. Oil Reserve Fill Line**

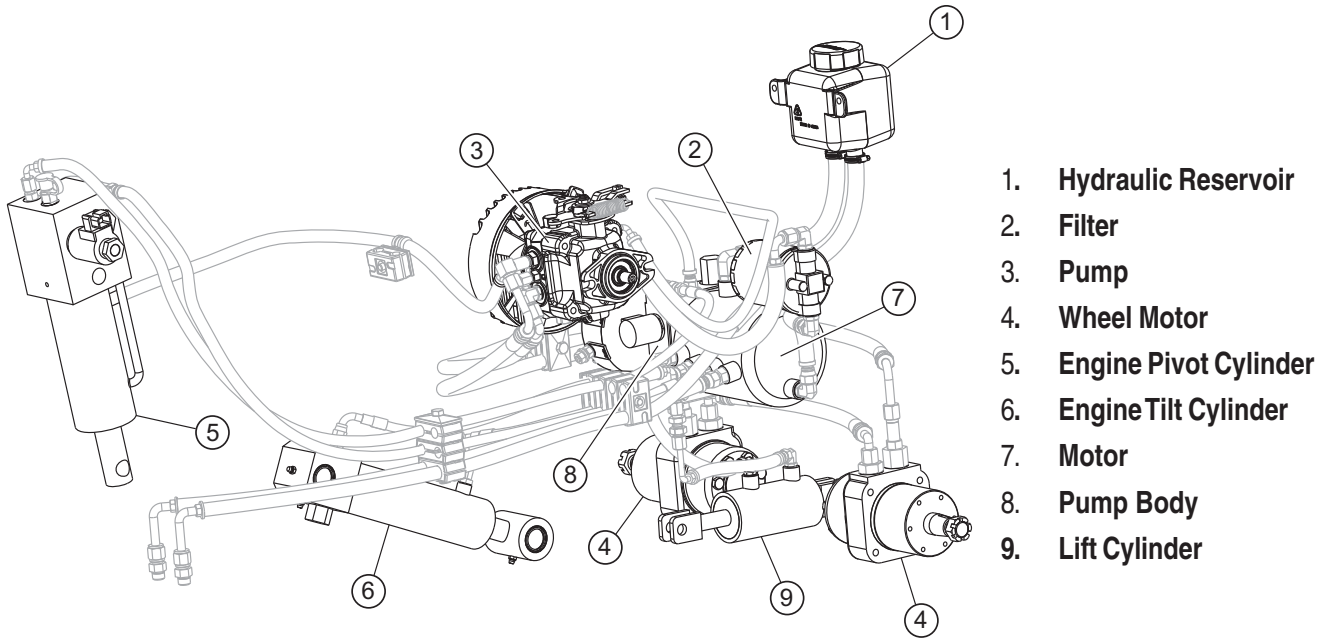

**Figure 66. Hydraulic System**

## DRAINING THE HYDRAULIC SYSTEM

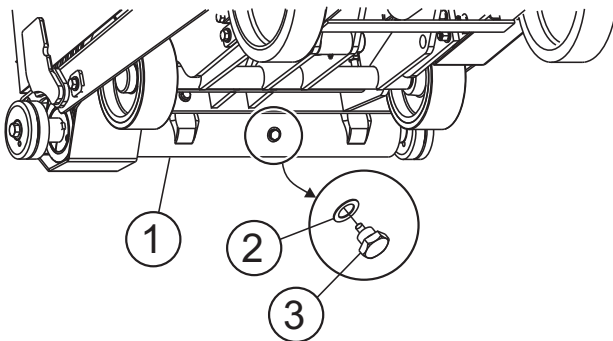

**Figure 67. Hydraulic System Drains**

1. Place an oil pan beneath the Blade Shaft Housing (Figure 67, item 1).
2. Remove the drain plug from the bottom of the blade shaft housing (item 3)
3. Collect and dispose of the used oil (and filter) in accordance with ordinances and regulations of your area.
4. Remove used oil filter.
5. After oil is drained, reinstall drain plug.
6. Pre-fill and install a new oil filter.

### **⚠ CAUTION — Pre-fill Filter**

To prevent hydraulic pump damage, pre-fill the filter with oil prior to installing it.

7. Add oil to the system reservoir.
8. The reservoir will need to be filled several times.
9. Run the engine for 5-10 minutes to cycle the oil throughout the system.
10. Add oil as required.
11. Repeat process until oil level is stable after running engine.

## Tips When Draining and Filling the Hydraulic Oil System

1. It will take 3-4 quarts to fill the hydraulic system when new and somewhat less when changing the oil.
2. Remove the oil reservoir cap to speed oil draining.
3. When refilling the system, raise the saw halfway up, then lift the rear of the saw until the blade flanges touch the ground. This will help to speed the filling process.
4. After filling the system, jack the saw up so the drive wheels are off the ground. Start the saw and move the control handle half way into FORWARD to purge air out of the system.



If the blade shaft is drained completely, it will require approximately 1 gallon to refill.

## Stay-Level Handles (SLH)

The stay-level handlebar system is designed to require very little maintenance (Figure 68).

NEVER try to lift the saw with the handlebars (a lift bale is provided for lifting). DO NOT try to dislodge a stuck blade by prying or using excessive force on the handlebars.

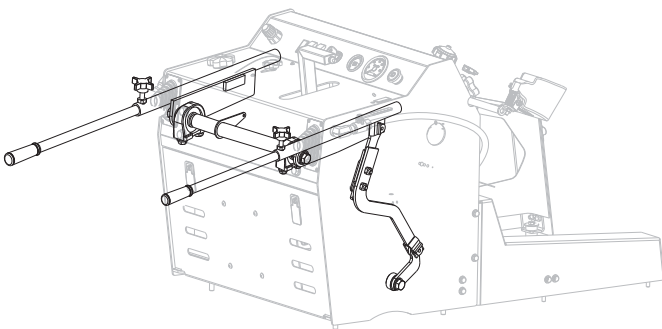


Figure 68. Stay Level Handlebar System

## LONG TERM STORAGE

- Remove the battery.
- Drain fuel from fuel tank and fuel lines.
- Clean exterior with a cloth soaked in clean oil.
- Store unit covered with plastic sheet in moisture and dust-free location out of direct sunlight.

### **CAUTION — Fuel**

Never store the saw with fuel in the tank for any extended period of time. Always clean up spilled fuel immediately.

## DECOMMISSIONING SAW/COMPONENTS

Decommissioning is a controlled process used to safely retire a piece of equipment that is no longer serviceable. If the equipment poses an unacceptable and unrepairable safety risk due to wear or damage or is no longer cost effective to maintain (beyond life-cycle reliability) and is to be decommissioned (demolition and dismantlement), the following procedure must take place:

1. Drain all fluids completely. These may include oil, gasoline, hydraulic oil and antifreeze. Dispose of properly in accordance with local and governmental regulations. Never pour on ground or dump down drains or sewers.
2. Remove battery and bring to appropriate facility for lead reclamation. Use safety precautions when handling batteries that contain sulfuric acid.
3. The remainder can be brought to a salvage yard or metal reclamation facility for further dismantling.

# TROUBLESHOOTING (ENGINE)

## TABLE 12. TROUBLESHOOTING (ENGINE)

SYMPTOM	POSSIBLE CAUSE	SOLUTION
Will not start, no power with key "ON."	Emergency stop button pushed in?	Pull out E-Stop button.
	Battery disconnected or discharged?	Check cable connections, charge or replace battery.
	Ignition switch/wiring defective?	Replace ignition switch. Check wiring.
Will not start. No fuel present.	Fuel not available in fuel tank (tank empty)?	Fill with correct type of fuel.
	Fuel filter/lines clogged?	Replace fuel filter or fuel lines.
	Fuel tank cap breather hole clogged?	Clean or replace fuel tank cap.
	Air in fuel line?	Bleed fuel line.
	Injection valve clogged or defective?	Clean or replace.
Difficult to start, "fuel is available and compression is normal."	Wrong fuel type?	Flush fuel system, and replace with correct type of fuel.
	Contaminated fuel system (water, dirt)?	Flush fuel system.
	Air cleaner dirty?	Replace air cleaner.
Difficult to start, "fuel is available and compression is low."	Suction/exhaust valve stuck or protruded?	Re-seat valves.
	Piston ring and/or cylinder worn?	Replace piston rings and/or piston.
	Cylinder head not tightened properly?	Torque cylinder head bolts
	Head gasket damaged?	Replace head gaskets.



Certain operations referred to in this troubleshooting section such as re-seating valves or replacing piston rings may require special tools and must be performed by trained and competent personnel.



For further engine troubleshooting, see your engine owner's manual

## TROUBLESHOOTING (ENGINE)

**TABLE 12. TROUBLESHOOTING (ENGINE, CONTINUED)**

SYMPTOM	POSSIBLE CAUSE	SOLUTION
"Weak in power" compression is proper and does not misfire.	Intake air restricted?	Clear air intake of dirt and debris. Replace air cleaner elements as necessary.
	Improper fuel or contaminated fuel?	Flush fuel system if contaminated. Refill with clean fuel of prescribed quality.
	Injection line leaks?	Repair or replace lines.
	Charge air line leaking?	Repair or replace line.
"Weak in power" compression is proper but misfires.	Water in fuel system?	Flush fuel system and replace with correct type fuel.
	Ignition defective?	Replace ignition.
	Damaged or worn injector orifices?	Clean or replace injectors.
Engine overheats.	Wrong fuel type?	Flush fuel system, and replace with correct type of fuel.
	Intake air restricted?	Clear air intake of dirt and debris. Replace air cleaner elements as necessary.
	Injection valve defective?	Replace injection valve.
	Cooling fins dirty?	Clean cooling fins.
	Oil level too low or too high?	Adjust oil to proper level.
Rotational speed fluctuates.	Governor adjusted correctly?	Adjust governor.
	Governor spring defective or missing?	Replace governor spring.
	Fuel flow restricted?	Check entire fuel system for leaks or clogs.
Starter malfunction.	Loose, damaged wiring?	Ensure tight, clean connections on battery and starter.
	Battery insufficiently charged?	Recharge or replace battery.
	Starter damaged or internally shorted?	Replace starter.

## TROUBLESHOOTING (BLADE)

**TABLE 13. BLADE TROUBLESHOOTING**


SYMPTOM	POSSIBLE PROBLEM	SOLUTION
Blade slows or stops cutting.	Blade too hard for the material being cut?	Consult dealer or Multiquip for correct blade. Try cutting very soft material (sandstone, silica brick, cinder block) to "redress" the blade.
	Engine torque diminished because of loose or worn drive-belts?	Re-tension belts or replace.
	Insufficient engine power?	Check throttle setting. Refer to Engine Troubleshooting.
	Improper direction of rotation?	Check that the blade is properly oriented and rotational arrow points in a "down-cutting" direction.
	Blade is slipping on the blade shaft?	Check that the blade and flange pin are properly installed on the blade shaft.
Blade does not cut straight and/or true.	Blade misaligned on saw?	Check alignment integrity.
	"Cut gap" excessive or blade wobble?	Check blade shaft and flange for wear, damage and blade seating.
	Blade is excessively hard for the material being cut?	Check specification of the blade with the material being cut. Consult dealer or Multiquip for information.
	Blade being used at improper RPM?	Ensure blade surface feet per minute speed (SFPM) is approximately 10,000.
	Blade improperly mounted on arbor shoulders and flanges?	Ensure blade is properly affixed on the blade shaft.
	Excessive force applied to blade while cutting?	<b>DO NOT</b> force the blade in the cut. Apply a slow and steady pace when sawing.
Blade discoloring, crackling and/or wearing excessively.	Blade wearing out on one side and not the other?	Check blade shaft and flange for wear, damage and blade seating.
	Blades too hard for the material being cut?	Consult Dealer or Multiquip for correct blade. Try cutting very soft material (sandstone, silica brick, cinder block) to "redress" the blade.
	Blade improperly mounted on arbor shoulders and flanges?	Ensure blade is properly affixed on the blade shaft.
	Blade not receiving enough cooling water?	Ensure proper flow and volume of water is provided for wet cutting blades.
	Arbor hole out of round?	Ensure blade is properly affixed on the blade shaft.
	Incorrect blade chosen for material being cut?	Check specification of the blade with the material being cut. Consult dealer or Multiquip for information.
	Excessive force applied to blade while cutting?	Diamond abrasive material worn away or burnished into the metal. Check saw for alignment or damage and replace saw blade.






# ELECTRICAL DIAGRAM TO SN AF3700155

ELECTRICAL DIAGRAM UP TO S/N AF3700155

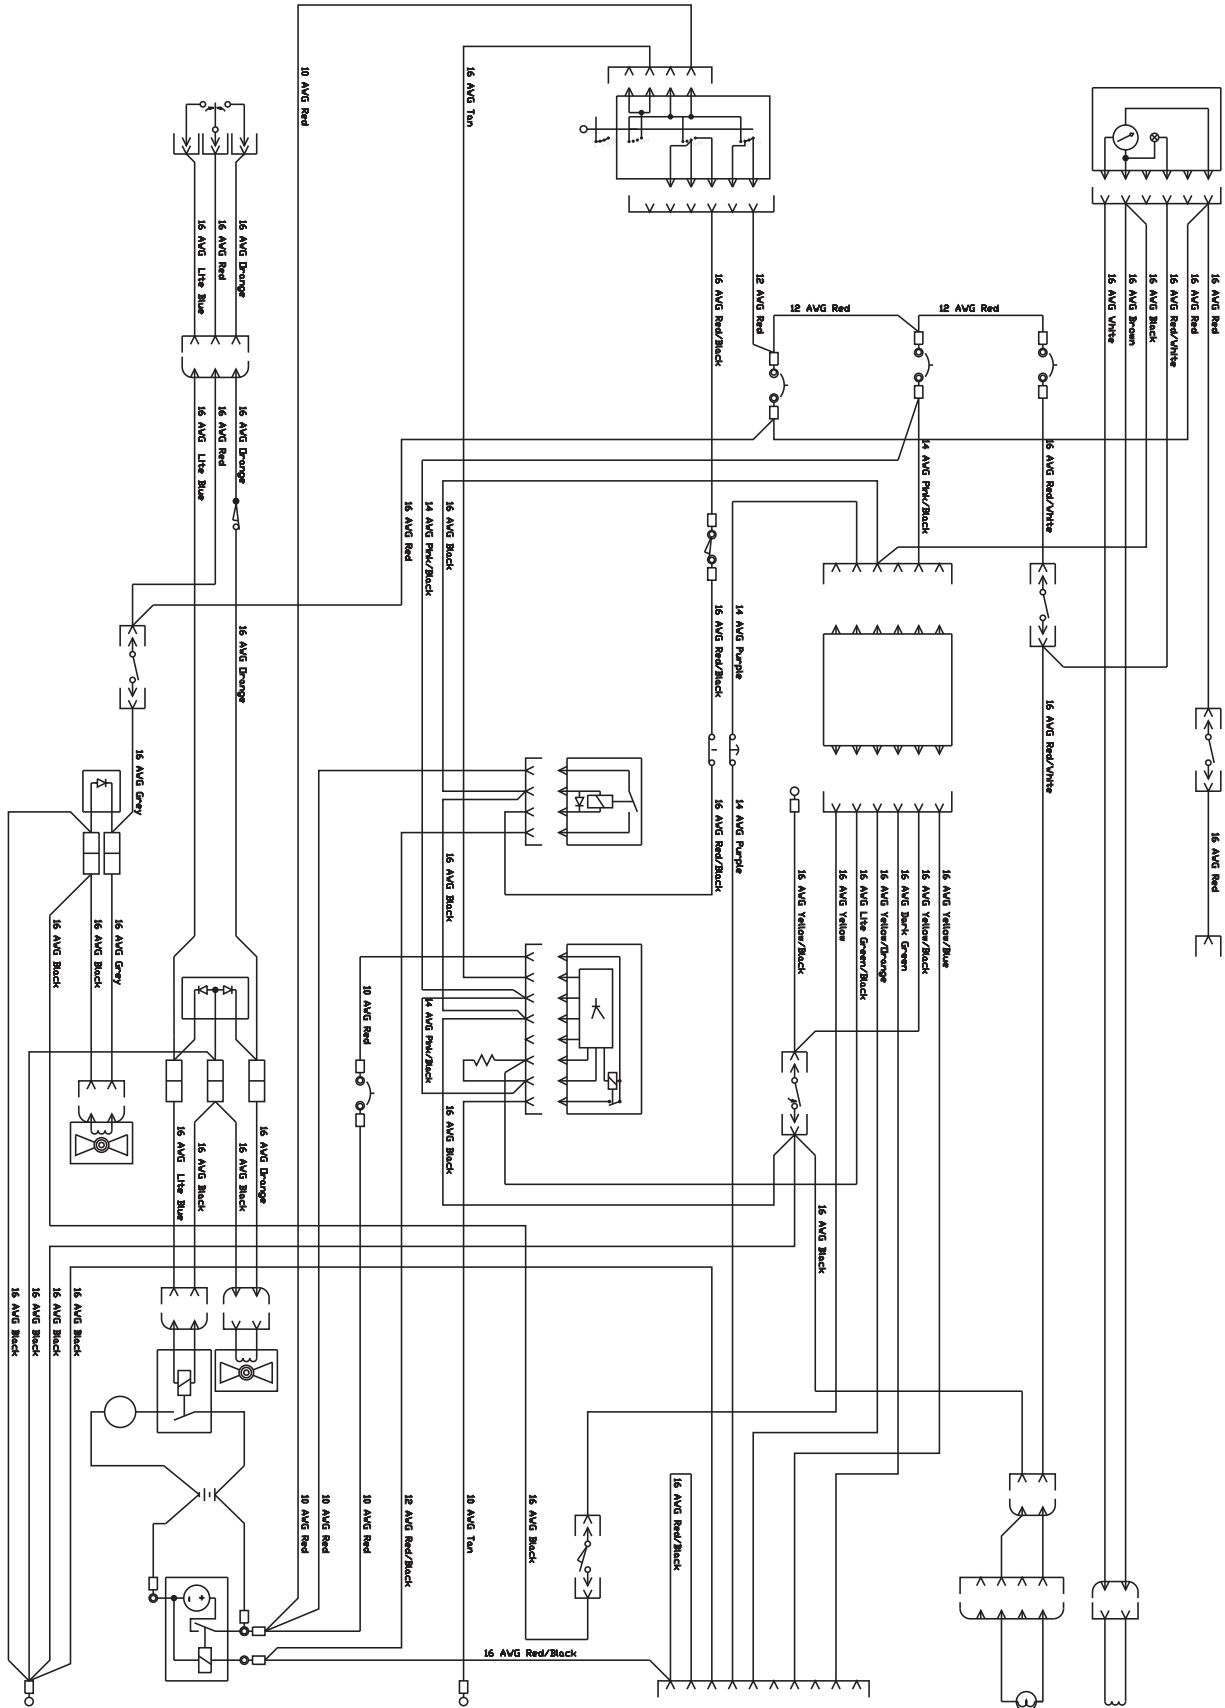


# ELECTRICAL DIAGRAM SN AF3700156 & UP

## ELECTRICAL DIAGRAM S/N AF3700156 AND UP

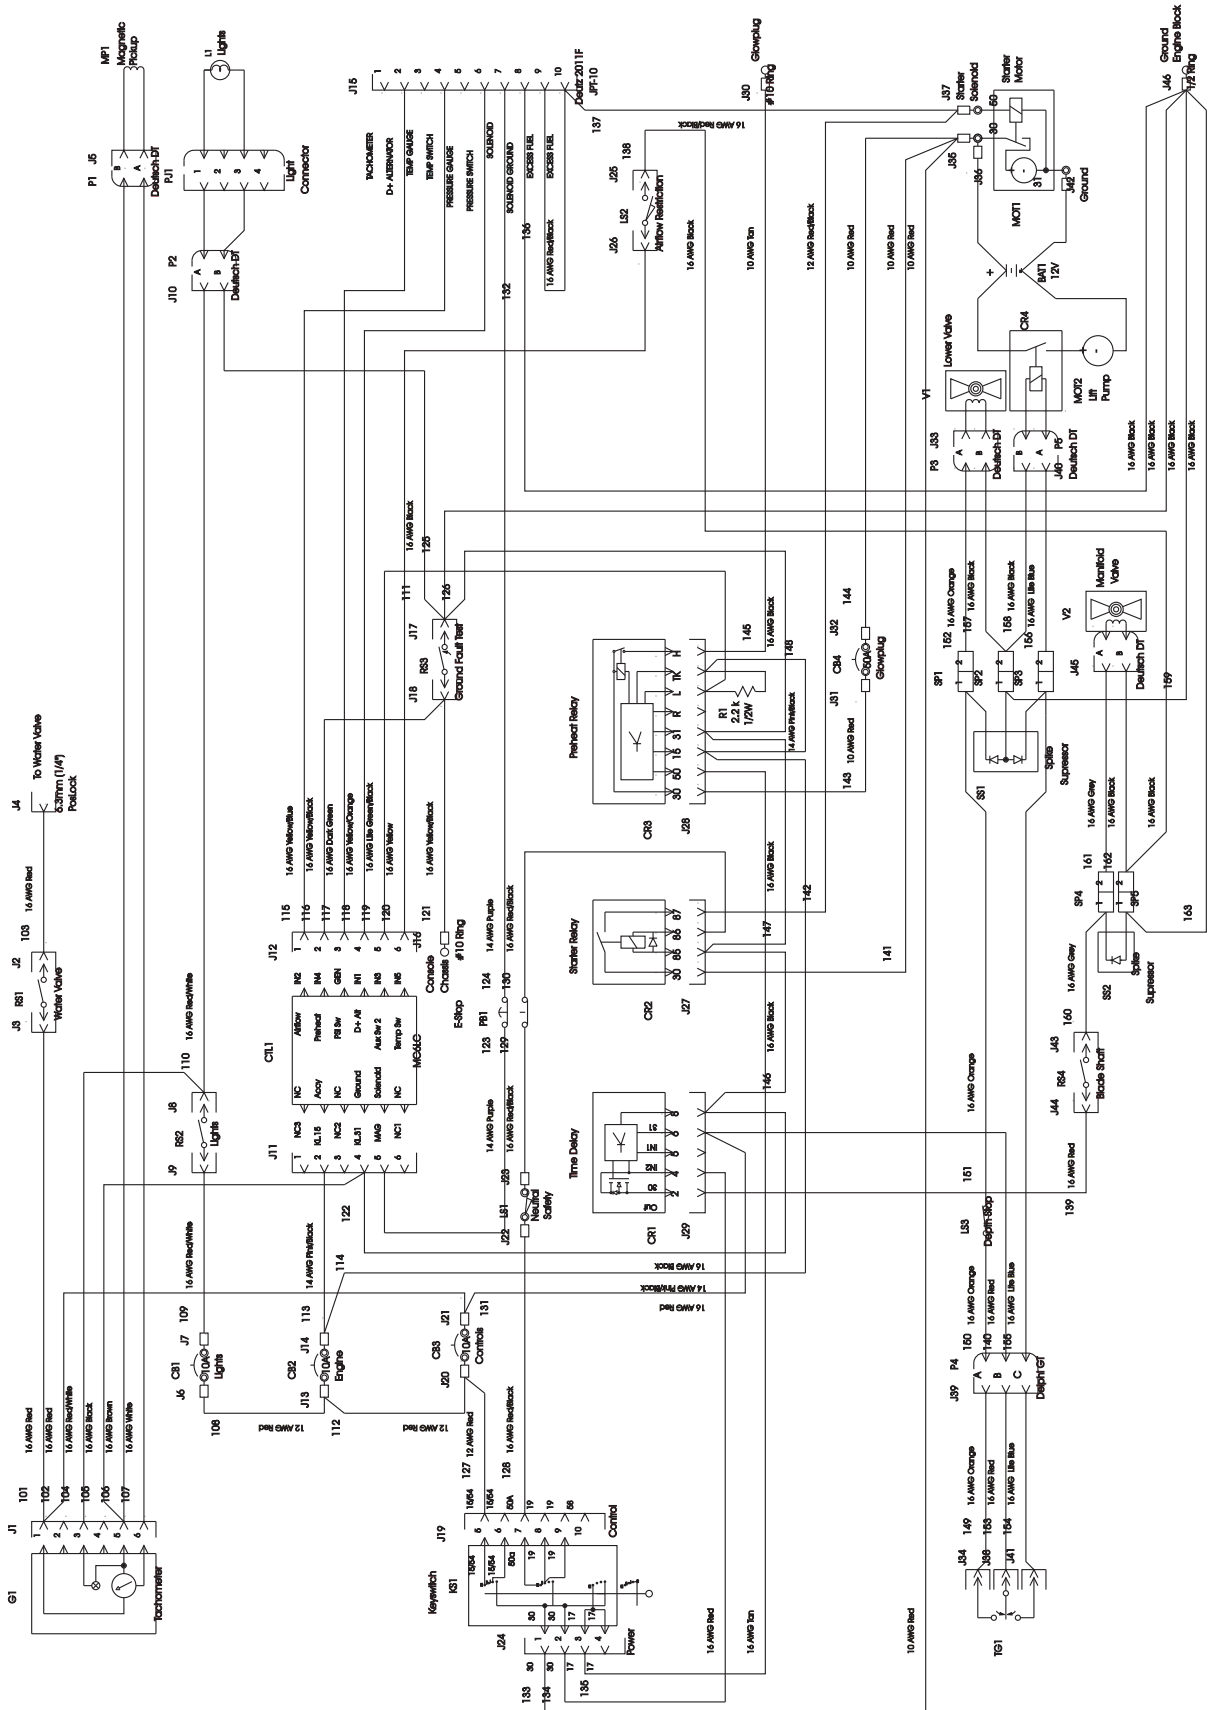

# HYDRAULIC SCHEMATIC TO SN AF3700155


HYDRAULIC SCHEMATIC TO SN AF3700155

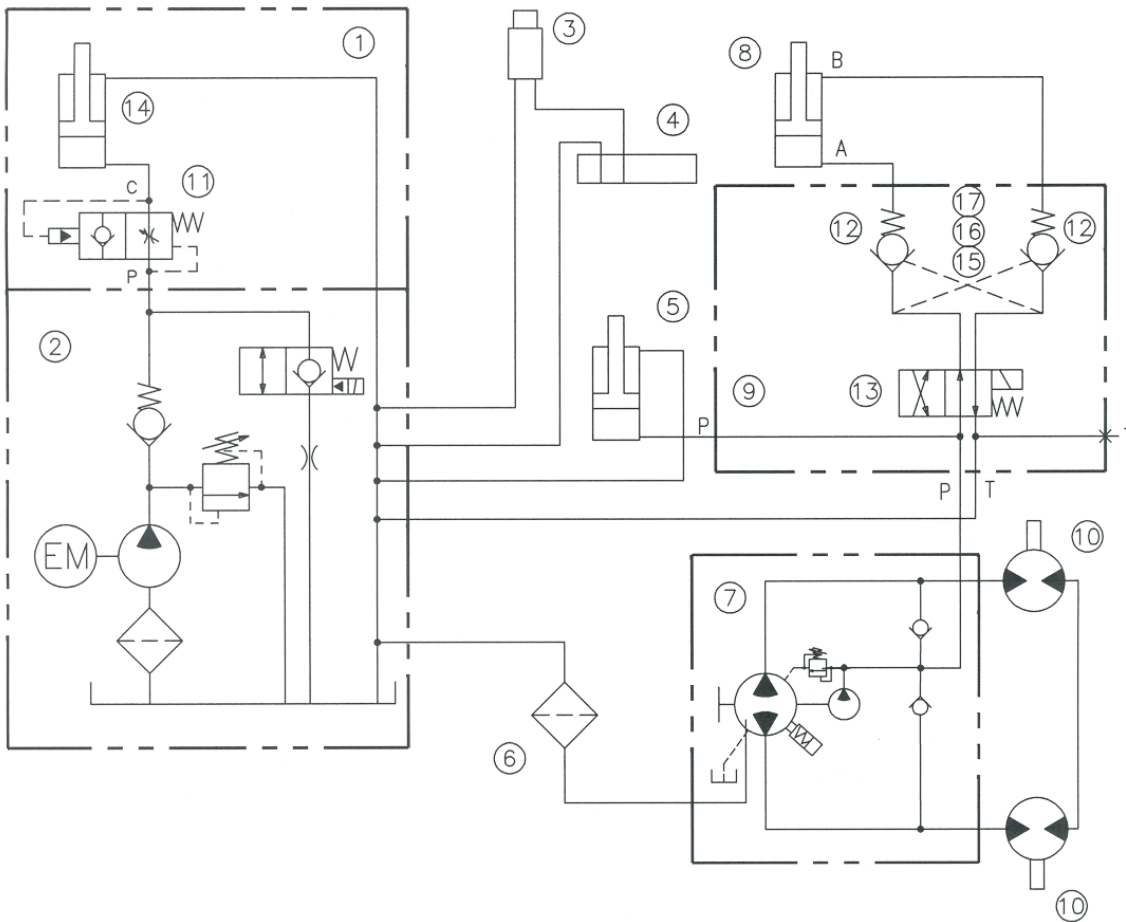

- |                               |                     |
|-------------------------------|---------------------|
| 1. Lift Cylinder Assembly     | 10. Wheel Motor     |
| 2. Lift Pump                  | 11. Velocity Fuse   |
| 3. Reservoir                  | 12. Check Valve (2) |
| 4. Blade Shaft Assembly       | 13. Valve 4W2P      |
| 5. Brake Cylinder             | 14. Lift Cylinder   |
| 6. Spin-On Filter             | 15. Pilot Piston    |
| 7. Hydrostatic Pump           | 16. O-Ring          |
| 8. Engine Pivot Cylinder 2.5" | 17. Backup (2)      |
| 9. Valve Assembly             |                     |

# HYDRAULIC SCHEMATIC SN AF3700156 & UP

HYDRAULIC SCHEMATIC SN AF3700156 AND UP

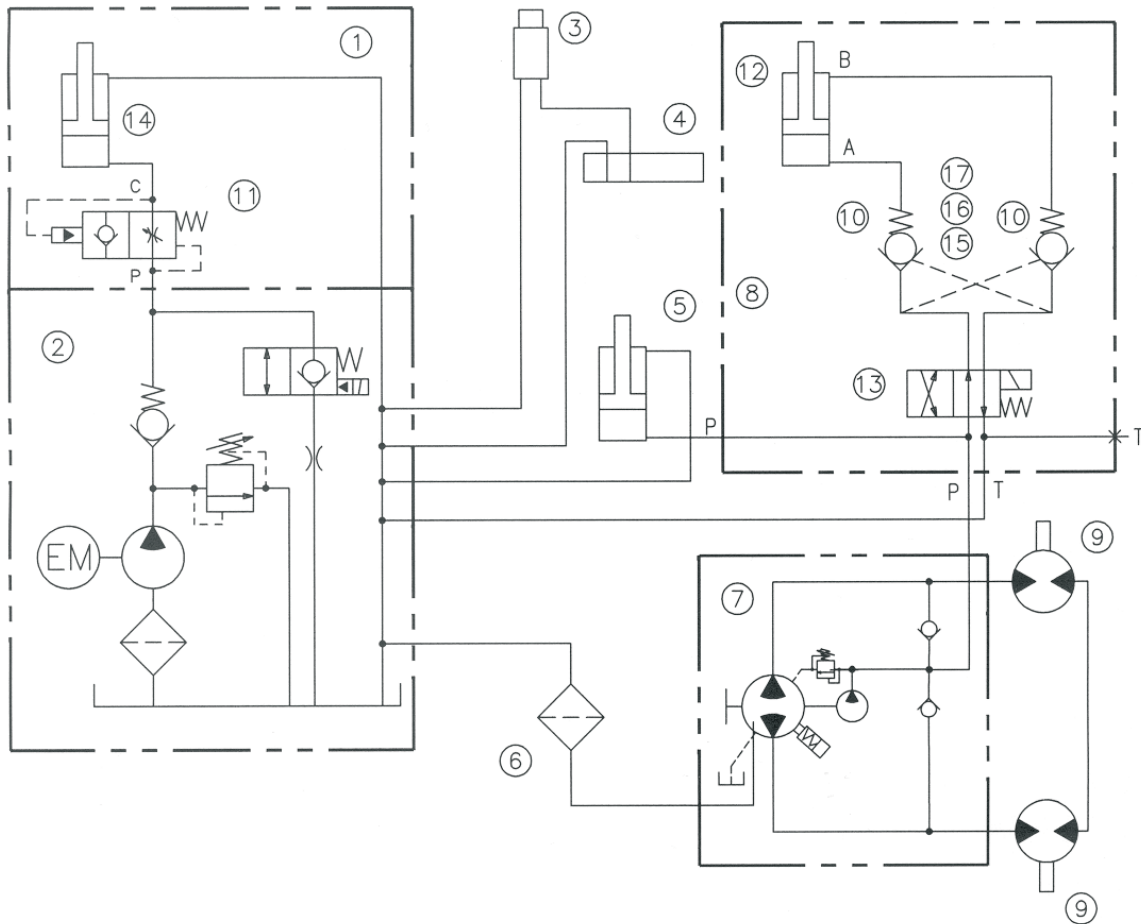

- |                                |                                |
|--------------------------------|--------------------------------|
| 1. Lift Cylinder Assembly      | 10. Check Valve (2)            |
| 2. Lift Pump                   | 11. Velocity Fuse              |
| 3. Reservoir                   | 12. Engine Pivot Cylinder 2.5" |
| 4. Blade Shaft Assembly        | 13. Valve 4W2P                 |
| 5. Brake Cylinder              | 14. Lift Cylinder              |
| 6. Spin-On Filter              | 15. Pilot Piston               |
| 7. Hydrostatic Pump            | 16. O-Ring                     |
| 8. Cylinder and Valve Assembly | 17. Backup (2)                 |
| 9. Wheel Motor                 |                                |

# OPERATION MANUAL

## HERE'S HOW TO GET HELP

PLEASE HAVE THE MODEL AND SERIAL  
NUMBER ON-HAND WHEN CALLING

### UNITED STATES

#### ***Multiquip Corporate Office***

18910 Wilmington Ave. Tel. (800) 421-1244  
Carson, CA 90746 Fax (800) 537-3927  
Contact: mq@multiquip.com

#### ***Mayco Parts***

800-306-2926 Fax: 800-672-7877  
310-537-3700 Fax: 310-637-3284

#### ***Service Department***

800-421-1244 Fax: 310-537-4259  
310-537-3700

#### ***MQ Parts Department***

800-427-1244 Fax: 800-672-7877  
310-537-3700 Fax: 310-637-3284

#### ***Warranty Department***

800-421-1244, Ext. 279 Fax: 310-537-1173  
310-537-3700, Ext. 279

#### ***Technical Assistance***

800-478-1244 Fax: 310-631-5032

### MEXICO

#### ***MQ Cipsa***

Carr. Fed. Mexico-Puebla KM 126.5 Tel: (52) 222-225-9900  
Momoxpan, Cholula, Puebla 72760 Mexico Fax: (52) 222-285-0420  
Contact: pmastretta@cipsa.com.mx

### UNITED KINGDOM

#### ***Multiquip (UK) Limited Head Office***

Hanover Mill, Fitzroy Street, Tel: 0161 339 2223  
Ashton-under-Lyne, Fax: 0161 339 3226  
Lancashire OL7 0TL  
Contact: sales@multiquip.co.uk

### CANADA

#### ***Multiquip***

4110 Industriel Boul. Tel: (450) 625-2244  
Laval, Quebec, Canada H7L 6V3 Fax: (450) 625-8664  
Contact: jmartin@multiquip.com

© COPYRIGHT 2009, MULTIQUIP INC.

Multiquip Inc and the MQ logo are registered trademarks of Multiquip Inc. and may not be used, reproduced, or altered without written permission. All other trademarks are the property of their respective owners and used with permission.

This manual MUST accompany the equipment at all times. This manual is considered a permanent part of the equipment and should remain with the unit if resold.

The information and specifications included in this publication were in effect at the time of approval for printing. Illustrations, descriptions, references and technical data contained in this manual are for guidance only and may not be considered as binding. Multiquip Inc. reserves the right to discontinue or change specifications, design or the information published in this publication at any time without notice and without incurring any obligations.

Your Local Dealer is:

