

PARTS MANUAL



MODEL GA3.6HR PORTABLE GENERATOR (HONDA GX240RT2EDN2 GASOLINE ENGINE)

REF. NO. A38742008040

Revision #3 (06/24/25)

To find the latest revision of this publication or associated operation manual, visit our website at: www.multiquip.com



THIS MANUAL MUST ACCOMPANY THE EQUIPMENT AT ALL TIMES.

GA3.6HR
60Hz Portable Generator

Explanation of Code in Remarks Column..... 4
Suggested Spare Parts 5

Component Drawings

Nameplate and Decals Assembly..... 6–7
Generator Assembly 8–9
Control Box Assembly 10–11
Pipe Frame Assembly..... 12–15
Muffler Assembly 16–17
Wheel Kit Assembly..... 18–19
Engine Service Parts 20–21

NOTICE

Specifications and part numbers are subject to change without notice.

NOTES

[illegible]

EXPLANATION OF CODE IN REMARKS COLUMN

The following section explains the different symbols and remarks used in the Parts section of this manual. Use the help numbers found on the back page of the manual if there are any questions.

NOTICE

The contents and part numbers listed in the parts section are subject to change without notice. Multiquip does not guarantee the availability of the parts listed.

SAMPLE PARTS LIST

NO.	PART NO.	PART NAME	QTY.	REMARKS
1	12345	BOLT	1	INCLUDES ITEMS W/%
2%		WASHER, 1/4 IN.		NOT SOLD SEPARATELY
2%	12347	WASHER, 3/8 IN. ...	1	MQ-45T ONLY
3	12348	HOSE	A/R	MAKE LOCALLY
4	12349	BEARING	1	S/N 2345B AND ABOVE

NO. Column

Unique Symbols — All items with same unique symbol (@, #, +, %, or >) in the number column belong to the same assembly or kit, which is indicated by a note in the “Remarks” column.

Duplicate Item Numbers — Duplicate numbers indicate multiple part numbers, which are in effect for the same general item, such as different size saw blade guards in use or a part that has been updated on newer versions of the same machine.

NOTICE

When ordering a part that has more than one item number listed, check the remarks column for help in determining the proper part to order.

PART NO. Column

Numbers Used — Part numbers can be indicated by a number, a blank entry, or TBD.

TBD (To Be Determined) is generally used to show a part that has not been assigned a formal part number at the time of publication.

A blank entry generally indicates that the item is not sold separately or is not sold by Multiquip. Other entries will be clarified in the “Remarks” Column.

QTY. Column

Numbers Used — Item quantity can be indicated by a number, a blank entry, or A/R.

A/R (As Required) is generally used for hoses or other parts that are sold in bulk and cut to length.

A blank entry generally indicates that the item is not sold separately. Other entries will be clarified in the “Remarks” Column.

REMARKS Column

Some of the most common notes found in the “Remarks” Column are listed below. Other additional notes needed to describe the item can also be shown.

Assembly/Kit — All items on the parts list with the same unique symbol will be included when this item is purchased.

Indicated by:

“INCLUDES ITEMS W/(unique symbol)”

Serial Number Break — Used to list an effective serial number range where a particular part is used.

Indicated by:

“S/N XXXXX AND BELOW”

“S/N XXXX AND ABOVE”

“S/N XXXX TO S/N XXX”

Specific Model Number Use — Indicates that the part is used only with the specific model number or model number variant listed. It can also be used to show a part is NOT used on a specific model or model number variant.

Indicated by:

“XXXXX ONLY”

“NOT USED ON XXXX”

“Make/Obtain Locally” — Indicates that the part can be purchased at any hardware shop or made out of available items. Examples include battery cables, shims, and certain washers and nuts.

“Not Sold Separately” — Indicates that an item cannot be purchased as a separate item and is either part of an assembly/kit that can be purchased, or is not available for sale through Multiquip.

SUGGESTED SPARE PARTS

GA3.6HR PORTABLE 60 HZ GENERATOR WITH HONDA GX240RT2EDN2 GASOLINE ENGINE

1 to 3 units

Qty.	P/N	Description
1.....	0430430120.....	CAP FUEL TANK
1.....	0641360030.....	FUEL STRAINER
1.....	16950ZB4015	FUEL COCK ASSEMBLY
3.....	16952KJ9752	SCREEN SET, FUEL COCK
2.....	7895419004.....	RUBBER SUSPENSION
2.....	1665419004.....	RUBBER SUSPENSION
3.....	9807955876.....	SPARK PLUG
1.....	35480ZF6003	OIL LEVEL SENSOR
2.....	28462ZE2W11	ROPE, RECOIL
3.....	17211899000.....	ELEMENT AIR CLEANER

NOTICE


Part numbers on this Suggested Spare Parts list may supersede/replace the part numbers shown in the following parts lists.



GA3.6HR — NAMEPLATE AND DECALS ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	A9521200104	DECAL: OPERATING INSTRUCTIONS	1.....	A92120010
2	A9504000014	DECAL: WARNING DANGEROUS GAS	1.....	A90400001
3		DECAL: NAMEPLATE	1.....	CONTACT MQ PARTS DEPT.
4	920214100	DECAL: WARNING START FIRES.....	1.....	REPLACES P/N M9504200004 M90420000
5	D9531100104	DECAL: DANGER ELECTROCUTION.....	1.....	D93110010
6	0800628504	DECAL: GROUND	1.....	S1123
7	A9511100103	DECAL: WARNING.....	1.....	S/N 5750042 AND BELOW A91110010
7	A9511100113	DECAL: WARNING.....	1.....	S/N 5750043 AND ABOVE A91110011
8	1980680004	DECAL: FUEL COCK.....	1.....	S3704
9	A3551000104	DECAL: HANDLE OPERATION	1.....	S/N 5770768 AND BELOW A35100010
9	A3551000114	DECAL: HANDLE OPERATION	1.....	S/N 5770769 AND ABOVE A35100011
10	87533ZC0630	DECAL: AIR CLEANER	1.....	REPLACES P/N 0600500045
11	A3561000503	DECAL: MQ POWER GA3.6H	1	
12	A3511201202	DECAL: CONTROL PANEL	1.....	A31120120
13	87528898620	DECAL: CHOKE	1.....	REPLACES P/N 0600500047
14	A9511101304	DECAL: WARNING PROPOSITION 65.....		S/N 5820835 AND ABOVE A91110130
15	A9511101504	DECAL: CAUTION.....	1.....	S/N 5845351 AND ABOVE A91110150
16	A5551003004	DECAL: CO SENSOR	1.....	S/N 50001176 AND ABOVE A55100300A
17	A9511101904	DECAL: EQUIPPED WITH CO SENSOR.....	1.....	S/N 50001176 AND ABOVE A91110190


GA3.6HR — GENERATOR ASSY.

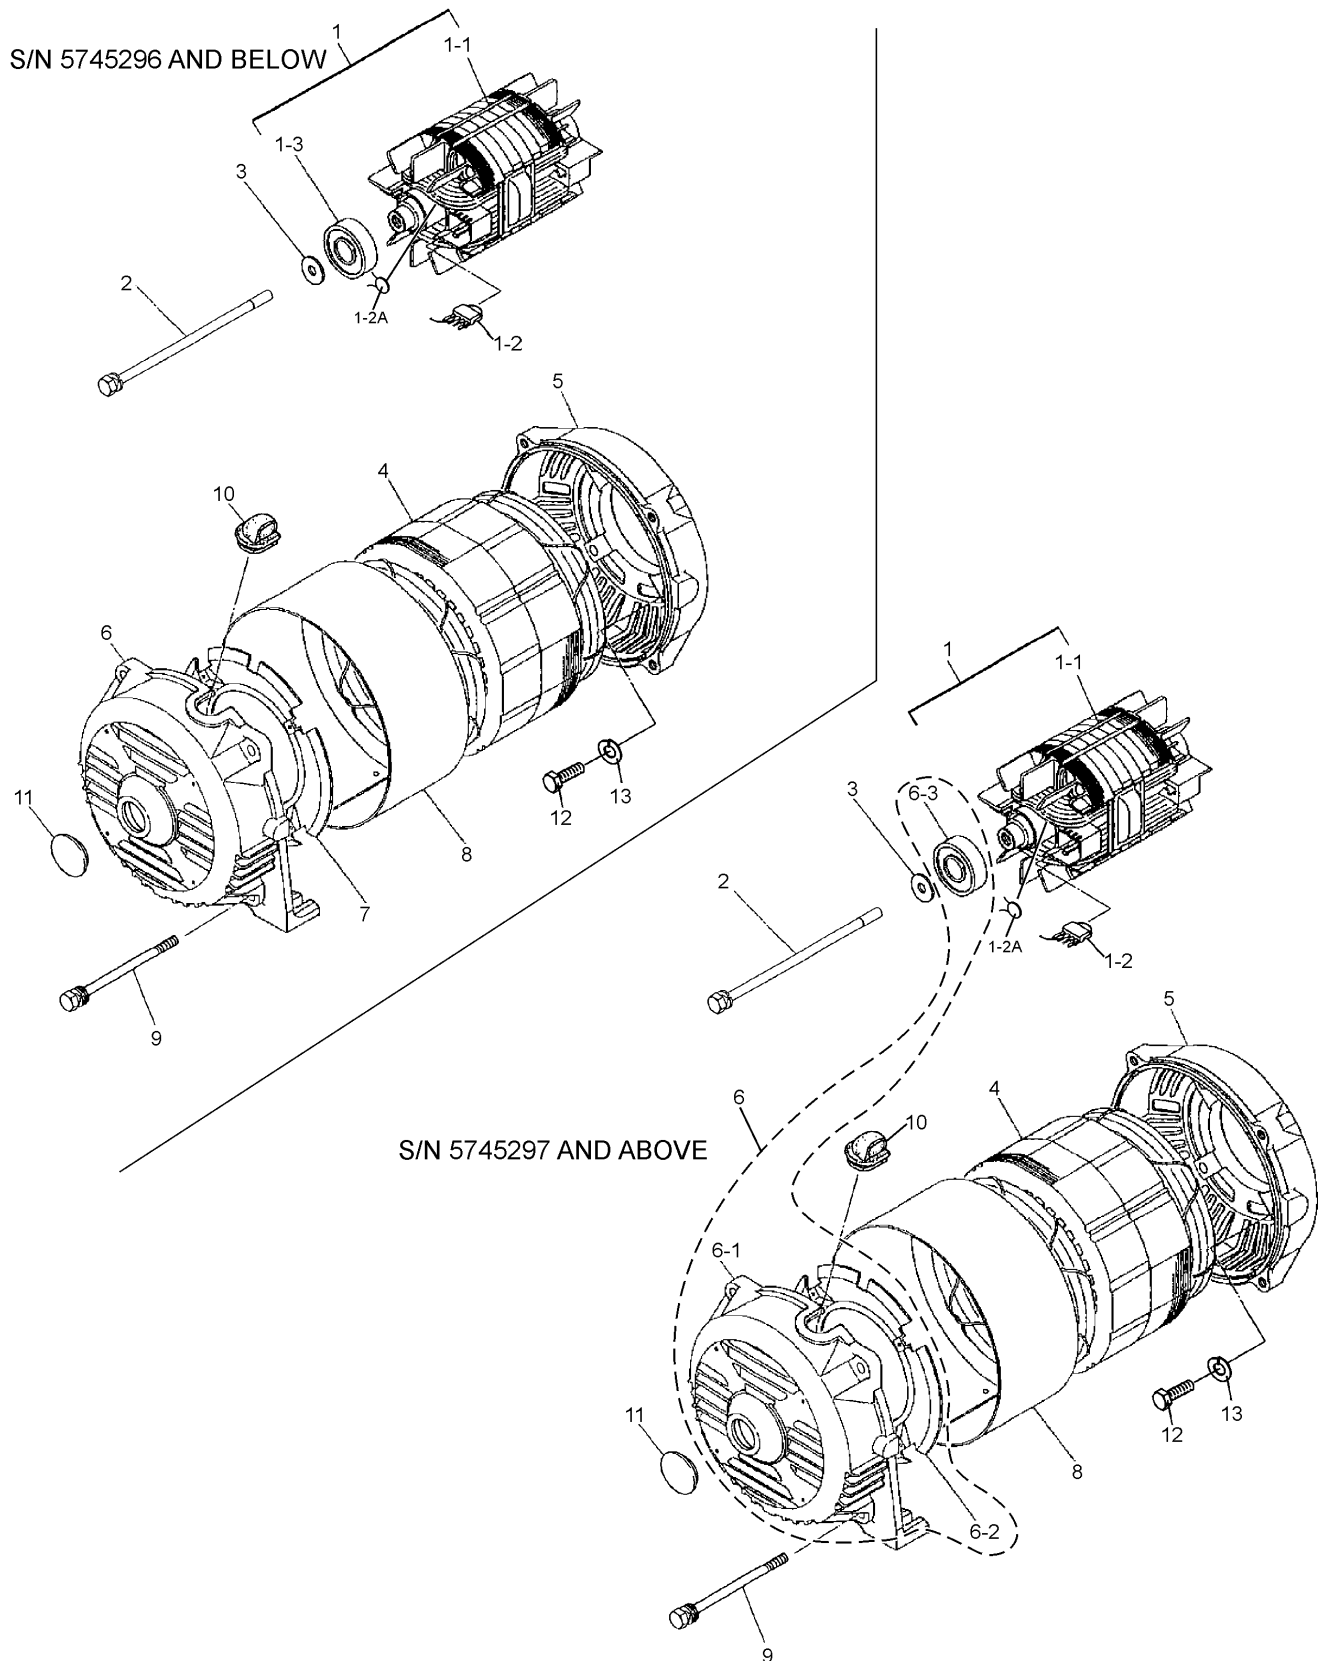

GA3.6HR — GENERATOR ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	7911002003	ROTOR ASSEMBLY.....	1.....	INCLUDES ITEMS W/\$
1-1\$		FIELD ASSEMBLY.	1	
1-2\$	0601823213	RECTIFIER	2	
1-2A\$	0601822638	SURGE ABSORBER	2.....	S/N 5845350 AND BELOW
1-2A\$	Y0601822692	SURGE ABSORBER	2.....	S/N 5845351 AND ABOVE
1-3\$	0071706304	BEARING.....	1.....	S/N 5745296 AND BELOW
2	7911017004	SET BOLT, ROTOR	1	
3	0801086104	SET WASHER, BEARING	1	
4	A3135000003	ARMATURE ASSEMBLY.	1	
5	7901315502	END BRACKET	1	
6	W7871315022D	END BRACKET	1.....	S/N 5745296 AND BELOW REPLACES P/N 7871315022
6	A3154000003	END BRACKET ASSEMBLY.....	1.....	S/N 5745297 AND ABOVE INCLUDES ITEMS W/#
6-1#	W7871315022D	END BRACKET		S/N 5745297 AND ABOVE REPLACES P/N 7871315022
6-2#	7875021523	GUIDE PANEL, AIR	1.....	S/N 5745297 AND ABOVE
6-3#	0071706304	BEARING.....	1.....	S/N 5745297 AND ABOVE
7	7875021523	GUIDE PANEL, AIR	1.....	S/N 5745296 AND BELOW
8	7661331003	COVER	1	
9	7911316004	SET BOLT, STATOR	4	
10	7871329514	GROMMET	1	
11	0601851760	CAP	1	
12	0013608020	HEX. HEAD BOLT	4	
13	0040008000	WASHER, LOCK	4	


GA3.6HR — CONTROL BOX ASSY.

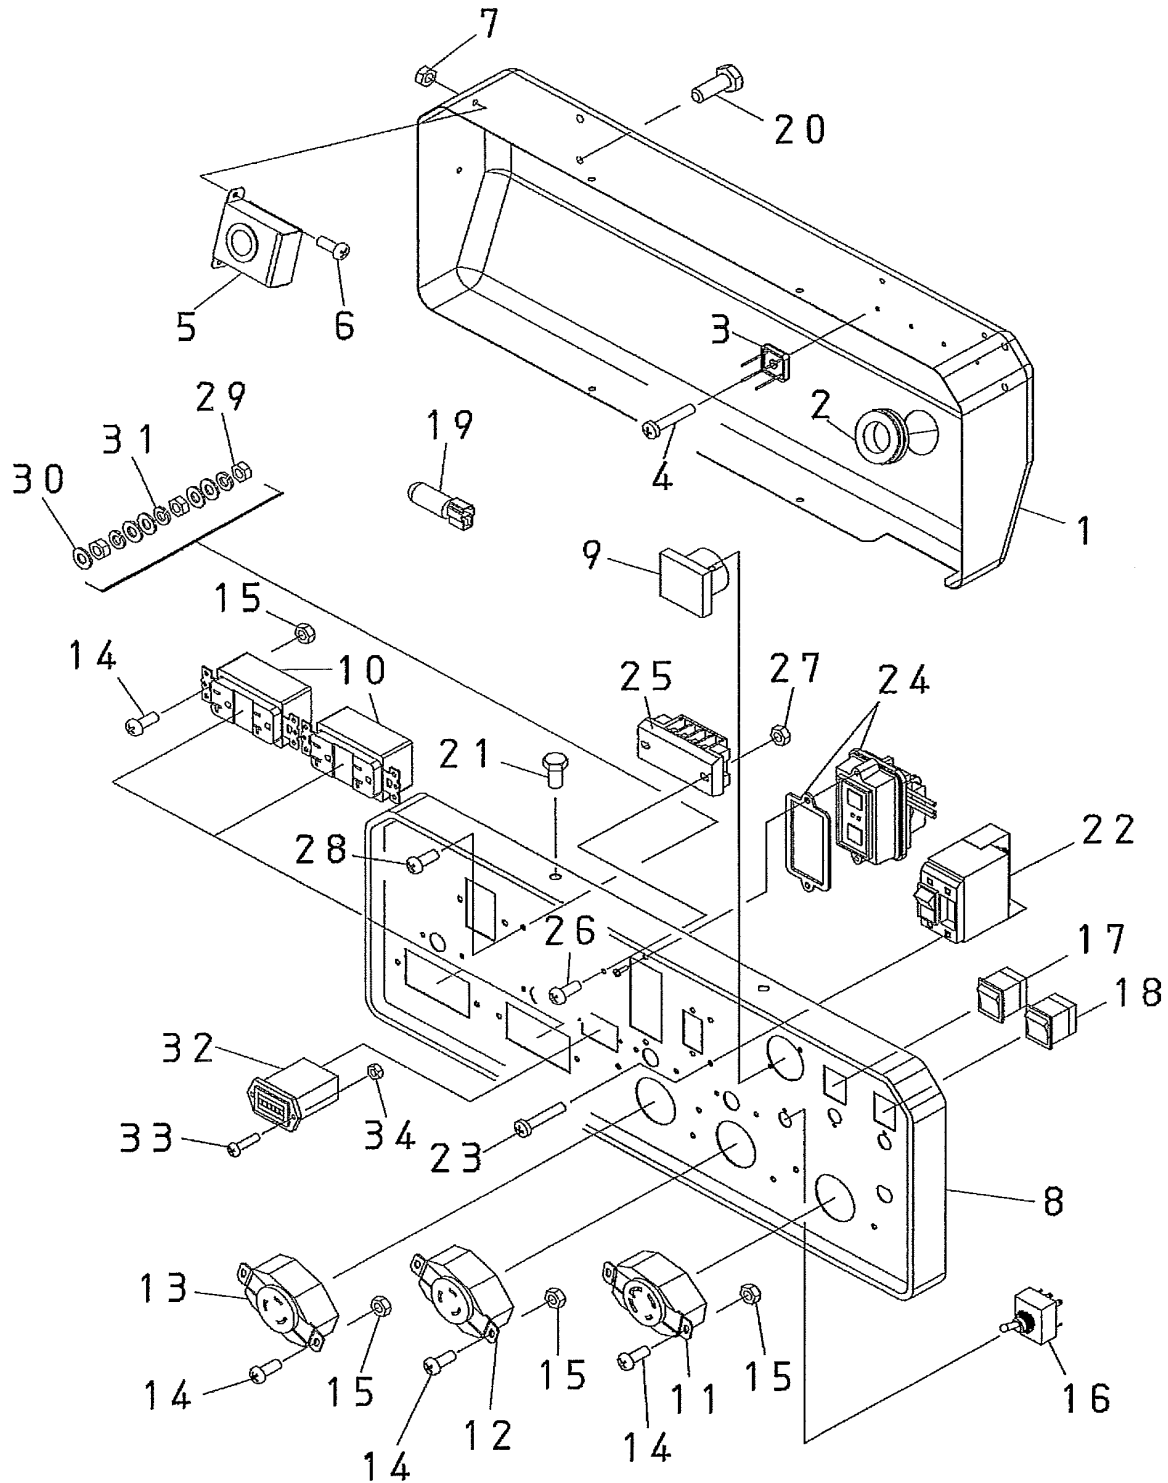

GA3.6HR — CONTROL BOX ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	A3214000403	CONTROL BOX	1	
2	0601850102	GROMMET	1	
3	0601823204	RECTIFIER	2	
4	0027103012	MACHINE SCREW	2	
5	0601823853	SLOW DOWN UNIT	1	
6	0027104010	MACHINE SCREW	2	
7	OEMAA8	HEX. NUT	2	REPLACES P/N 0207004000
8	A3224000703	CONTROL PANEL	1	
9	0601806819	AC VOLTMETER, 0~120 240V	1	
10	0601814065	RECEPTACLE, 5-20R (CON 1, 2)	2	
11	0601814010	RECEPTACLE, L14-20R (CON 5)	1	
12	0601811031	RECEPTACLE, L5-30R (CON 4)	1	REPLACES P/N 0601811035
13	0601812592	RECEPTACLE, L5-20R (CON 3)	1	
14	0021004010	MACHINE SCREW	10	
15	OEMAA8	HEX. NUT	10	REPLACES P/N 0207004000
16	0601830737	FULL POWER SWITCH	1	
17	0601831620	IDLE CONTROL SWITCH	1	
18	0601831620	OPERATION SWITCH	1	
19	A3262800004	CONDENSER ASSEMBLY, 50V 1000μF	1	
20	0011106015	HEX. HEAD BOLT.....	4	REPLACES P/N 0017106015
21	0017105010	HEX. HEAD BOLT	4	
22	0601872300	CIRCUIT BREAKER, 120V 15A 2P	1	
23	0021003005	MACHINE SCREW	4	
24	0601829301	EARTH LEAKAGE RELAY, 120V.....	1	S/N 5909090 AND BELOW
24	Y0601829302	EARTH LEAKAGE RELAY, 120V.....	1	S/N 5909091 AND ABOVE
25	Y0601815779	TERMINAL BOARD	1	
26	0021004020	MACHINE SCREW	2	
27	OEMAA8	HEX. NUT	2	REPLACES P/N 0207004000
28	0021004025	MACHINE SCREW	1	
29	OEMAA8	HEX. NUT	3	REPLACES P/N 0030004000
30	58042	WASHER, FLAT	5	REPLACES P/N 0041204000
31	0040004000	WASHER, LOCK	3	
32	0601800699	HOUR METER	1	
33	0021003012	HEX. HEAD BOLT	2	
34	0207003000	HEX. NUT	2	


GA3.6HR — PIPE FRAME ASSY.

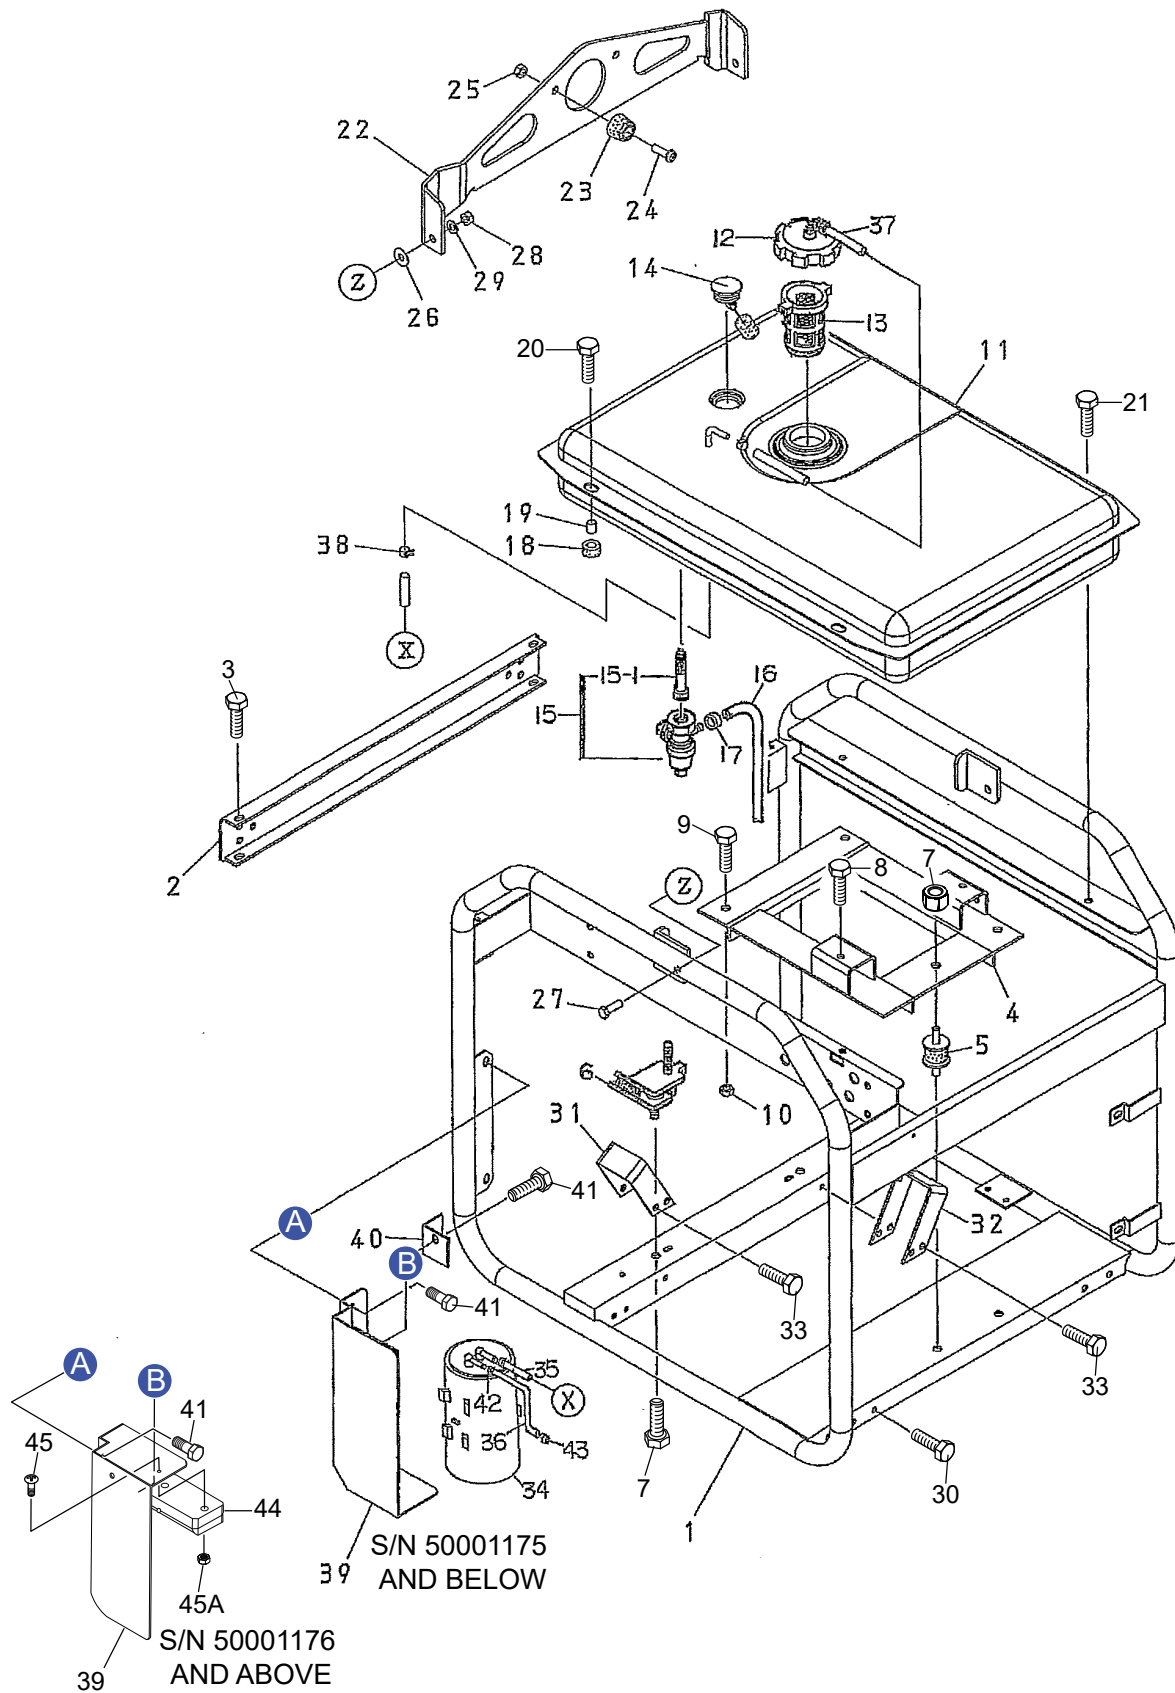

GA3.6HR — PIPE FRAME ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	A3417000502	PIPE FRAME	1.....	S/N 5770768 AND BELOW
1	A3417000512	PIPE FRAME	1.....	S/N 5770769 AND ABOVE
2	A3417100204A	BRACKET	1.....	S/N 5770768 AND BELOW
2	A3417100304	BRACKET	1.....	S/N 5770769 AND ABOVE
3	Y0341206015	HEX. HEAD BOLT	4	
4	7915443003	BASE	1	
5	7895419004	RUBBER SUSPENSION	2	
6	1665419004	RUBBER SUSPENSION	2.....	REPLACES P/N 1725419214
7	020108060	HEX. NUT	8.....	REPLACES P/N 0207008000
8	0017108030	HEX. HEAD BOLT	2	
9	0017108040	HEX. HEAD BOLT	2	
10	Y0207008000	HEX. NUT	2	
11	A3361000004	FUEL TANK.....	1.....	S/N 5870441 AND BELOW
11	A3361000014	FUEL TANK.....	1.....	S/N 5870442 AND ABOVE
12	0430430120	CAP, FUEL TANK.....	1.....	REPLACES P/N 0605505068 S/N 5863825 AND BELOW
12	A2361000304	CAP, FUEL TANK.....	1.....	S/N 5863826 AND ABOVE
13	0641360030	FUEL STRAINER.....	1.....	REPLACES P/N 0605505162
14	0602125034	FUEL GAUGE	1	
15	16950ZB4015	FUEL COCK ASSEMBLY.....	1.....	INCLUDES ITEMS W/# REPLACES P/N 0605510068
15-1#	16952KJ9752	SCREEN SET	1.....	REPLACES P/N 16952ZB4005
16	91424ZBH832	HOSE	1	
17	950024080008	HOSE BAND.....	2.....	REPLACES P/N Y0605515251
18	7855525514	RUBBER CUSHION	2	
19	7855525604	COLLAR	2	
20	011208030	HEX. HEAD BOLT.....	2.....	REPLACES P/N 0017108030
21	011008020	HEX. HEAD BOLT.....	2.....	REPLACES P/N 0017108020
22	A9117200103	HANGER	1	
23	0601850097	STOPPER	1	
24	011208025	MACHINE SCREW	1.....	REPLACES P/N 0021008025
25	020108060	HEX. NUT	1.....	REPLACES P/N 0207008000
26	0601851116	PLASTIC WASHER	2	
27	011208025	HEX. HEAD BOLT.....	2.....	REPLACES P/N 0011308025
28	0207608000	HEX. NUT	2	
29	0042108000	WASHER, FLAT	2	
30	0019206015	HEX. HEAD BOLT	1	


GA3.6HR — PIPE FRAME ASSY. (CONT'D.)

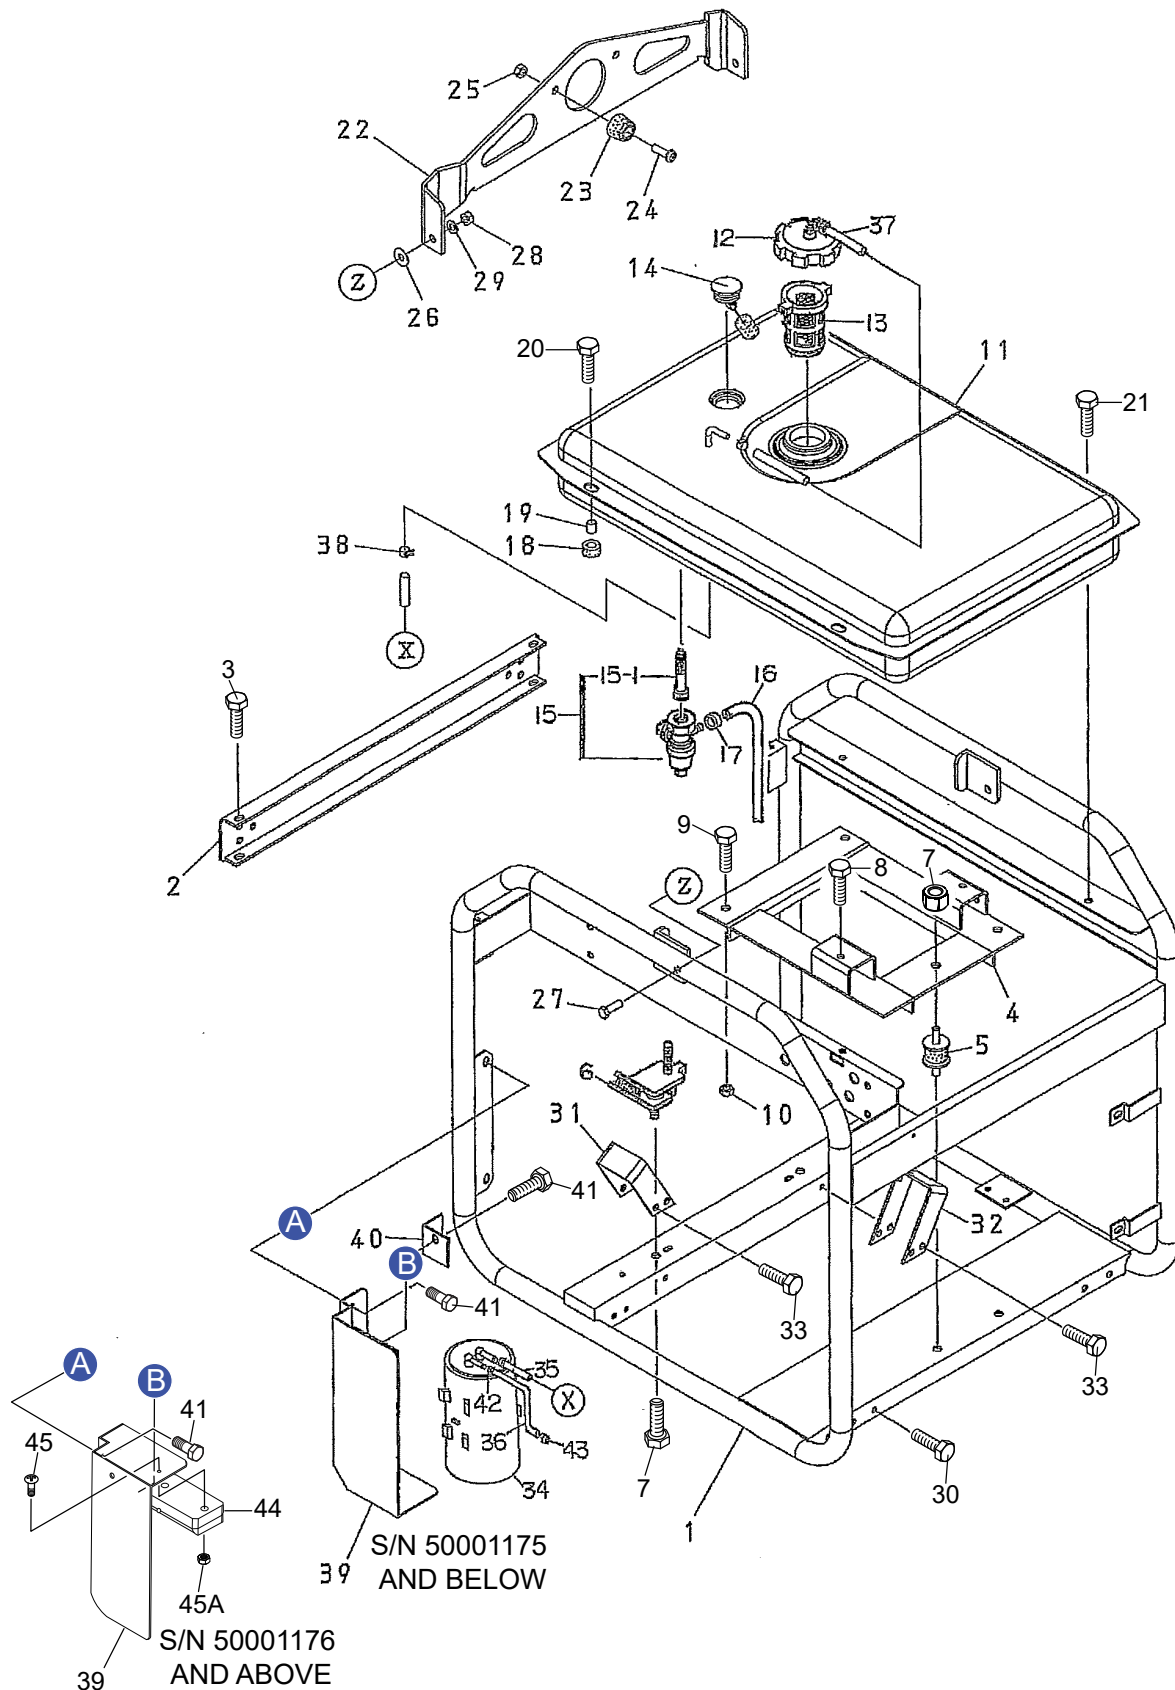

GA3.6HR — PIPE FRAME ASSY. (CONT'D.)

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
31	7915455103	COVER	1	
32	7855455003	COVER	1	
33	011106015	HEX. HEAD BOLT.....	6.....	REPLACES P/N 0017106015
34	0605507002	CANISTER.....	1.....	S/N 5752126 AND BELOW
34	0605507005	CANISTER.....	1.....	S/N 5752127 ~ 5863825
34	0605507010	CANISTER.....	1.....	S/N 5863826 AND ABOVE
35	0605513202	HOSE	1	
36	Y0605513210	HOSE	1	
37	0605513189	HOSE.....	1.....	S/N 5814093 AND BELOW
37	Y0605513219	HOSE.....	1.....	S/N 5814094 AND ABOVE
38	0605515223	HOSE BAND.....	2.....	S/N 5814093 AND BELOW
38	0605515223	HOSE BAND.....	4.....	S/N 5814094 AND ABOVE
39	A3261600103	BRACKET	1.....	S/N 50001175 AND BELOW
39	A5484500103	BRACKET	1.....	S/N 50001176 AND ABOVE
40	A3261600204	STOPPER	1	
41	011106015	HEX. HEAD BOLT.....	3.....	REPLACES P/N 0016906015
42	0605515170	HOSE BAND	1	
43	Y0605515229	HOSE BAND	1	
44	0602211802	CO SENSOR	1.....	S/N 50001176 AND ABOVE
45	0027103035	MACHINE SCREW.....	2.....	S/N 50001176 AND ABOVE
45A	0038403000	HEX. NUT	2.....	S/N 50001176 AND ABOVE

GA3.6HR — MUFFLER ASSY.

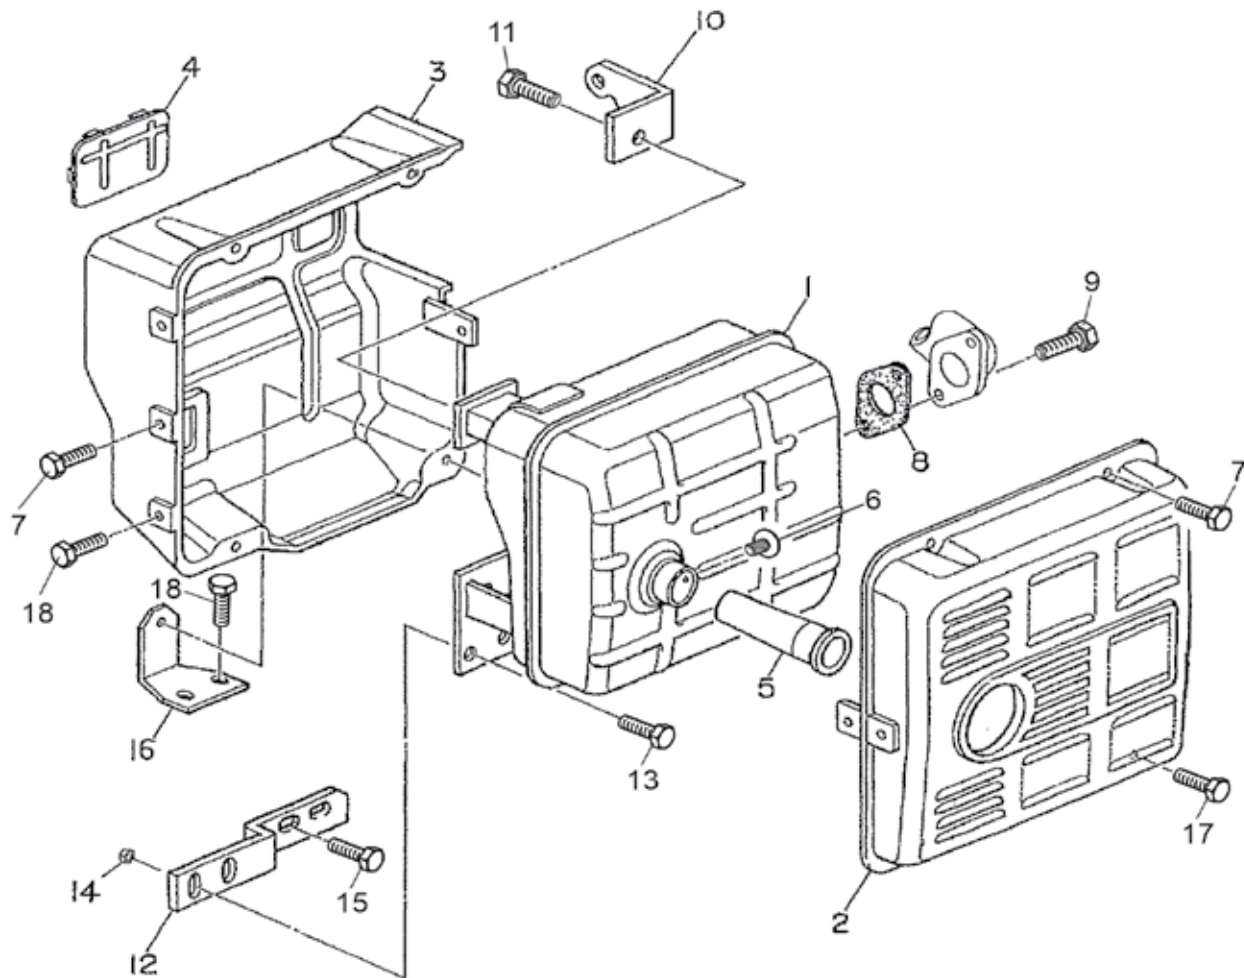

GA3.6HR — MUFFLER ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	7912310003	MUFFLER	1.....	S/N 5873745 AND BELOW
1	W7912310013	MUFFLER	1.....	S/N 5873746 AND ABOVE
2	18320ZB4000	PROTECTOR	1	
3	18325ZB4000	PROTECTOR	1	
4	18329ZB4000	SEAL	2	
5	18355ZB4630	ARRESTOR, SPARK	1	
6	90002ZE2U91	TAPPING SCREW	1	
7	0105050616	HEX. HEAD BOLT.....	5.....	REPLACES P/N 0017106012
8	18333ZB4801	GASKET	1	
9	957010802000	HEX. HEAD BOLT.....	2.....	REPLACES P/N Y0602322010
10	7915461004	BRACKET	1	
11	011008020	HEX. HEAD BOLT.....	1.....	REPLACES P/N 0017108020
12	7915460004	BRACKET	1	
13	0017108025	HEX. HEAD BOLT.....	2.....	REPLACES P/N 0017108025
14	020108060	HEX. NUT	2.....	REPLACES P/N 0207008000
15	011008020	HEX. HEAD BOLT.....	2.....	REPLACES P/N 0017108020
16	7915469004	BRACKET	1	
17	011206020	HEX. HEAD BOLT.....	1.....	REPLACES P/N 0017106020
18	0105050616	HEX. HEAD BOLT.....	4.....	REPLACES P/N 0017106012

This diagram illustrates the assembly of a metal frame, likely for a vehicle or industrial equipment. The main frame structure is shown in the center, with various components and fasteners labeled with numbers and serial number ranges. The components are as follows:


- 1**: A long horizontal bar or tube.
- 2**: A wheel or tire assembly.
- 3**: A small circular component, possibly a cap or seal.
- 3A**: A small pin or fastener.
- 4**: A small rectangular plate or bracket.
- 5**: A small rectangular plate or bracket.
- 6**: A small rectangular plate or bracket.
- 6A**: A small rectangular plate or bracket.
- 7**: A small rectangular plate or bracket.
- 7A**: A small rectangular plate or bracket.
- 8**: A small rectangular plate or bracket.
- 9**: A long horizontal bar or tube.
- 9A**: A long horizontal bar or tube.
- 10**: A long horizontal bar or tube.
- 11**: A small rectangular plate or bracket.
- 11A**: A small rectangular plate or bracket.
- 12**: A small rectangular plate or bracket.
- 13**: A small rectangular plate or bracket.
- 14**: A small rectangular plate or bracket.
- 15**: A small rectangular plate or bracket.
- 15A**: A small rectangular plate or bracket.
- 16**: A small rectangular plate or bracket.
- 17**: A small rectangular plate or bracket.
- 18**: A small rectangular plate or bracket.
- 19**: A small rectangular plate or bracket.

The serial number ranges for the components are:

- S/N 57700769 AND ABOVE**: Components 3, 3A, 4, 5, 6, 6A, 7, 7A, 8, 9, 10, 11, 11A, 12, 13, 14, 15, 15A, 16, 17, 18, 19.
- S/N 57700768 AND BELOW**: Components 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19.

GA3.6HR — WHEEL KIT ASSY.

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	A3417400303	AXLE.....	1.....	S/N 5770768 AND BELOW
1	A3417400313	AXLE.....	1.....	S/N 5770769 AND ABOVE
2	Y0605802053	TIRE ASSEMBLY	2	
3	Y0080000020	SNAP RING.....	2.....	S/N 5770768 AND BELOW
3	0050004035	COTTER PIN.....	2.....	S/N 5770769 AND ABOVE
4	A3417400404	BRACKET.....	2.....	S/N 5770768 AND BELOW
5	011008020	HEX. HEAD BOLT.....	8.....	S/N 5770768 AND BELOW REPLACES P/N 0016908020
6	L0120236304	BRACKET, BRAKE SHAFT.....	4.....	S/N 5770768 AND BELOW
6A	A3417401804	BRACKET, BRAKE SHAFT.....	2.....	S/N 5770769 AND ABOVE
7	011008020	HEX. HEAD BOLT.....	8.....	S/N 5770768 AND BELOW REPLACES P/N 0016908020
7	011008020	HEX. HEAD BOLT.....	4.....	S/N 5770769 AND ABOVE REPLACES P/N 0016908020
8	W0805003103	GRIP	2	
9	A3417400704	HANDLE.....	1.....	S/N 5770768 AND BELOW
9	A3417401504	HANDLE.....	2.....	S/N 5770769 AND ABOVE
10	A3417400804	HANDLE.....	1.....	S/N 5770768 AND BELOW
11	A3417401304	BRACKET, HANDLE.....	1.....	S/N 5770768 AND BELOW
11	A3417401604	BRACKET, HANDLE.....	2.....	S/N 5770769 AND ABOVE
12	A3417401404	BRACKET, HANDLE.....	1.....	S/N 5770768 AND BELOW
13	0601851116	WASHER	4	
14	0012308020	HEX. HEAD BOLT.....	6.....	S/N 5770768 AND BELOW
14	0012308020	HEX. HEAD BOLT.....	8.....	S/N 5770769 AND ABOVE
15	0010108025	HEX. HEAD BOLT.....	2.....	S/N 5770768 AND BELOW
15	0010108050	HEX. HEAD BOLT.....	2.....	S/N 5770769 AND ABOVE
16	0207608000	U-NUT	2	
17	0401450080	WASHER, FLAT.....	2.....	S/N 5770768 AND BELOW REPLACES P/N 0041208000
17	0401450080	WASHER, FLAT.....	4.....	S/N 5770769 AND ABOVE REPLACES P/N 0041208000
18	A3417400904	STAND	2	
19	0016906015	HEX. HEAD BOLT	8	

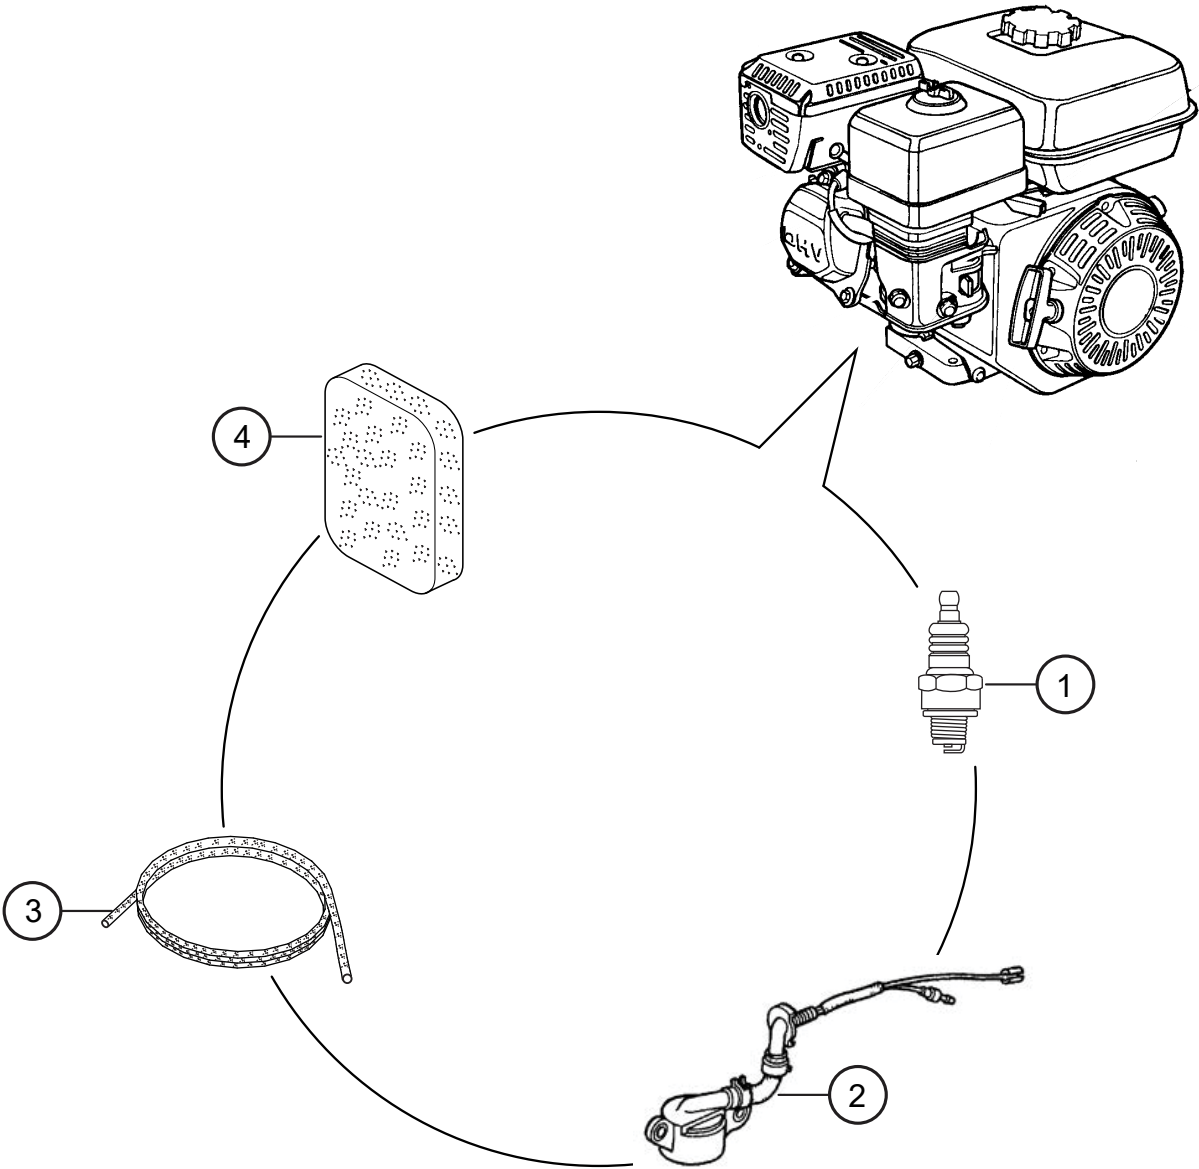

ENGINE SERVICE PARTS

<u>NO.</u>	<u>PART NO.</u>	<u>PART NAME</u>	<u>QTY.</u>	<u>REMARKS</u>
1	9807955876	SPARK PLUG	1	
2	35480ZF6003	OIL LEVEL SENSOR	1	
3	28462ZE2W11	ROPE, RECOIL	1	
4	17211899000	ELEMENT AIR CLEANER	1	

PARTS MANUAL

HERE'S HOW TO GET HELP

PLEASE HAVE THE MODEL AND SERIAL
NUMBER ON HAND WHEN CALLING

UNITED STATES

Multiquip Inc.

(310) 537- 3700
6141 Katella Avenue Suite 200
Cypress, CA 90630
E-MAIL: mq@multiquip.com
WEBSITE: www.multiquip.com

CANADA

Multiquip

(450) 625-2244
4110 Industriel Boul.
Laval, Quebec, Canada H7L 6V3
E-MAIL: infocanada@multiquip.com

UNITED KINGDOM

Multiquip (UK) Limited Head Office

0161 339 2223
Unit 2, Northpoint Industrial Estate, Globe Lane,
Dukinfield, Cheshire SK16 4UJ
E-MAIL: sales@multiquip.co.uk

© COPYRIGHT 2025, MULTIQUIP INC.

Multiquip Inc., the MQ logo and the MQ Power logo are registered trademarks of Multiquip Inc. and may not be used, reproduced, or altered without written permission. All other trademarks are the property of their respective owners and used with permission.

This manual MUST accompany the equipment at all times. This manual is considered a permanent part of the equipment and should remain with the unit if resold.

The information and specifications included in this publication were in effect at the time of approval for printing. Illustrations, descriptions, references and technical data contained in this manual are for guidance only and may not be considered as binding. Multiquip Inc. reserves the right to discontinue or change specifications, design or the information published in this publication at any time without notice and without incurring any obligations.

Manufactured for
MQ Power Inc.
by
DENYO MANUFACTURING CORP.

