



**Service Bulletin No.** LT20060329  
**Subject:** Torque Limiter  
**Model:** LT-12D  
**Product Group:** Light Tower/Generator  
**Date:** January 06, 2006

**SERVICE BULLETIN**

Group: LT

**Mandatory**
                 
  **Information**
                 
  **Recommended Change**

**Series/Parts Affected:**

**Machines Affected:**  
**LT-12D S/N 902141-902913**

**SERVICE INFORMATION**

**MANDATORY UPDATE: FAILURE TO FOLLOW INSTRUCTIONS MAY LEAD TO SEVERE UNIT DAMAGE!**

**Problem:**

- Engine mounts are moving causing **severe damage!** to the engine/generator.

**Solution:**

- Install a Torque Limiter Kit to stabilize the engine/generator

**PARTS INFORMATION**

Item #	Qty.	Part #	Description	Remarks
9	1	29884	Torque Limiter Kit	See Figure 1

## INSTALLATION INSTRUCTIONS

### **WORK SAFELY!**

This installation should be performed only by a qualified technician following safe and approved procedures.

Begin by locating the light tower in an open work area free of any obstructions and overhead power lines. Make certain the light tower is on level ground and lower each of the stabilization jacks to prevent tipping.



1. Open the Torque Limiter Kit (item 9, P/N 29884) and verify that all parts are accounted for. See Table 1 below.

<b>Item #</b>	<b>Qty.</b>	<b>Part #</b>	<b>Description</b>
1	1	0161 C	Washer, Lock 5/16" MED.
2	1	0166 A	Washer, Lock 3/8" MED
3	1	1456	Nut, Hex Finish 3/8"-16
4	1	2299	Screw, HHC M8-125 x 16 mm
5	2	4001	Washer, Flat USS 3/8" PLD
6	1	10133	Nut, Nylock 3/8"-16
7	1	29649	Mount, Vibration Korfund RB1-200
8	1	29883	Torque Rod


2. Open the cabinet door on the air cleaner side of the unit.
3. Using the dimensions as specified on the **template**, mark the engine mounting plate for a 3/4-inch diameter hole (Figure 1).
4. Using an electric drill and 3/4-inch drill bit, drill a 3/4-inch hole into the engine mounting plate as shown in Figure 1.
5. Once the hole has been drilled, insert the torque limiter rod (item 8,), 3/8"-16 Hex Nut and associated hardware (items 2, 3, 5 and 7) as shown in Figure 1.
6. Tighten item 3 (3/8" Hex Nut) and item 6 (3/8" Nyloc Nut) securely.
7. Insert item 4 (HHC Screw M8-125 x 16 mm) and item 1 (5/16" Lock Washer) through the eyelet on the torque limiter rod.
8. Secure items 1 and 4 to the engine (use pre-existing threaded hole) as shown in Figure 1.
9. Clean-up any drill shavings that might have accumulated during drilling.
10. Close cabinet doors.




THE ENGINE MOUNTING PLATE IS ALREADY INSTALLED. USE THE ENGINE MOUNTING TEMPLATE AS A GUIDE WHEN DRILLING THE 3/4-INCH HOLE.

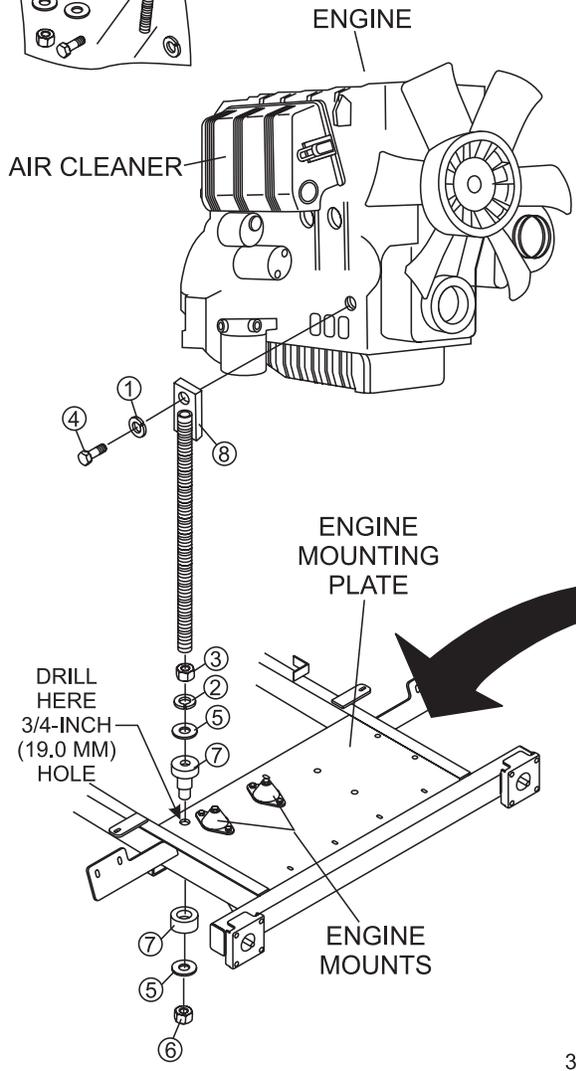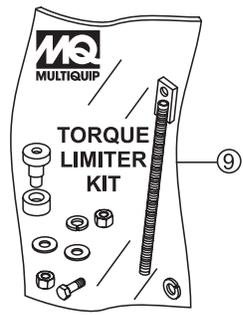

### REQUIRED TOOLS

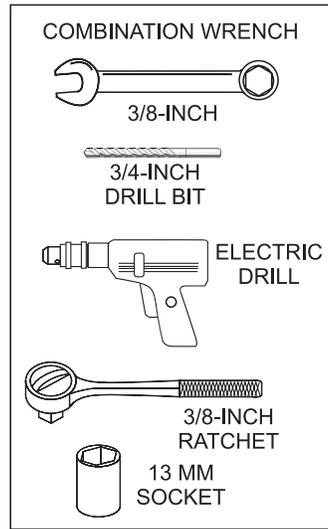

### HOLE PATTERN LAYOUT

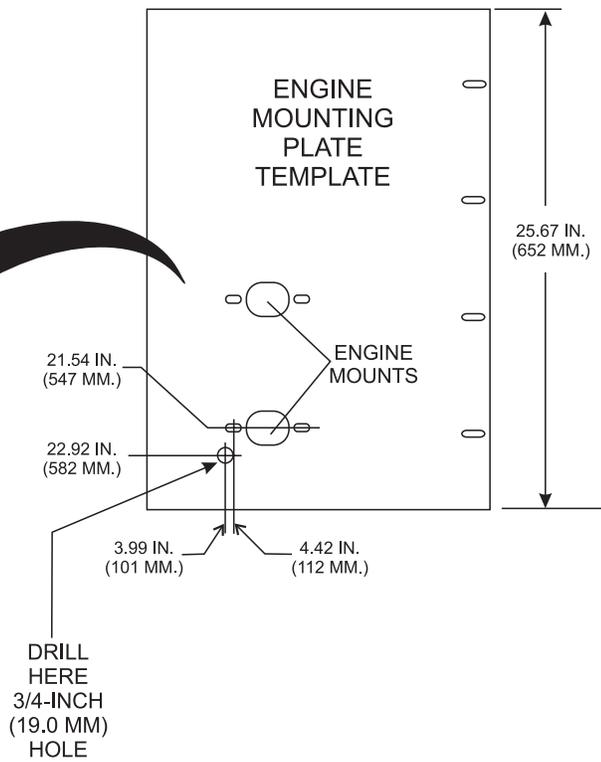

**Figure 1. Torque Limiter Installation Diagram**

## **WARRANTY INFORMATION**

### **Campaign Reference No. 20060329**

Please contact Chris Fairchild @ 1-800-421-1244 for warranty claim number and warranty form.

**Labor Allowance: Flat Rate to install – 30 minutes**